



ASSEMBLY INSTRUCTIONS

Item NO:DEV-001、002、003

1. Carefully remove all parts from box and remove all plastic covering from lamp parts.
2. Place the lamp Base(A) on the table.
3. Attached the Harp(B) on the socket.
4. Place the Shade(C) on the Harp (B) and tighten it with the Finial(D)

CAUTION: TO REDUCE RISK OF FIRE.

USE **MAX** 3-WAY 100-WATT TYPE A LAMP

OR USE **MAXIMUM** 23-WATT SELF-

BALLASTED LAMP OR LAMP ADAPTER

120V 60Hz AC ONLY. MADE IN CHINA E346902

ATTENTION: AFIN DE RÉDUIRE LE RISQUE D'INCENDIE.

UTILISER UNE **MAX** AMPOULE TYPE A DE 3-100 WATTS

OU UTILISER UNE **MAXIMUM** 23 WATT

AUTOBALLASTÉE LAMPE OU LAMPE ADAPTAT

120V 60Hz AC SEULEMENT FABRIQUE EN CHINE E346

CAUTION: IMPORTANT SAFETY INSTRUCTIONS

This portable lamp has a polarized plug (one blade is wider than the other), as a feature to reduce the risk of electric shock, this plug will fit in a polarized outlet only one way, if the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not alter the plug.

MADE IN CHINA

Please read carefully the following precautions before using this lamp:

- .When unpacking and assembling, be careful not to pull wire with full strength, as an incorrect connection could result.
- .Only use the bulb and wattage specified in this instructions or on the label located on the socket.
- .Do not attempt to replace bulb while the lamp is plugged into an electrical outlet.
- .Do not use outdoors, or near water or other liquids.
- .Unplug from outlet before removal of any parts and cleaning.

.Only use soft cloth for cleaning. Do not use any chemical or abrasive cleaners.

.Remove the cellophane cover from shade before use.

.During shipment, the socket cover may have become loose. Before inserting bulb, check to see that the socket cover is in place.