

## ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life



REVISION 0 : 06/18/2024

PAGE 1 OF 2

COASTERFURNITURE.COM

## ITEM: 202443



ANTI-TIPPING INSTALLATION INSTRUCTIONS

## FURNITURE TIPPING RESTRAINT

## WARNING

Injury may result from tipping furniture. This restraint may protect against tipping furniture. Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.

- 1. Attach one of the mounting brackets securely to the back edge of the unit, using the short screw.
- 2. Determine where the unit is to be placed, and mark the location on the wall for the other mounting bracket. The bracket on the wall needs to be approximately 2" below the bracket mounted to the edge of the unit.
- 3. Drill a hole in the wall. Insert the plastic wall anchor into the hole and if necessary, use a small block of wood and hammer to tap it in so that it's flush with the wall.
- 4. Attach the bracket over the plastic wall anchor using the long screw.
- 5. Place the unit against the wall, both brackets need to be facing each other.
- 6. Lace an end of the restraint strap through the hole in each bracket. Bring both ends together and rotate the thumb nut onto the threaded end until tight.
- 7. Ensure that the restraint strap is securely laced and locked.



