

TURNTABLE REPACKING GUIDE (v 3)

1 REMOVE THE FOLLOWING ITEMS:

- Platter belt
- Cables

2 MAKE SURE ALL ACCESSORIES ARE IN FOAM TOP


Platter belt, RCA cable, power supply, power cable, manual and accessories tubes

❗ Please use all of the original packaging


❗ Wrap turntable body with supplied plastic bag before packing the box

❗ Wrap platter with supplied plastic bag before packing the box


3 PREPARE FOR SHIPPING

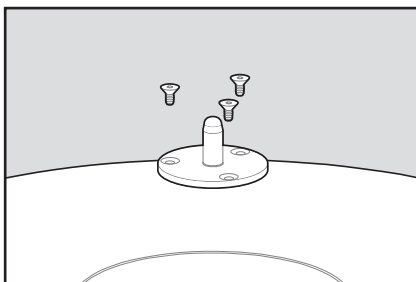

Remove platter post by removing the three screws holding it in place.

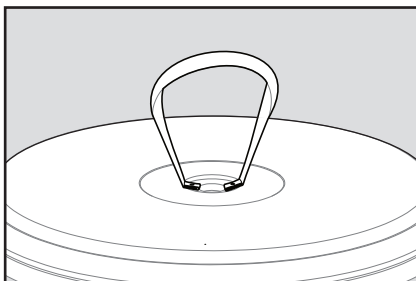

Install platter strap and thumb screws. Lift platter from turntable and wrap in supplied plastic bag. Place the platter securely in the foam base.

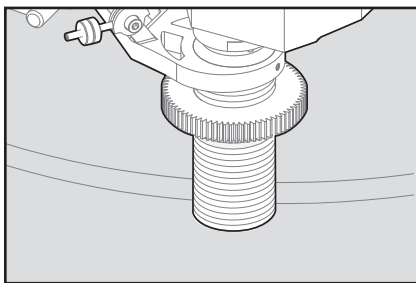

Place masking tape over cartridge guard to hold it in place. Remove tonearm and wrap in supplied plastic bag. Place tonearm securely in foam top cutout.

4 PACK THE BOX

