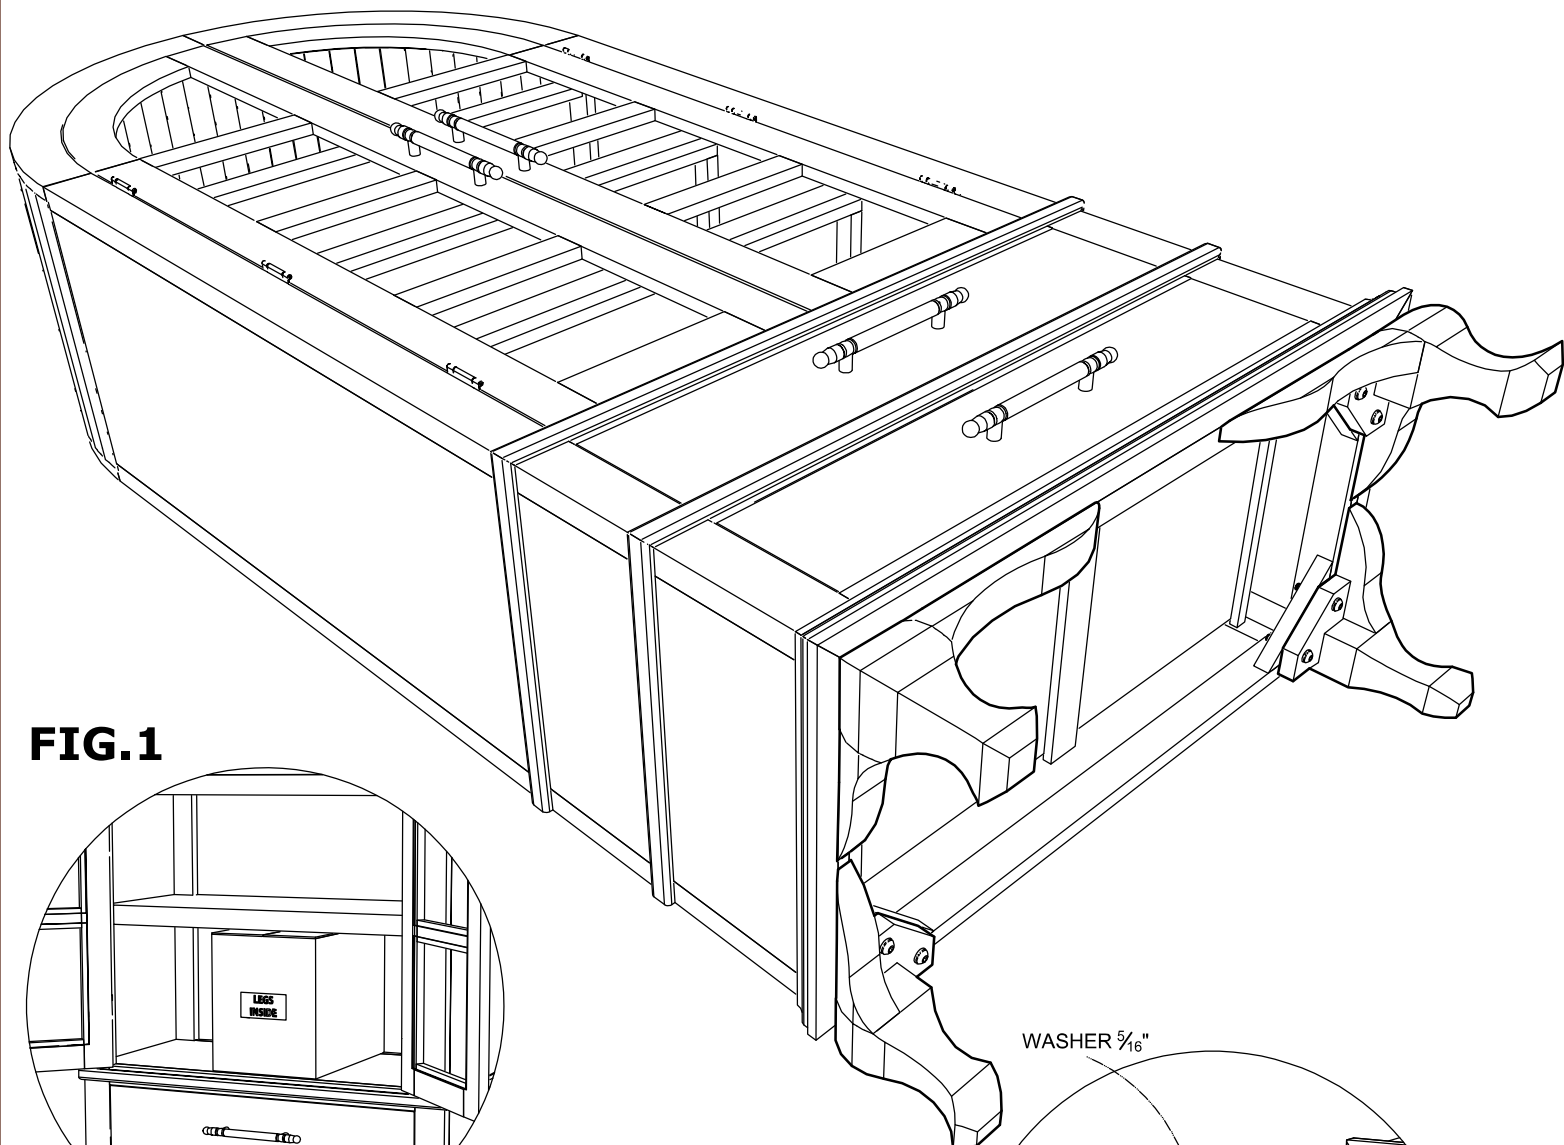
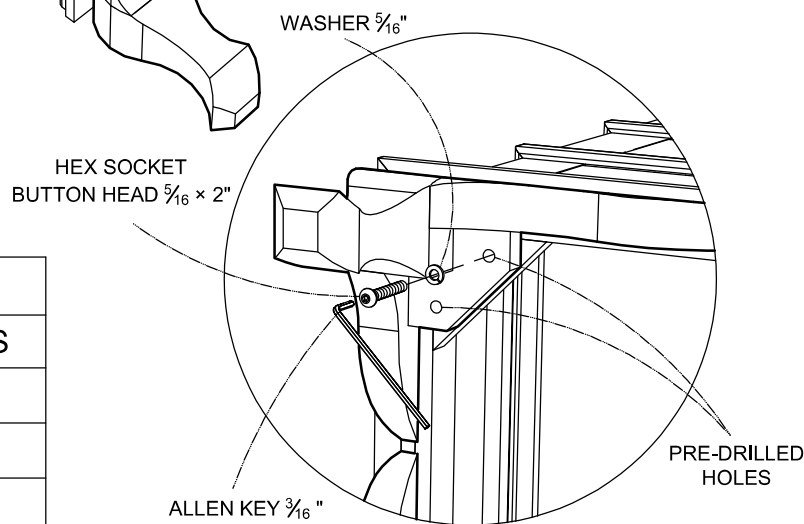
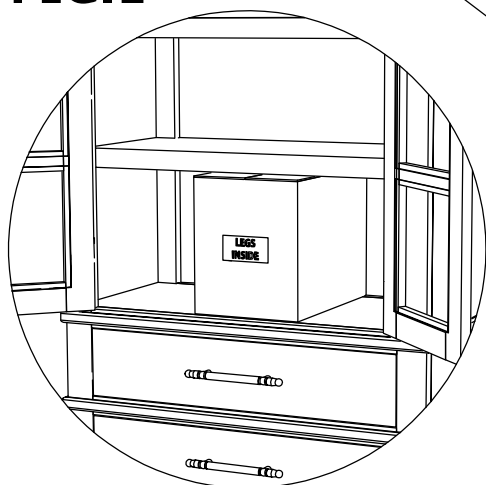




**FIG.1**



**FIG.2**

### HARDWARE

| DESCRIPTION                                     | # PCS |
|-------------------------------------------------|-------|
| HEX SOCKET BUTTON HEAD $\frac{5}{16} \times 2"$ | 8     |
| WASHER $\frac{5}{16}$                           | 8     |
| ALLEN KEY $\frac{3}{16}$                        | 1     |

### INSTRUCTIONS:

1. TAKE OUT THE LEGS FROM THE INSIDE OF THE FURNITURE (FIG. 1).
2. WITH SOMEONE'S HELP, LAY THE FURNITURE ON A CLEAN FLOOR, WITH THE DOORS FACING UP AND LOCATE THE PRE-DRILLED HOLES ON THE BASE.
3. MATCH THE LEGS HOLES TO THE PRE-DRILLED FURNITURE HOLES, PLACE THE THE BOLTS WITH THE WASHER, AND SCREW TIGHTLY (FIG. 2).
4. REPEAT THE STEP THREE UNTIL ALL THE LEGS ARE RIGHT PLACED.

PRODUCT IMAGE SHOWN IS FOR ILLUSTRATIVE PURPOSES ONLY, SHOULD NOT BE TAKEN AS REFERENCE POINT



## ASSEMBLY INSTRUCTIONS

I-MIX-C014