 


POLY ADIRONDACK 4', 5' SWING

EASY ASSEMBLY INSTRUCTIONS

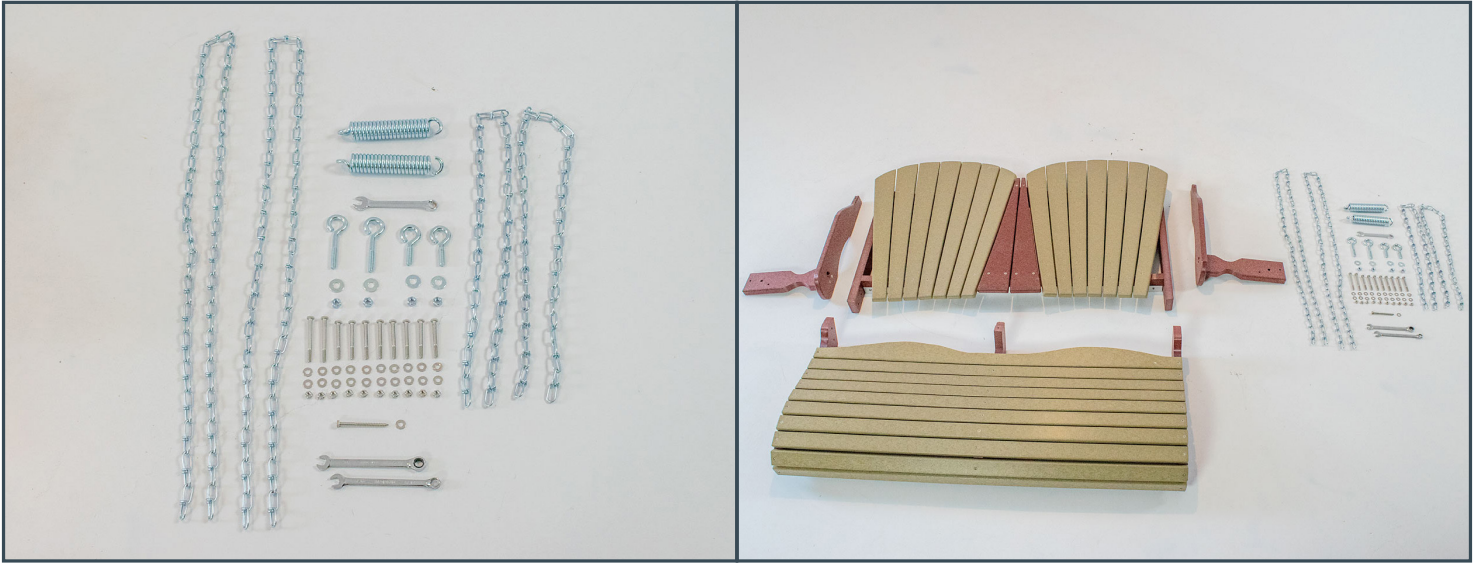

Step 1 (Attach arms to seat)



Slide a washer onto a short bolt and insert into the top hole of the arm base. Align with the top hole towards the front of the seat and push the bolt through. Slide on another washer and tighten a nut onto the bolt.

Insert another short bolt into the washer, lowest hole on the arm base, and seat. Slide on another washer and tighten a nut onto the bolt.

4', 5' SWING CONT.

Step 2 (Attach chain)



Run the chain through the hole on top of the arm and attach to the eye bolt. Insert eye bolt into the middle hole of the arm base and seat. Slide on a washer and tighten a nut onto the bolt.

(Repeat steps 1 & 2 for opposite side)


Step 3 (Attach arms and chains to back)




Pick up the back and set it across the bottom brace of the seat. Push on one side of the back to fit it snugly between the brace. Insert a long bolt into the washer, arm and back. Slide on another washer and tighten a nut onto the bolt.

(With the seat back snugly in place, repeat process for opposite side.)

4', 5' SWING CONT.

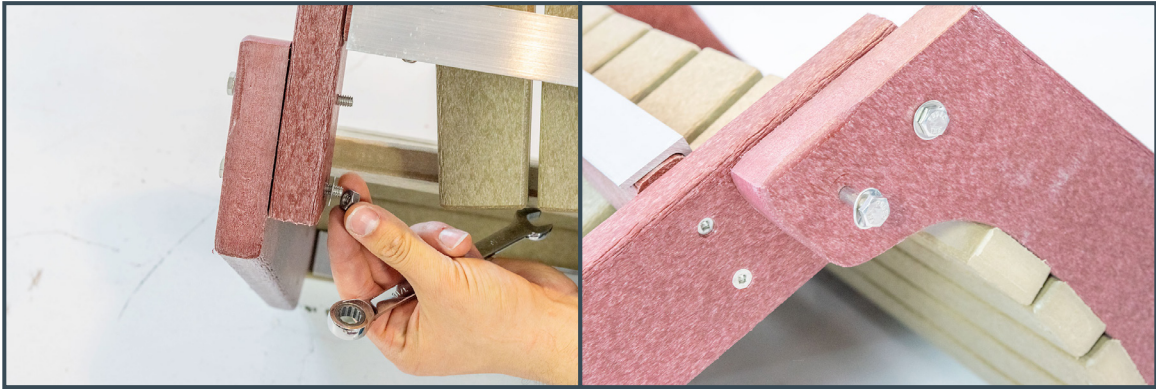

Insert a short bolt into the washer, top hole of the bottom brace and backrest. Slide another washer and tighten a nut onto the bolt. Using another short bolt, repeat this process for the lowest hole on the bottom brace.

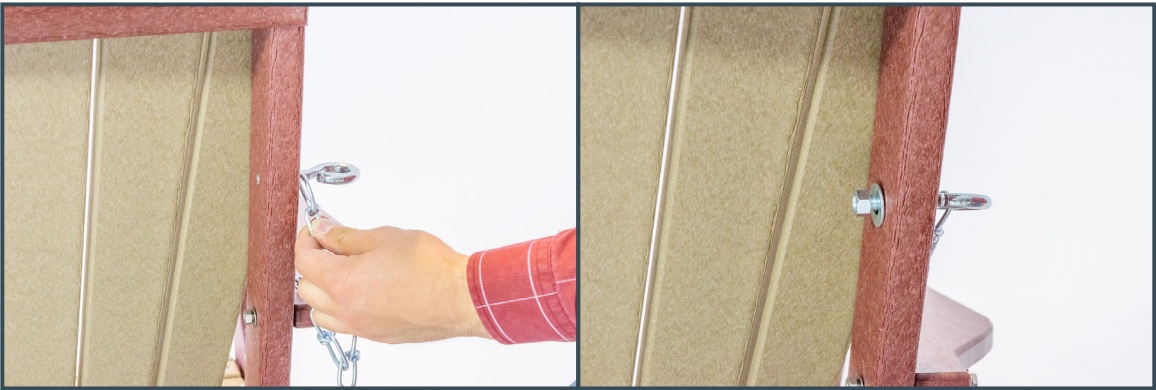

Attach open end of chain to eye bolt and insert into the remaining open hole on the back. Slide on a washer and tighten a nut onto the bolt.

(Repeat process for opposite side.)

Step 4 (Tighten Bolts)

4', 5' SWING CONT.

Step 5



Insert lag screw into washer then the hole in the center of the swing back on the bottom.
Tighten with a 7/16 wrench or socket.



Step 6 ENJOY!

Customer Service: Call 1-866-872-3437. Ask for Darren.