

 
# Assembly and Installation Instructions 24"/30" Range Shelf

## IMPORTANT For Your Safety

- Do not sit or stand on shelf
- Do not run electrical cords near burners
- Be careful of hot surfaces
- Check for stability before using shelf
- Be certain to connect safety cable between shelf and microwave
- Do not use shelf to store flammable, combustible, or aerosol materials
- Be careful of sharp edges during assembly

**NOTE:** The Top Shelf is designed to be mounted on free standing gas or electric ranges with top spill retainer edges up to  $\frac{7}{8}$ " wide. **DO NOT ATTEMPT TO MOUNT ON SURFACES WITHOUT TOP SPILL RETAINER EDGES.** Order adapter kit for models with top spill retainer edges  $\frac{15}{16}$ " to  $1\frac{1}{8}$ " wide. (See back page.)

**MATERIAL SUPPLIED IN KIT:**



6 sheet metal screws (100x1/2")  
used in steps 1, 3, 4 & 6



6 machine screws (10-24X3/4")  
used in step 5




1 safety cable  
used in step 6




4 speed clips  
used in step 2

6 washer head hex nuts  
used in step 5

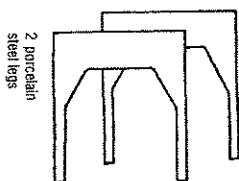


2 porcelain  
steel legs

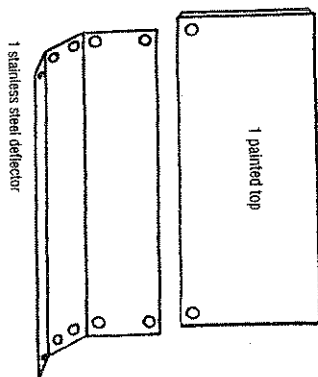

1 painted top


1 stainless steel deflector

**PRIOR TO ASSEMBLY REMOVE SHIPPING PLASTIC FROM TOP AND DEFLECTOR**

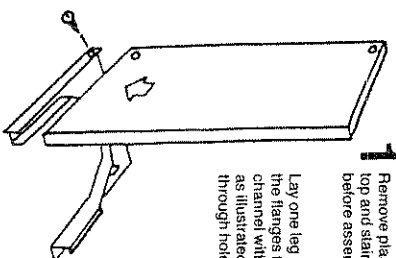



**1** Remove plastic covering from shelf top and stainless steel deflector before assembly.

1 Lay one leg flat on work surface with the flanges facing up. Insert top in channel with finished side facing out as illustrated. Put (1) sheet metal screw through hole in leg and screw to top.

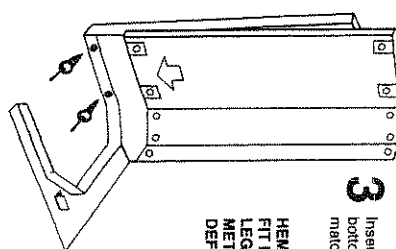



**3** Insert deflector against unfinished bottom of top with contour in deflector matching curve on ends.

**HEM ON DEFLECTOR SHOULD FIT IN FRONT OF TOP AND INSIDE LEG. SEE DETAIL. USE (2) SHEET METAL SCREWS TO FASTEN DEFLECTOR TO END.**

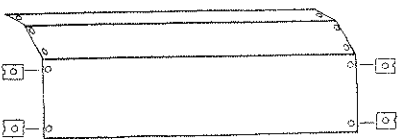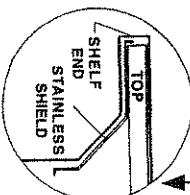


**2** Assemble (4) speed clips to deflector.

Flat side of speed clips should be facing the inside bend of the deflector.

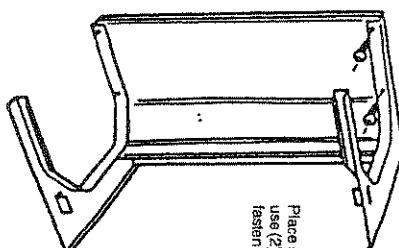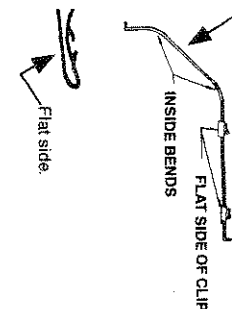


**4**

Place second leg on top and use (2) sheet metal screws to fasten leg to deflector.

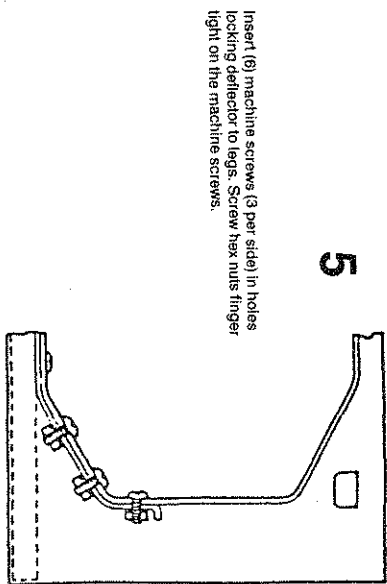

**5** Insert (6) machine screws (3 per side) in holes locking deflector to legs. Screw hex nuts finger tight on the machine screws.

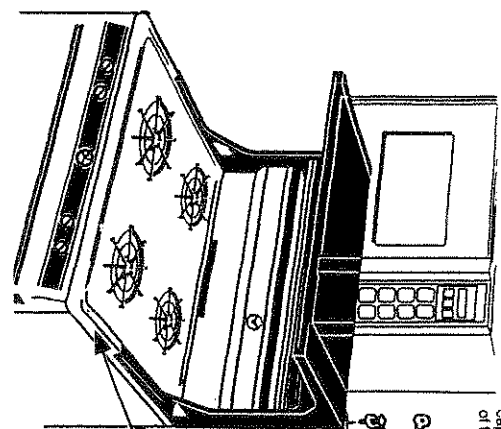

**6** With machine screws finger tight, set shelf on range holding shelf ends apart as it is being lowered down on the unit. Tighten (6) machine screws. Attach one end of safety cable to back of microwave and set on shelf. Install (1) sheet metal screw through the leg into the top capturing the other end of the safety cable.

Attach end to back of microwave

For drip rails that are 1 3/8" - 1 1/8" wide order adaptor part number 60123.

## ADAPTER KIT

Adapter kit available for free standing gas and electric ranges with top drip rails  $1\frac{5}{16}$ " -  $1\frac{1}{8}$ ".

To order, send \$2.00 for postage and handling.

Order part number 60123.

### For Replacement Parts (order by part number)

Part Number	Description
60117	Porcelain Steel Leg — left (facing unit)
60118	Porcelain Steel Leg — right (facing unit)
60119	Painted Top Shelf
60120	Stainless Steel Deflector
60114	Sheet Metal Screw 10x $\frac{1}{2}$ "
60115	Machine Screw 10-24x $\frac{3}{8}$ "
59730	Washer Head Hex Nut
59728	Speed Clip
60116	Safety Cable

### Limited 90 Day Warranty

- Top Shelf is warranted to the original purchaser for a period of 90 days from the date of purchase against defects in material or workmanship as to the shelf components.
- This warranty is expressly limited to the repair or replacement of defective shelf components.

**Peerless-Premier Appliance Co.**

P.O. Box 387  
Belleville, IL 62222

*Quality and Value Since 1912*