


ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

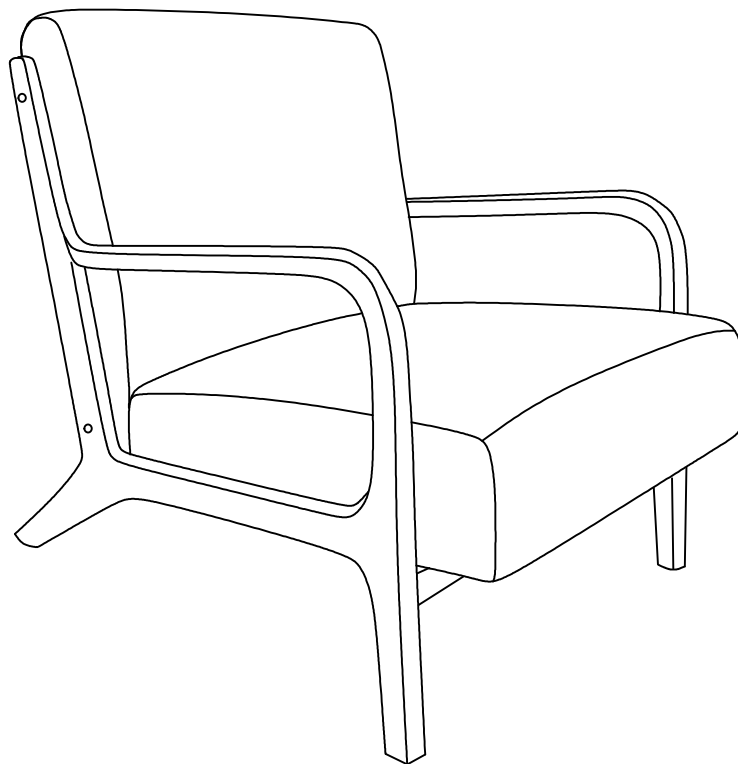

Fine Furniture for every stage of life

902272
Accent Chair

REVISION 0 : 04/09/2024

ITEM: 902272



ASSEMBLY INSTRUCTIONS

- ASSEMBLY TIPS:
- 1. Remove hardware from box and sort by size.
 - 2. Please check to see that all hardware and parts are present prior to start of assembly.
 - 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



- WARNING!
- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
 - 2. This product is for home use only and not intended for commercial establishments.

 
ASSEMBLY TIME

10 MINUTES

PARTS IDENTIFICATION


- A

BACK




1PC
- B

 SEAT




1PC
- C

LEFT LEG FRAME



 
1PC
- D

RIGHT LEG FRAME














1PC
- E

STRETCHER



1PC

Z HARDWARE IDENTIFICATION


NO	DESCRIPTION	FIGURE	Q' TY
1	LOCK WASHER 5/16"		2PCS
2	FLAT WASHER 5/16"		2PCS
3	LOCK WASHER 1/4"		4PCS
4	FLAT WASHER 1/4"*19mm		4PCS
5	FLAT WASHER 1/4"*13mm		4PCS
6	BOLT 1/4X2"		8PCS
7	BOLT 5/16X2"		2PCS
8	ALLEN KEY 5mm		1PC
9	ALLEN KEY 4mm		1PC
10	SCREW		2PCS
11	WOOD CAP		4PCS

ITEM: 902272




ASSEMBLY INSTRUCTIONS

STEP: 1

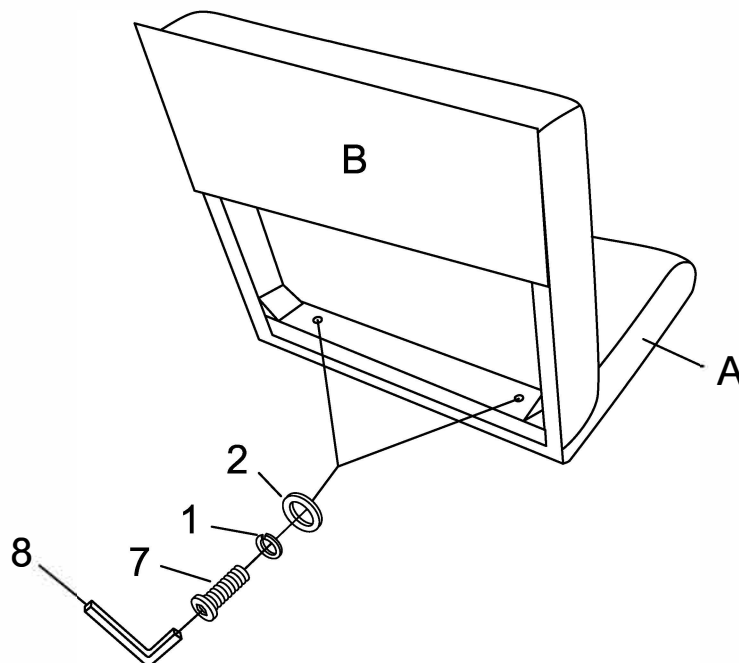

STEP: 2

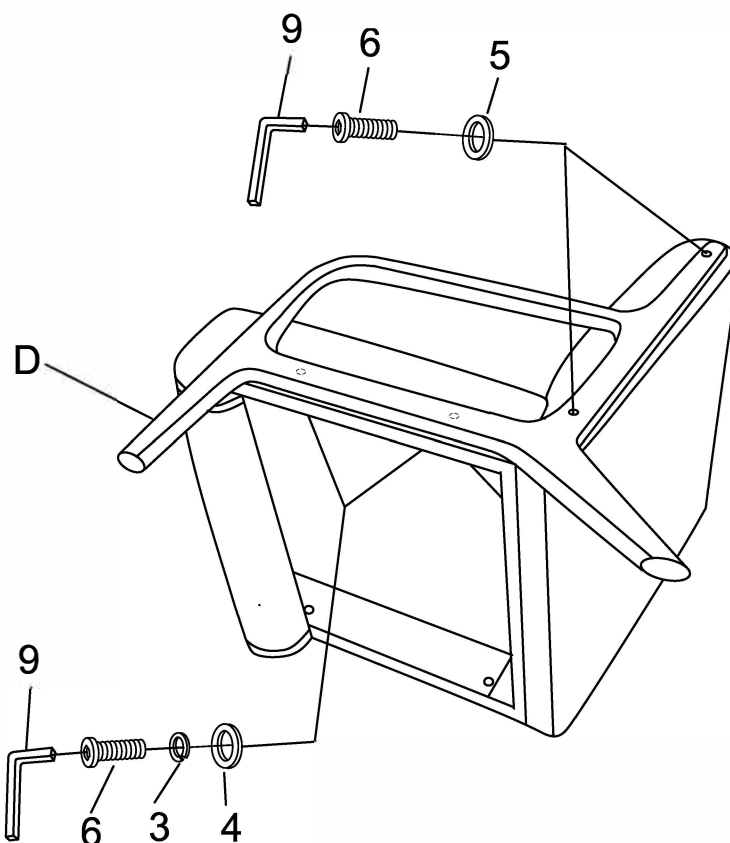


ITEM: 902272




ASSEMBLY INSTRUCTIONS

STEP: 3

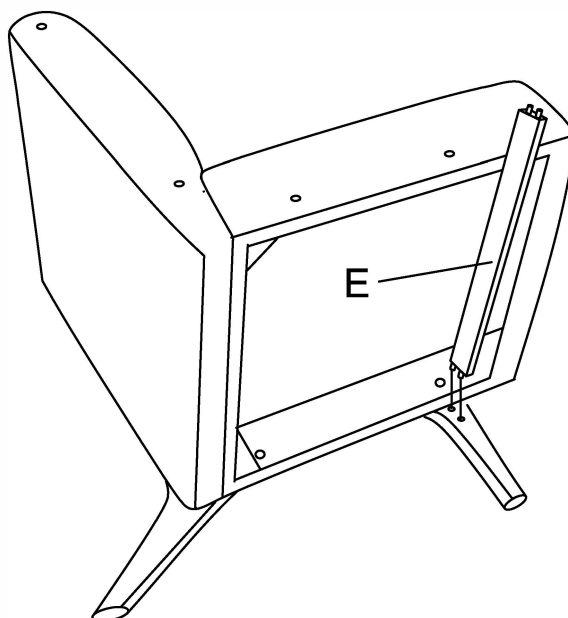

STEP: 4

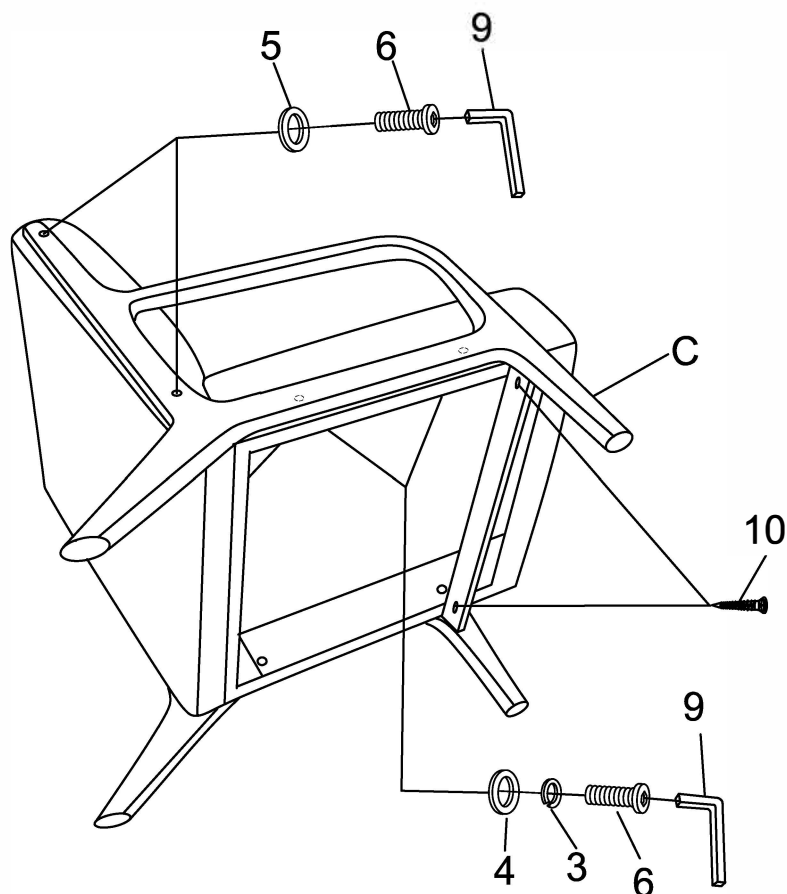


ITEM: 902272



ASSEMBLY INSTRUCTIONS


STEP:5

COMPLETE

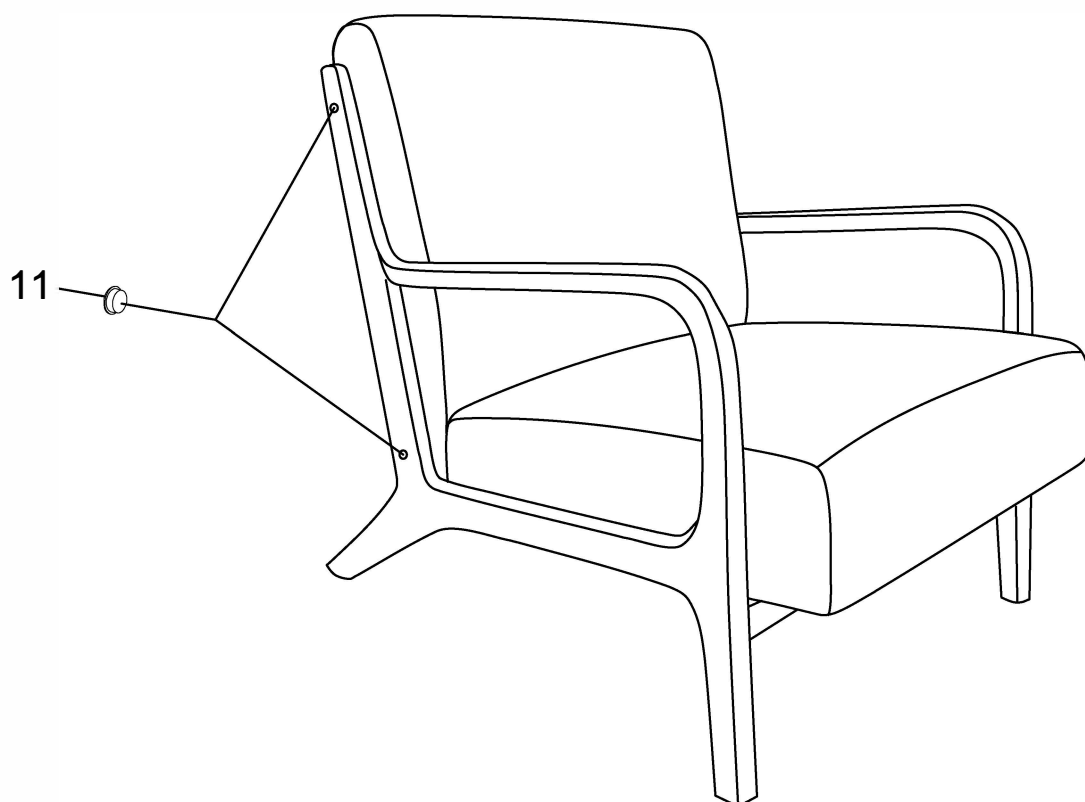

ITEM: 902272

ASSEMBLY INSTRUCTIONS

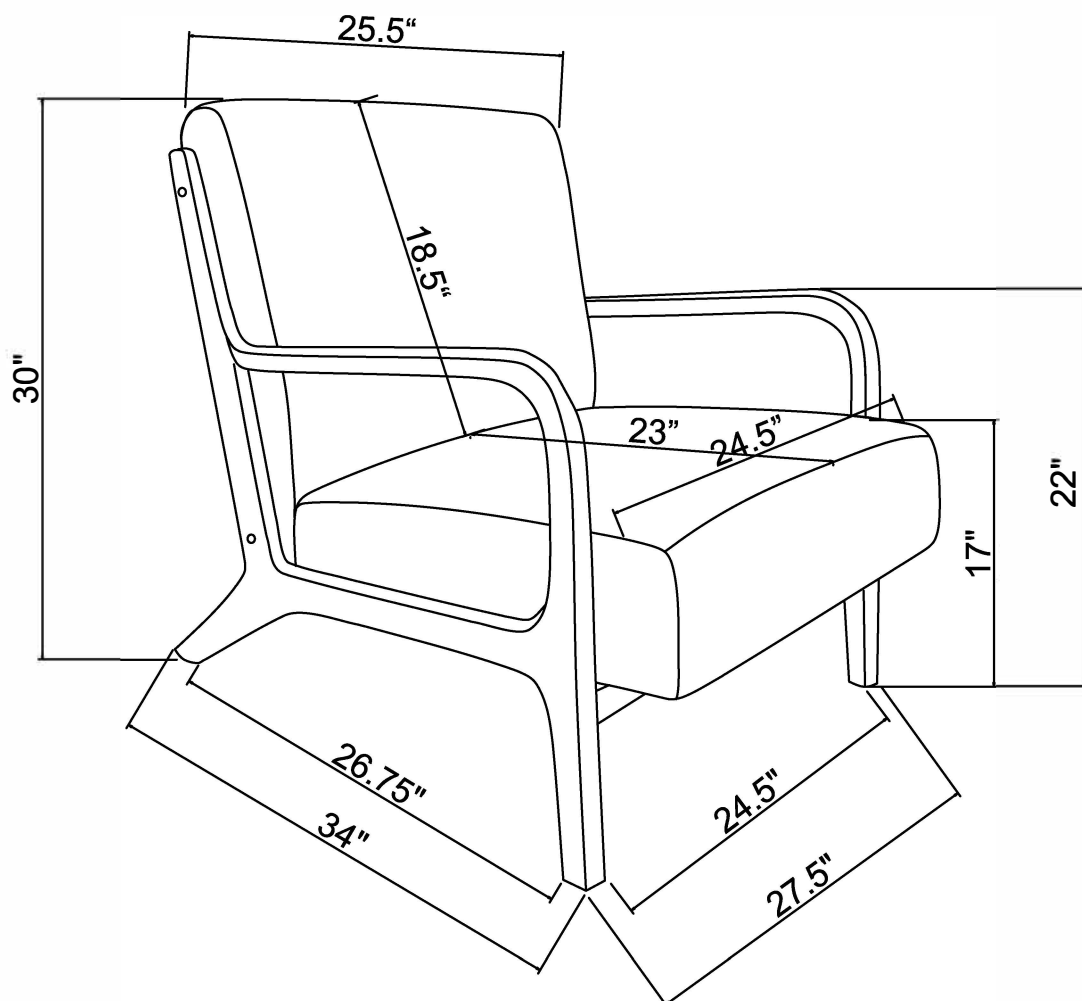

Note: Dimension tolerance $\pm 5\%$