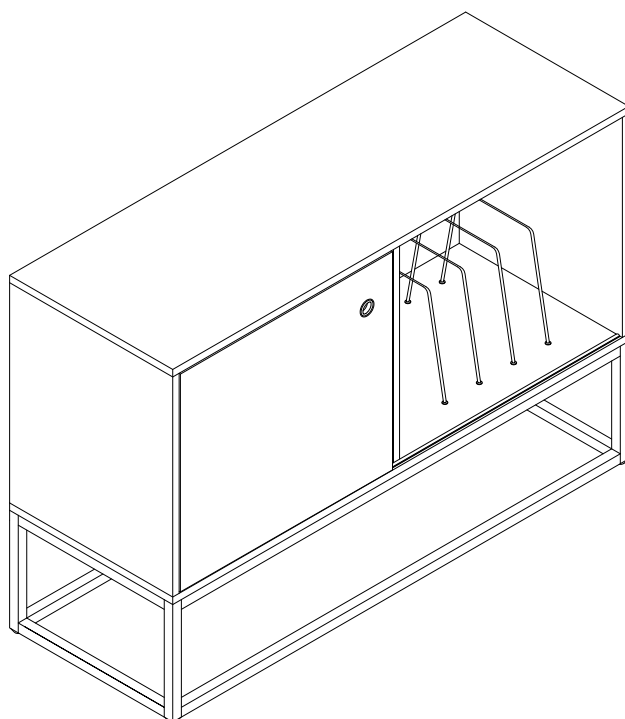 













CROSLEY

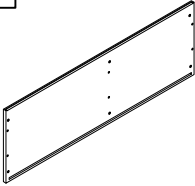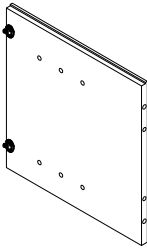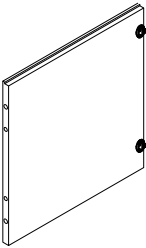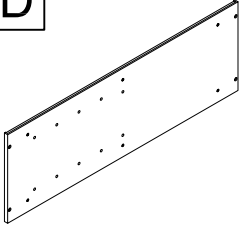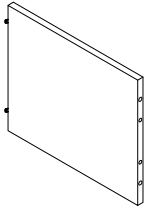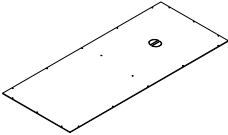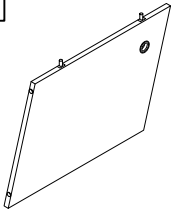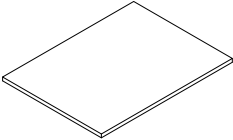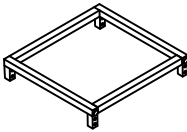          FURNITURE

 
 
 

 

 
 
 


Media Console CF1142



PART LIST


<div>A</div> 	<div>B</div> 	<div>C</div> 	<div>D</div> 	<div>E</div> 
Top Panel 1 PC	Left Panel 1 PC	Right Panel 1 PC	Bottom Panel 1 PC	Partition Panel 1 PC
<div>F</div> 	<div>G</div> 	<div>H</div> 	<div>I</div> 	<div>J</div> 
Back Panel 1 PC	Door Panel 1 PC	Adjustable Shelf 1 PC	Metal Frame 2 PCS	Upper Cross Rail 2 PCS
<div>K</div> 				
Bottom Cross Rail 2 PCS				

HARDWARE LIST

#1  Ø8*30mm	#2 	#3  1-1/2"*Ø1/4"*D11mm	#4  1/2"*Ø1/4"*D11mm	#5 
Wood Dowel 12 PCS (Extra 1)	Hex Nut 8 PCS (Extra 1)	Long Bolt 6 PCS (Extra 1)	Short Bolt 22 PCS (Extra 1)	Flat Washer 6 PCS (Extra 1)
#6 	#7 	#8 	#9 	#10 
Screw 18 PCS (Extra 1)	Allen Wrench 1 PC	Shelf Holder 4 PCS (Extra 1)	Metal Wires 4 PCS	Open End Wrench 1 PC
#11  Safety Strap Kit 1 SET				

ADDITIONAL TOOLS (Not Provided)

 
Note: It is not recommended to use power tools during assembly.



Phillips Head Screwdriver


Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.

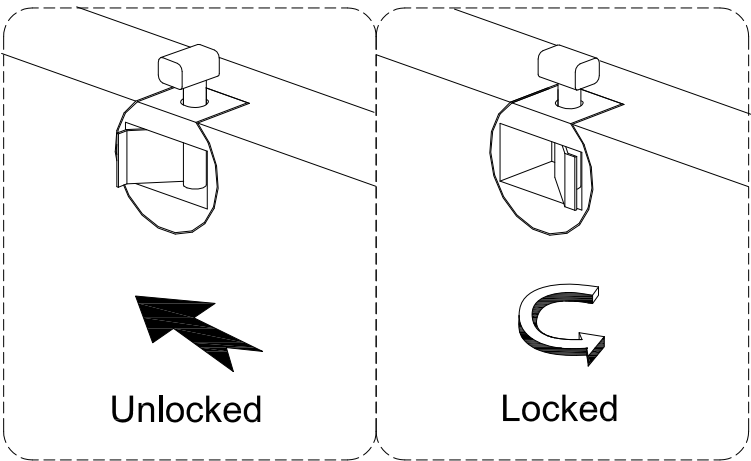 Please do not use tools to assemble this unit unless specifically indicated.




Reference the images above any time the instructions state "lock the hardware".
Note: Be sure to check all hardware is locked when completed.

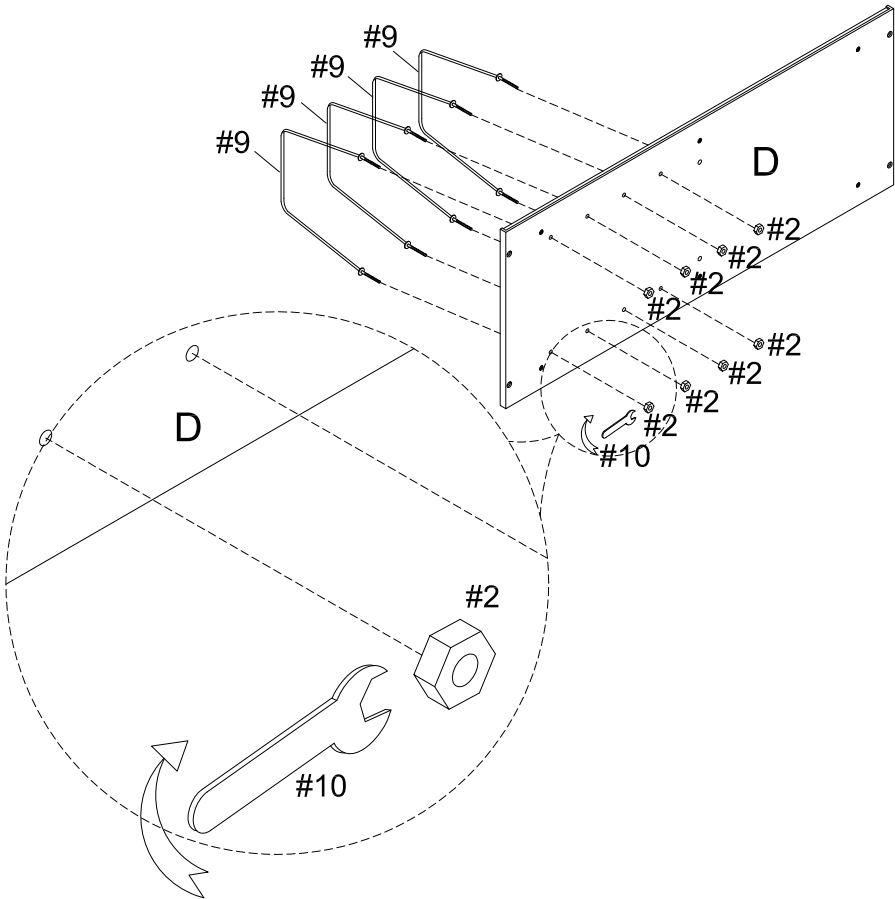 Step 1. Attach metal wires (part #9) to bottom panel (part D) using hex nuts (part #2) and open end wrench (part #10).




- #2 x 8
- #9 x 4
- #10 x 1

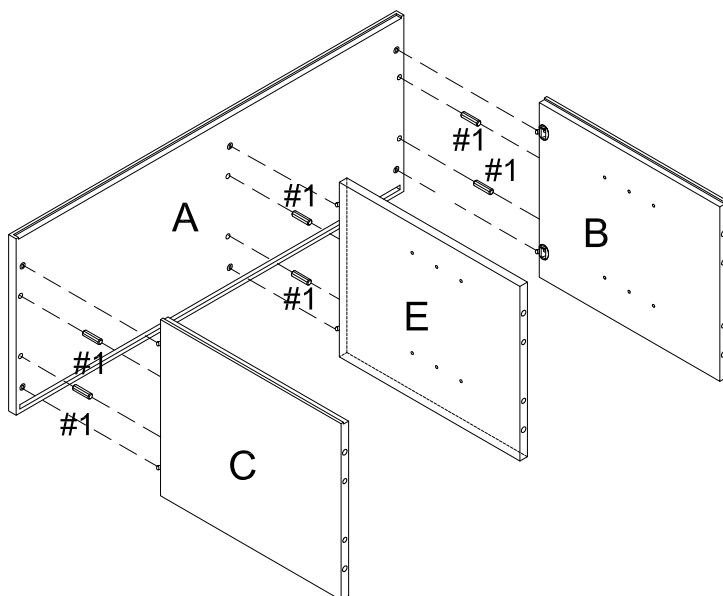 Step 2. Attach panels (parts B, C & E) to top panel (part A) using wood dowels (part #1) and lock the hardware.




#1  x 6

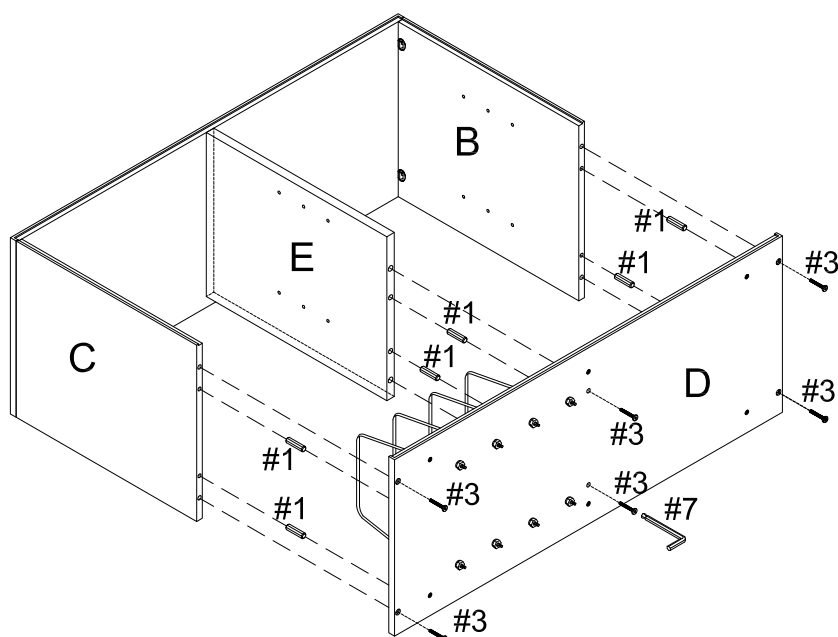 Step 3. Attach bottom panel (part D) to panels (parts B, C & E) using wood dowels (part #1), long bolts (part #3) and allen wrench (part #7).




#1  x 6
 #3  x 6
 #7  x 1

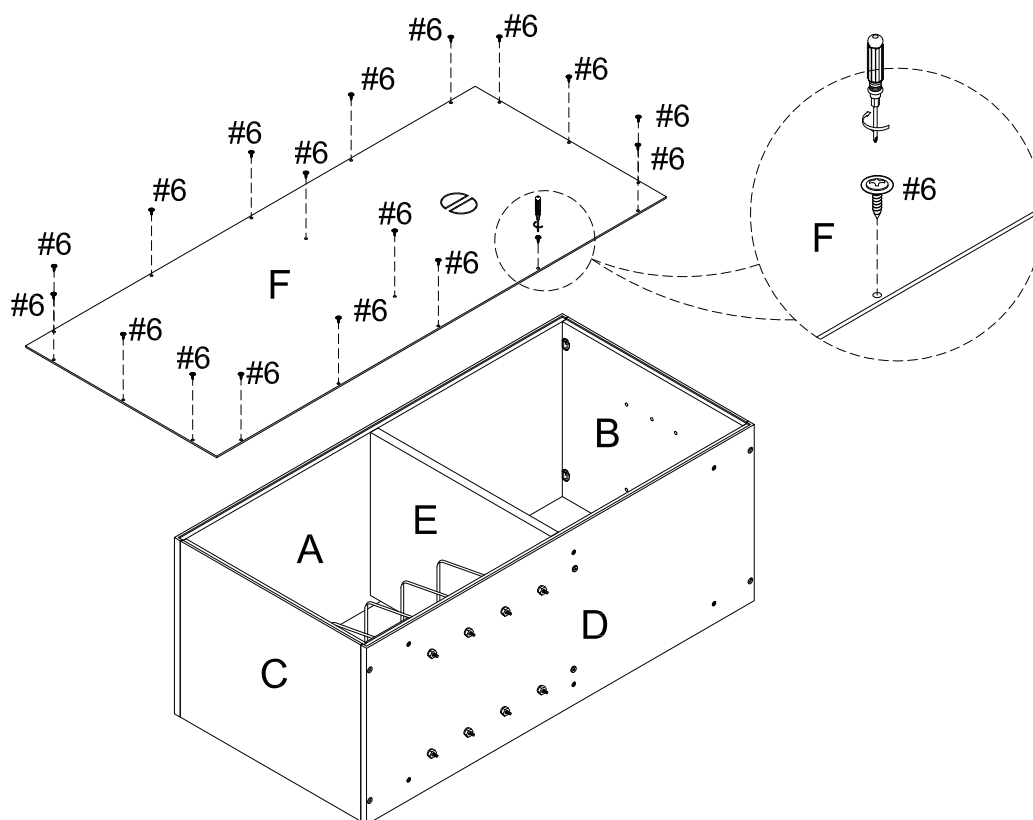 Step 4. Attach back panel (part F) to assembled unit (parts A, B, C, D & E) using screws (part #6) and phillips head screwdriver.




#6  x 18

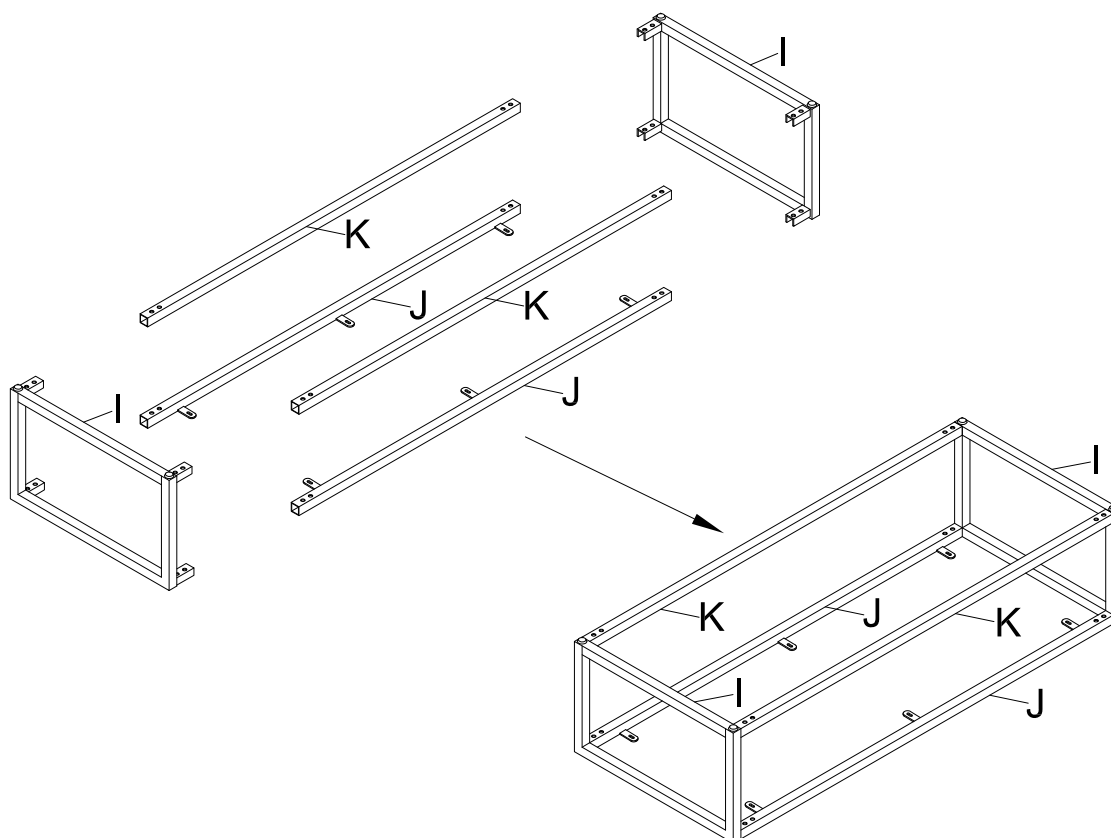 


Step 5. Insert cross rails (parts J & K) into metal frames (part I).



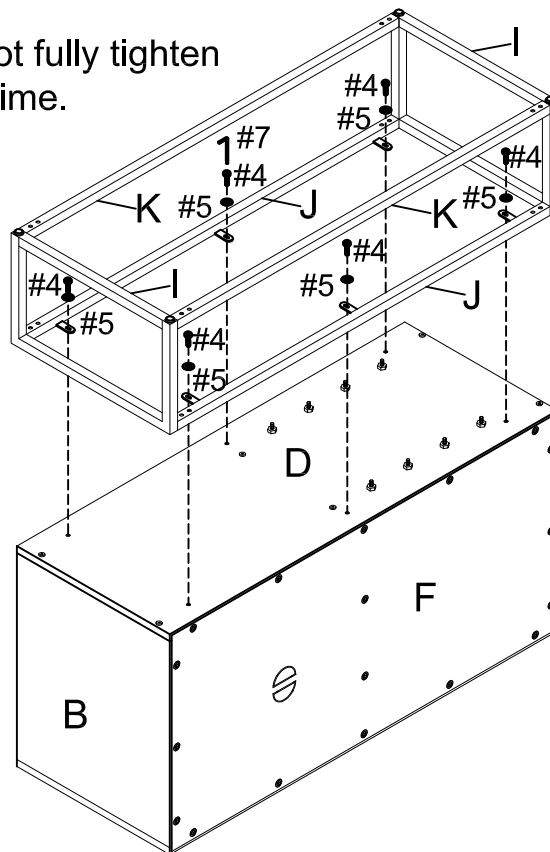 Step 6. Carefully lay assembled unit upside down on a flat soft surface, such as carpet. Attach assembled unit (parts I, J & K) to bottom panel (part D) using short bolts (part #4), flat washers (part #5) and allen wrench (part #7).


Note: Please do not fully tighten bolts at this time.



#4  x 6
 #5  x 6
 #7  x 1

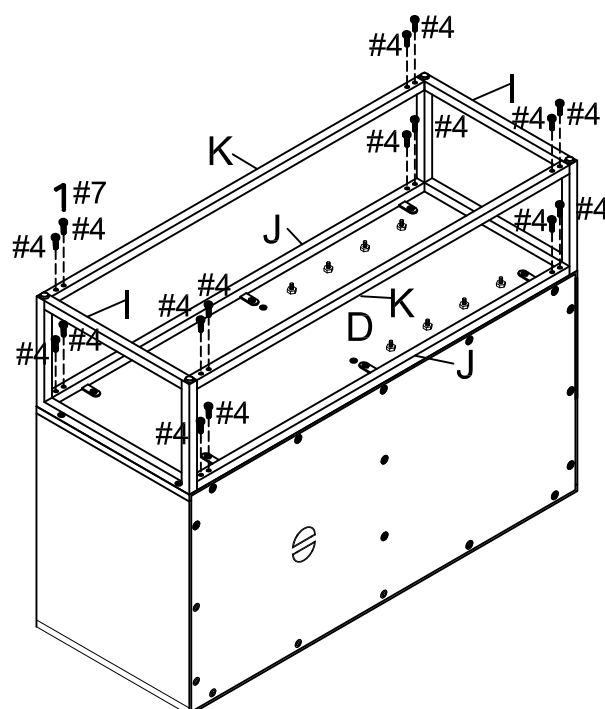 
Step 7. Secure assembled unit (parts I, J & K) using short bolts (part #4) and allen wrench (part #7).

Note: Please fully tighten all bolts at this time.



#4  x 16
 #7  x 1

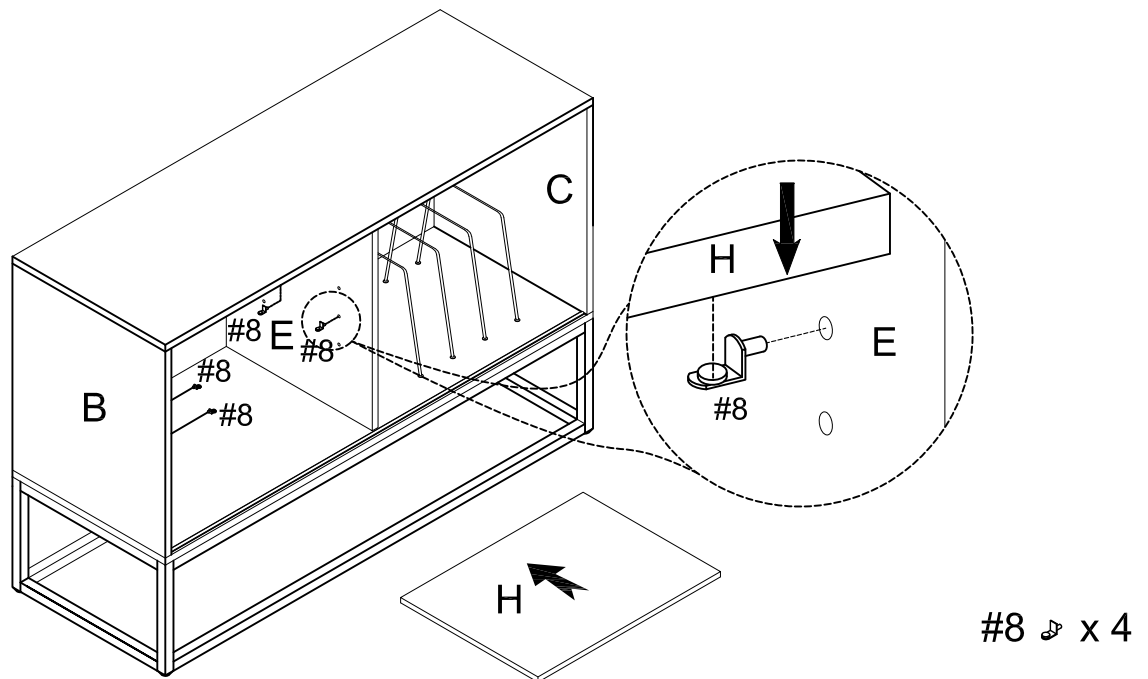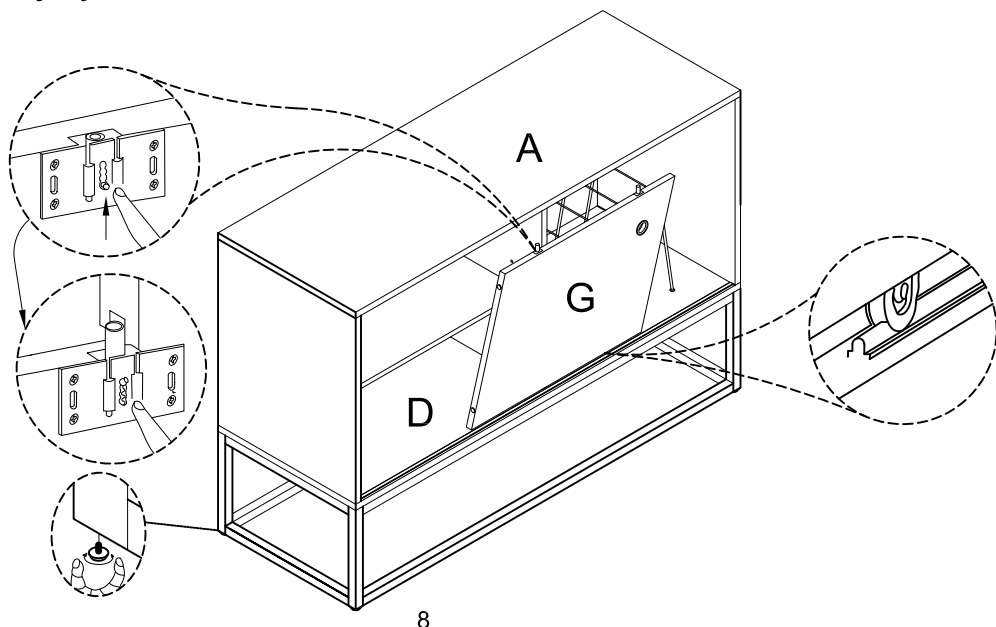  
Step 8. Carefully turn the unit upright. Place shelf holders (part #8) into desired position and then slide adjustable shelf (part H) into place.


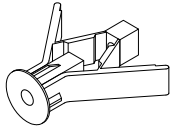 

 
 
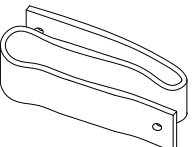 


Step 9. Press the door pins up, then install door panel (part G) to inner runners of pre-assembled unit as shown.

NOTE: It is important to adjust levelers once fully assembled and upright. Extend adjustable leveler until it's firmly in contact with the floor. If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.

Important: Safety strap kit (part #11) must be installed to prevent tipping, damage and/or injury.




#11	A	B	C	D	E
			 D8*3/4"	 D8*1-1/2"	
Safety Strap Kit 1 SET	Wall Anchor 1 PC	Washer 2 PCS	Short Screw 1 PC	Long Screw 1 PC	Safety Wall Strap 1 PC

SAFETY WALL STRAP INSTALLATION

Note: It is highly recommended to install this safety strap kit to prevent tipping, damage and/or injury.

- 1.Insert short screw (C) through washer (B) and safety wall strap (E) and attach to top panel (part A) using phillips head screwdriver.
- 2.Drill a 11/32" hole where you want to secure the unit. The drilled hole will be at the same height as the hole in top panel (part A) where the safety wall strap (E) is attached. Tap wall anchor (A) into the hole.
- 3.Insert long screw (D) through washer (B) and safety wall strap (E) into wall anchor (A) using phillips head screwdriver.

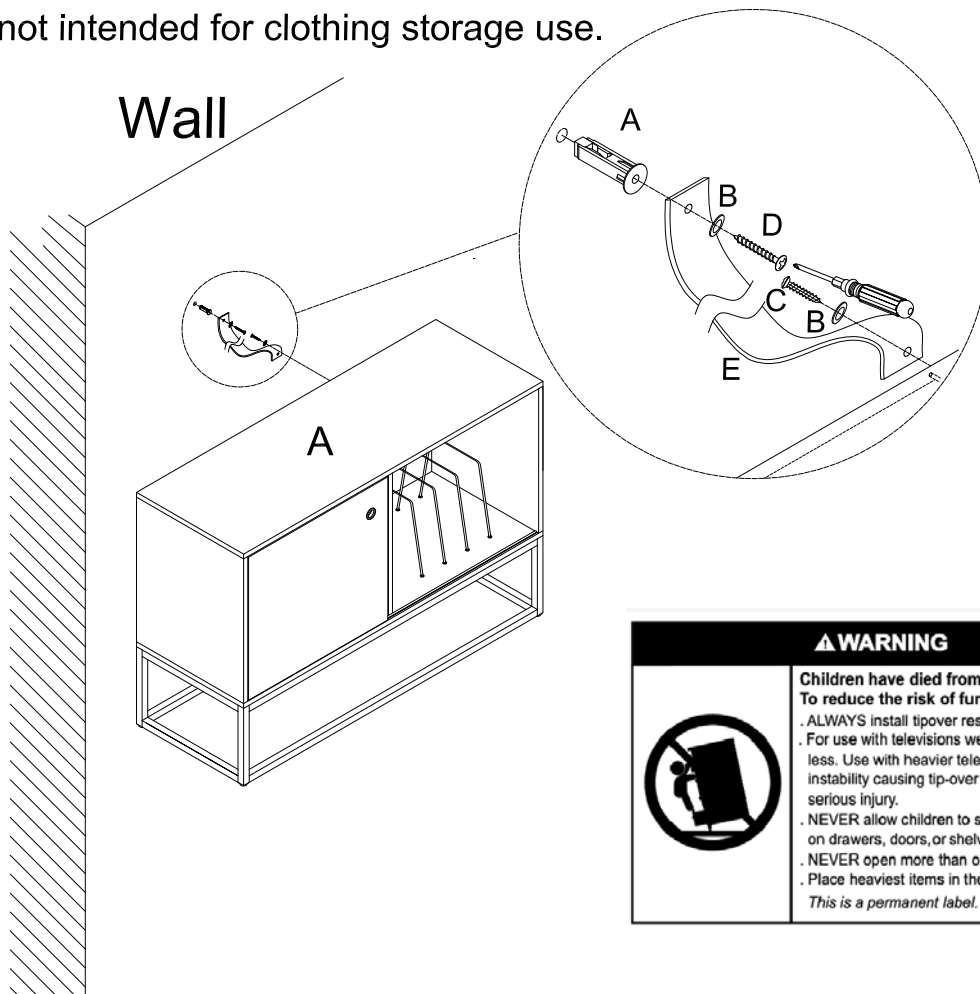 Note: This item is not intended for clothing storage use.



⚠ WARNING

Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- For use with televisions weighing 50lbs(23kg) or less. Use with heavier televisions may result in instability causing tip-over resulting in death or serious injury.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

This is a permanent label. Do not remove!