





Welcome

Welcome to the Speed Queen® family. Thank you for your support of our truly commercial quality products. Our washers and dryers are expertly engineered to deliver commercial performance, tested to ensure ultimate durability and built with American Pride. For more than 110 years, Speed Queen consumer laundry products have been manufactured in Ripon, Wisconsin, a place where pride of workmanship is not just alive, but thriving and embodied by each individual who designs, tests, assembles or in some way touches a Speed Queen product. A special thing happens when that pride is combined with the highest quality commercial materials and components...it leads to the ultimate reliability... reliability measured in decades, not years. That's legendary Speed Queen Quality.

Installation

Parts included:









Two (2) filter screen washers

Two (2) plain Four (4) rubber rubber washers feet

Two (2) plugs

- **1.** Move unit to area within 4 ft (1.2 m) of final installation.
- **2.** Remove shipping materials.
 - Remove lower panel (2 screws)
 - Remove four (4) bolts securing shipping brace. Remove brace and blue label
 - Remove two (2) bolts from rear of washer
 - Insert two (2) plugs into rear bolt holes
 - Reinstall panel
- **3.** Connect fill hoses water pressure = 20-120 psi [138-827 kPa].
 - Flush water supply lines
 - Use two filter screen washers with screen facing faucet
 - Use two rubber washers in end of hose connecting to the machine

- **4.** Connect drain hose to drain receptacle 36 in. [91 cm] recommended height.
 - Use beaded strap to secure drain hose to drain receptacle
- **5.** Position and level the unit.

Beaded strap

- Place four (4) rubber feet on leveling legs
- Unit must not rock
- 6. Wipe out inside of washtub.
- Connect washer to electrical power on individual branch circuit. Refer to serial plate for electrical ratings.
- 8. Run washer through one complete cycle to make sure it is operating properly and properly leveled.
- 9. Check for leaks.



Cycle Information

The following cycle descriptions will help determine which cycle to choose depending on the type of laundry being washed. The cycle settings may be modified using the Selections and Options.

Heavy Duty

Use for sturdy items, like play or work clothes, towels, T-shirts, etc. The cycle includes a longer wash tumble and two rinses. The final spin extracts moisture at a high spin speed.

Normal Eco

This cycle includes a wash tumble and two rinses, but uses less water than the other cycles. It also uses less hot water. Only the high spin speed is available in this cycle. This cycle is recommended for washing everyday cottons and linens.

Perm Press

Use for permanent press items and synthetics. This cycle includes a wash tumble and two rinses. The final spin extracts moisture at a low spin speed.

Delicate

Wash delicate items usually washed by hand on this cycle. The cycle includes a wash tumble and two rinses. The final spin extracts moisture at a low spin.

Favorite

The Favorite keypad allows the user to save nine different cycles, selections and options for later use.

- 1. Press the Favorite keypad. The control will display the settings for the first Favorite cycle. The display will switch between F1 and the cycle time for the selected cycle. If a Special Cycle is selected, the display will switch between F1, P1 and the cycle time.
- 2. Press the keypads for the desired settings.
- 3. Press the Favorite, Start/Pause or Delay Start keypad to save the current settings.
- 4. Press the Power/Cancel keypad to discard the current settings.
- 5. The next Favorite cycle, F2, will be displayed.

After the cycles have been saved, they can be accessed using the up and down arrow keypads after pressing the Favorite keypad.



This cycle is designed to keep white laundry white. It utilizes a longer, hot water wash tumble and two rinses. The final spin extracts moisture at a high spin speed.

Sanitize with Oxi

This cycle has been verified to reduce 99.9% of bacteria found in the typical household laundry load when used with an Oxi additive in addition to detergent. In addition there is no significant contamination transferred to later washer loads.



Operating

1. Prepare laundry



2. Add high efficiency (he) laundry supplies*



3. Load laundry



4. Close door



5. Set cycle

6. Set temperature

7. Set spin speed

8. Set soil level

9. Press start/pause



*Note: Pods must be placed in washtub with laundry.



Register

1. Register your product at **www.speedqueen.com** to take full advantage of the limited warranty.



Note: This unit includes a limited warranty. Refer to Speedqueendoc.net to download the full warranty bond.

Download full documentation and view installation and operating videos for an immersive experience at Speedqueendoc.net or scan the QR code below.





If you wish to receive printed documents at no cost, please complete 3 the order form online at speedqueen.com/request-printed-documents/ or email your request to technicalcommunications@alliancels.com.

If you don't have internet access, complete the attached order form and return by mail to the address on the form.

20 Documentati ted **Pri** ō Form Inder C

and for faster delivery of your manuals, place your order online ocuments, card, this an alternative to mailing speedqueen.com/reques As

- and Warranty Bond. S a printed Installation Manual, User Δ
 - go to Guide, a does not register my product. card Please send me a l understand this

ster.				CityState		
<u>www.speedqueen.com</u> to register.	Model No.	Serial No.	Name	Address	Zip CodePho	

Processing of manuals begins upon receipt of order. Allow 1-2 weeks for delivery.

SPEED QUEEN TECHNICAL DOCUMENTATION SHEPARD STREET P O BOX 990 RIPON WI 54971-9967



NO POSTAGE NECESSARY IF MAILED IN THE UNITED STATES

POSTAGE WILL BE PAID BY ADDRESSEE

BUSINESS REPLY MAIL



Part No. 807535R2 December 2020 © Published by permission of the copyright owner – DO NOT COPY or TRANSMIT Speed Queen by Alliance Laundry Systems