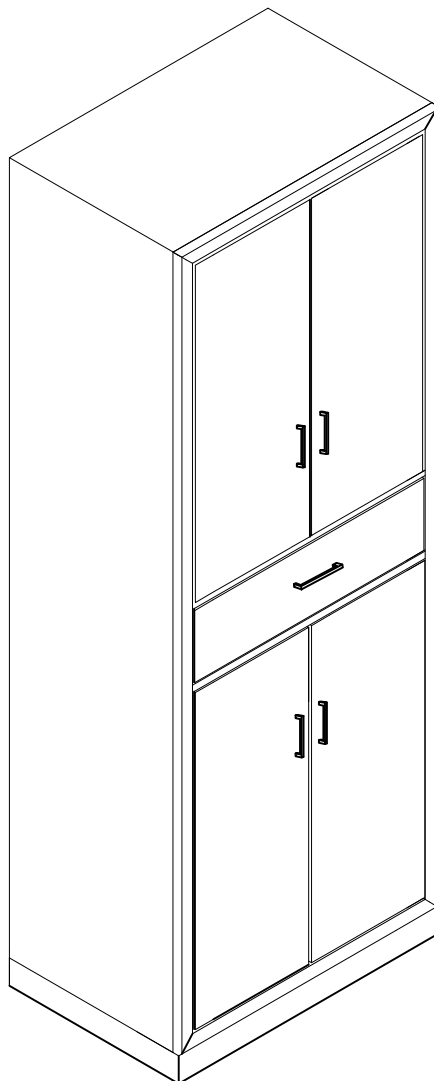 


# **CROSLEY**

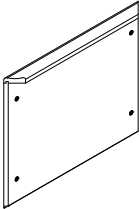 
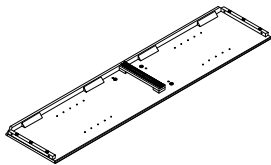 
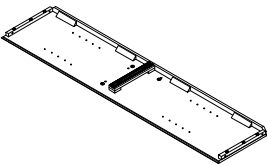 
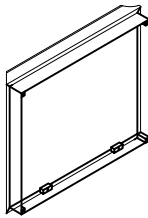 
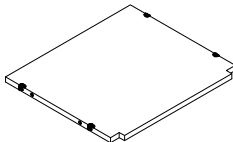 
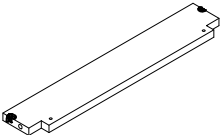 
 
 
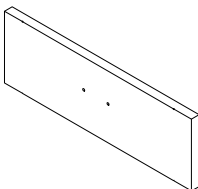 
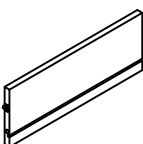 
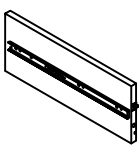 
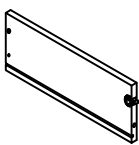 
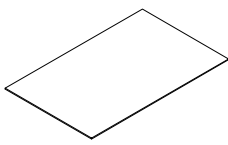 
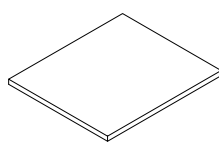 
 
---

## FURNITURE

 
 
 
 

 

 
 
 
 
 
 

Pantry  
CF3139



# PART LIST

 
<b>A</b> 	<b>B</b> 	<b>C</b> 	<b>D</b> 	<b>E</b> 
Top Panel 1 PC	Left Panel 1 PC	Right Panel 1 PC	Bottom Panel 1 PC	Fixed Shelf 1 PC
<b>F</b> 	<b>G</b> 	<b>H</b> 	<b>I</b> 	<b>J</b> 
Rail 1 PC	Door Panel 2 PCS	Door Panel 2 PCS	Drawer Front Panel 1 PC	Drawer Back Panel 1 PC
<b>K</b> 	<b>L</b> 	<b>M</b> 	<b>N</b> 	<b>O</b> 
Drawer Left Panel 1 PC	Drawer Right Panel 1 PC	Drawer Bottom Panel 1 PC	Adjustable Shelf 4 PCS	Back Panel 1 PC

# HARDWARE LIST

<b>#1</b>  Ø8*30mm	<b>#2</b>  Ø6*30mm	<b>#3</b>  Magnet	<b>#4</b>  12*Ø3*D6mm	<b>#5</b>  Handle
Long Wood Dowel 6 PCS (Extra 1)	Short Wood Dowel 4 PCS (Extra 1)	Magnet 2 PCS	Round Head Screw 4 PCS (Extra 1)	Handle 5 PCS
<b>#6</b>  Shelf Holder	<b>#7</b>  Screw	<b>#8</b>  3/4"*Ø5/32"*D9mm	<b>#9</b>  1-1/4"*Ø1/4"*D11mm	<b>#10</b>  Adjustable Leveler
Shelf Holder 16 PCS (Extra 1)	Screw 28 PCS (Extra 1)	Round Head Bolt 10 PCS (Extra 1)	Bolt 8 PCS (Extra 1)	Adjustable Leveler 4 PCS
<b>#11</b>  Allen Wrench	<b>#12</b>  Safety Strap Kit	<b>#13</b>  Cam Bolt	<b>#14</b>  Cam Lock	
Allen Wrench 1 PC	Safety Strap Kit 1 SET	Cam Bolt 6 PCS (Extra 1)	Cam Lock 6 PCS (Extra 1)	

ADDITIONAL TOOLS (Not Provided)


Note: It is not recommended to use power tools during assembly.



Phillips Head Screwdriver


Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.

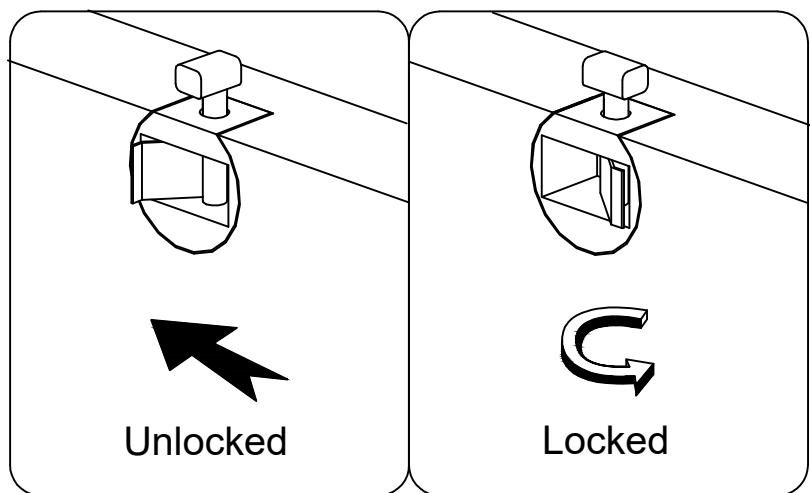 Please do not use tools to assemble this unit unless specifically indicated.




Reference the images above any time the instructions state "lock the hardware".  
 Note: Be sure to check all hardware is locked when completed.

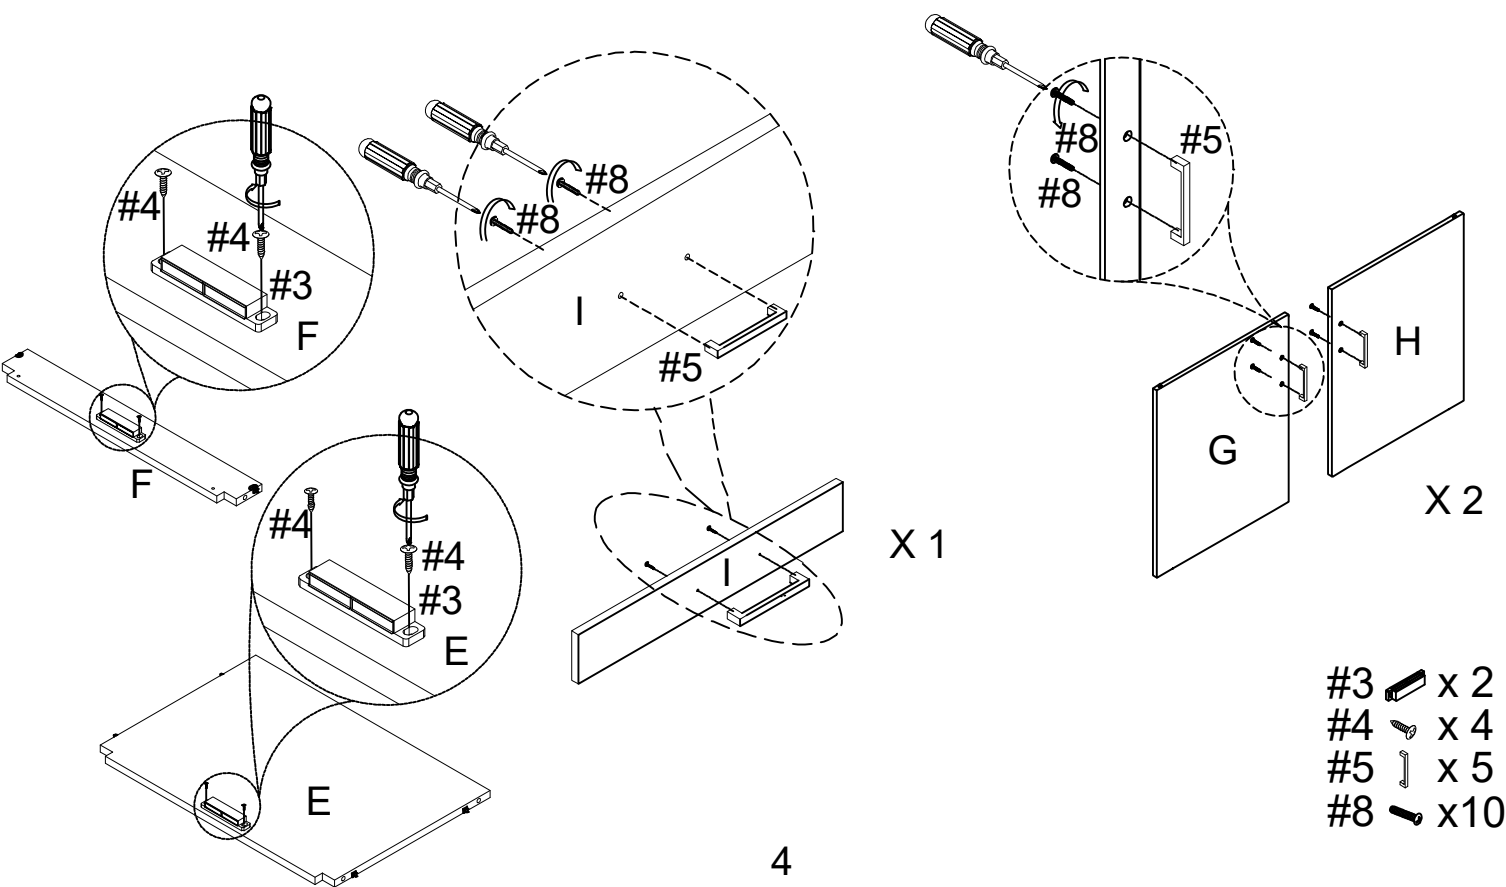 Step 1. Attach magnets (part #3) to fixed shelf (part E) and rail (part F) using round head screws (part #4) and phillips head screwdriver. Attach handles (part #5) to panels (parts G, H & I) using round head bolts (part #8) and phillips head screwdriver.



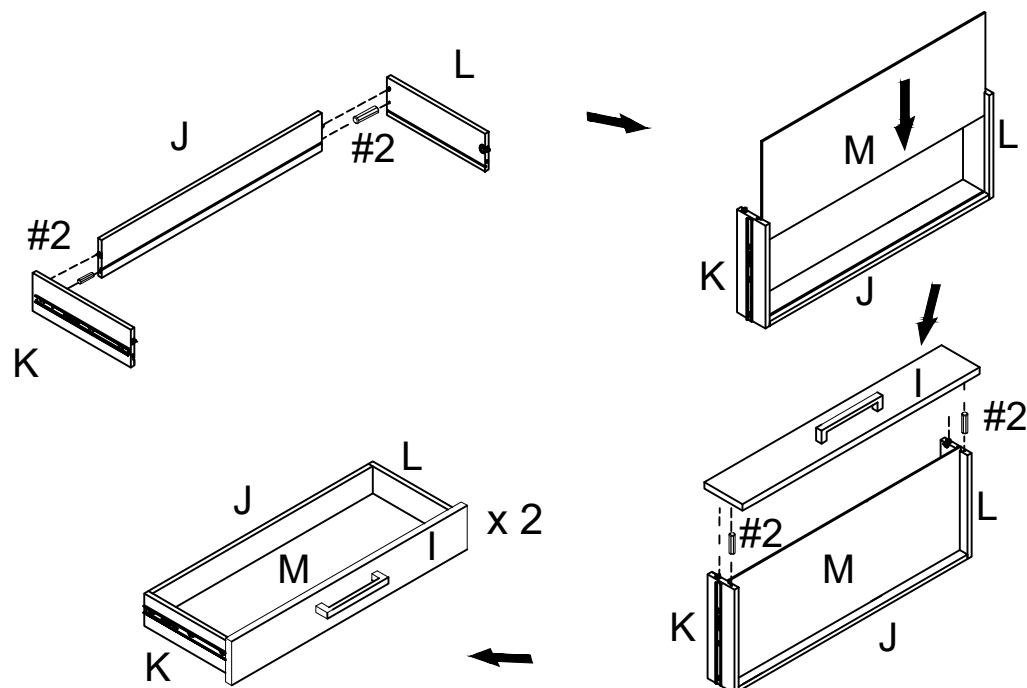 
Step 2. Attach drawer panels (parts K & L) to drawer back panel (part J) using short wood dowels (part #2) and lock the hardware. Slide drawer bottom panel (part M) into grooves of assembled unit (parts J, K & L). Attach drawer front panel (part I) to assembled unit (parts K, L & M) using short wood dowels (part #2) and lock the hardware.



#2  x 4

Step 3. Insert cam bolts (part #13) into pre-drilled holes of panels (parts B & C) using phillips head screwdriver.


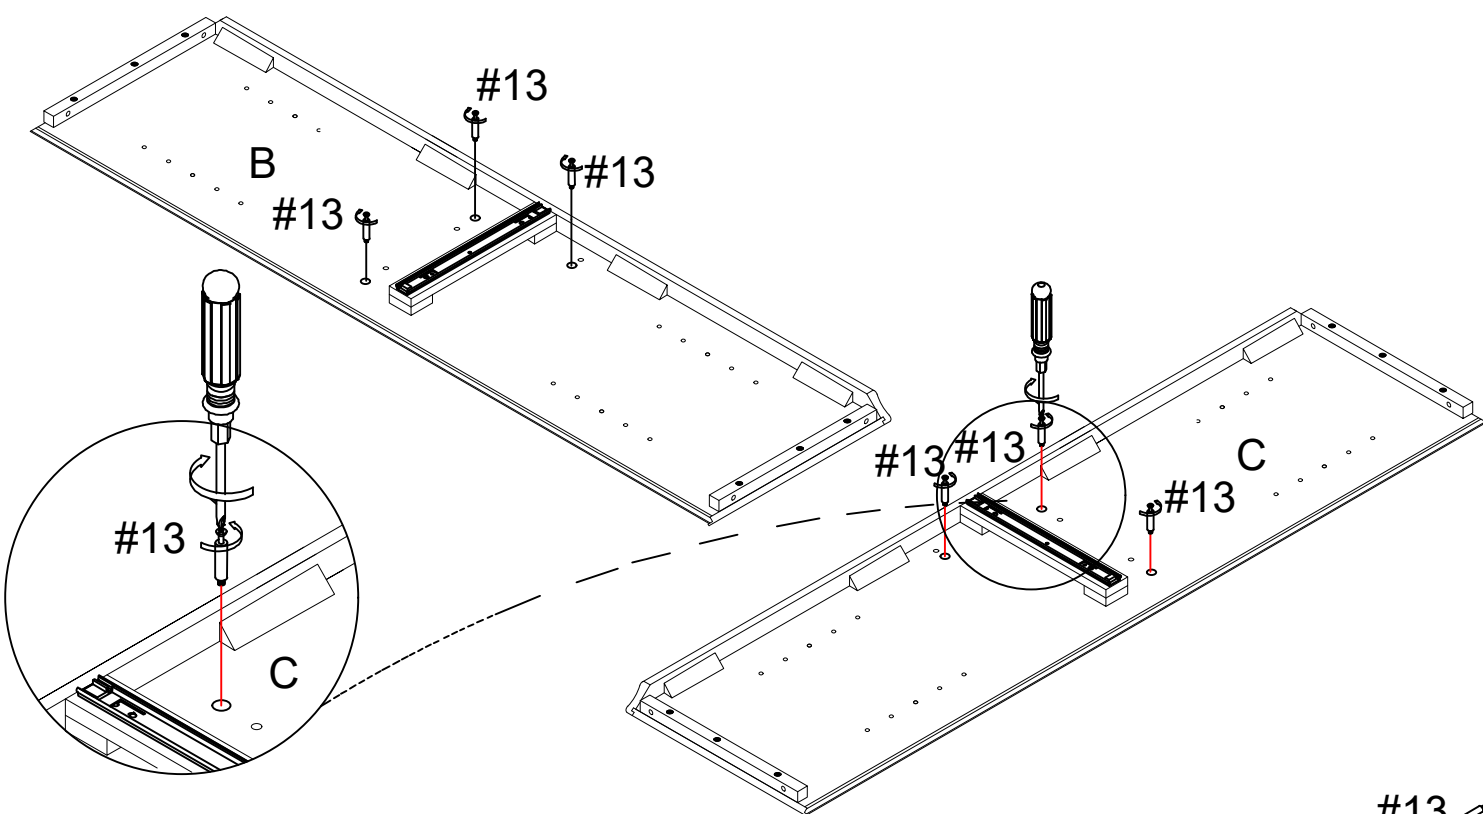 
NOTE: Do not overtighten cam bolts. Stop tightening once threads on cam bolts are no longer visible.





#13  x 6

Step 4. Attach fixed shelf (part E) to right panel (part C) using long wood dowels (part #1), cam locks (part #14) and phillips head screwdriver.

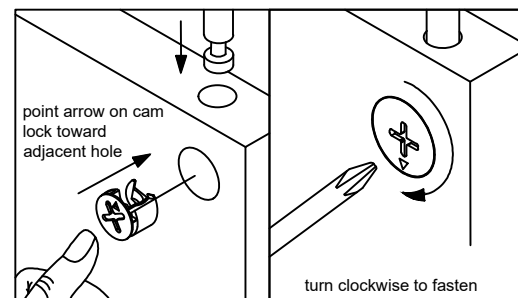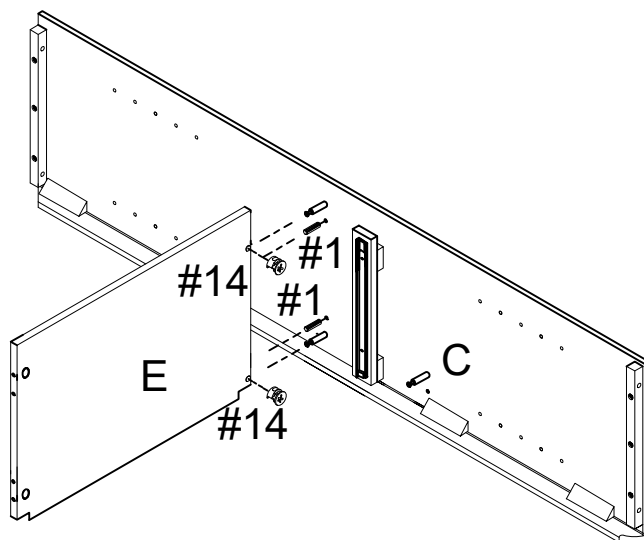  
 
Note: Cam locks must rotate a full 180°. See pictured insert.





#1  x 2  
#14  x 2

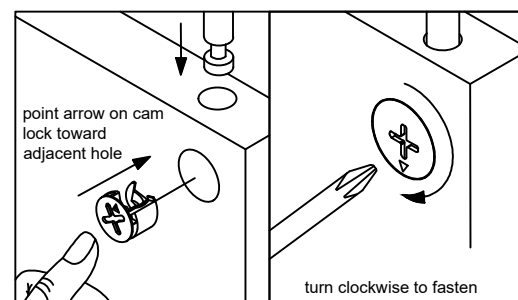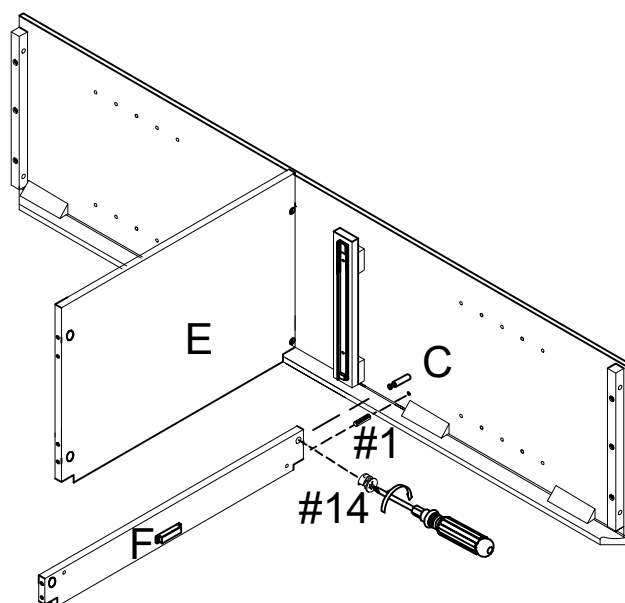  
Step 5. Attach rail (part F) to right panel (part C) using long wood dowel (part #1), cam lock (part #14) and phillips head screwdriver.



Note: Cam lock must rotate a full 180°. See pictured insert.




#1  x 1  
#14  x 1

 Note: Cam locks must rotate a full 180°. See pictured insert.




#9  x 8  
#11  x 1

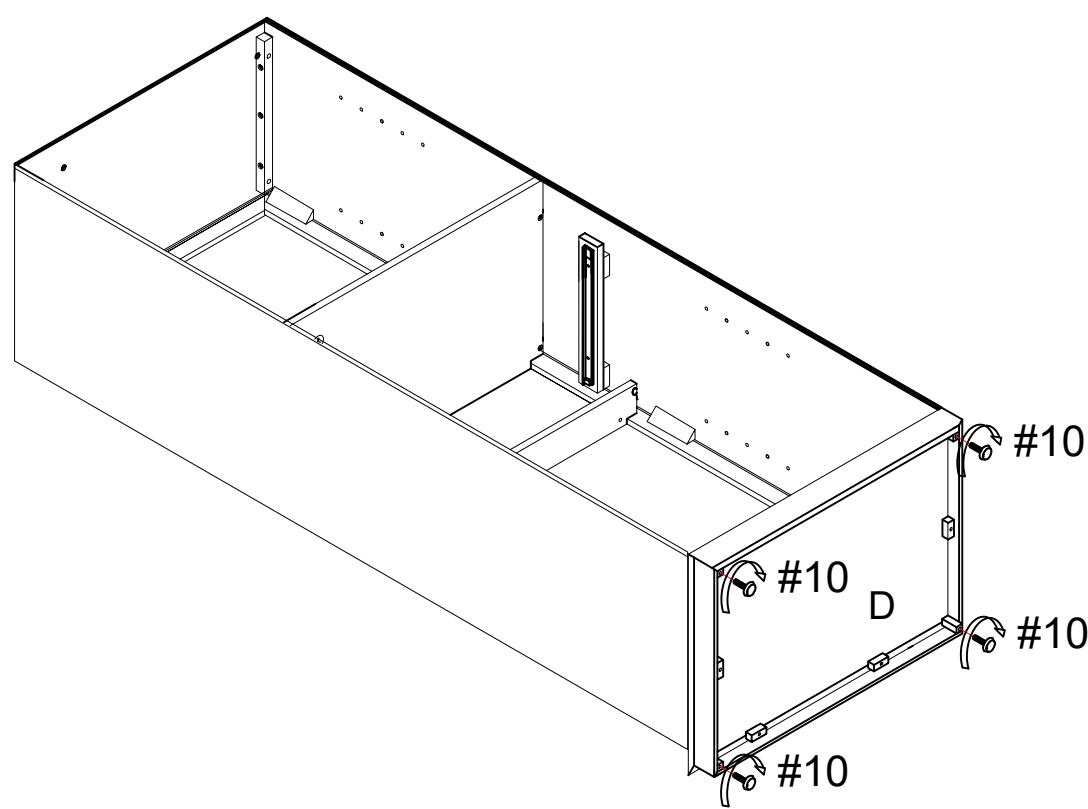 Step 8. Attach adjustable levelers (part #10) to bottom panel (part D).



#10  x 4

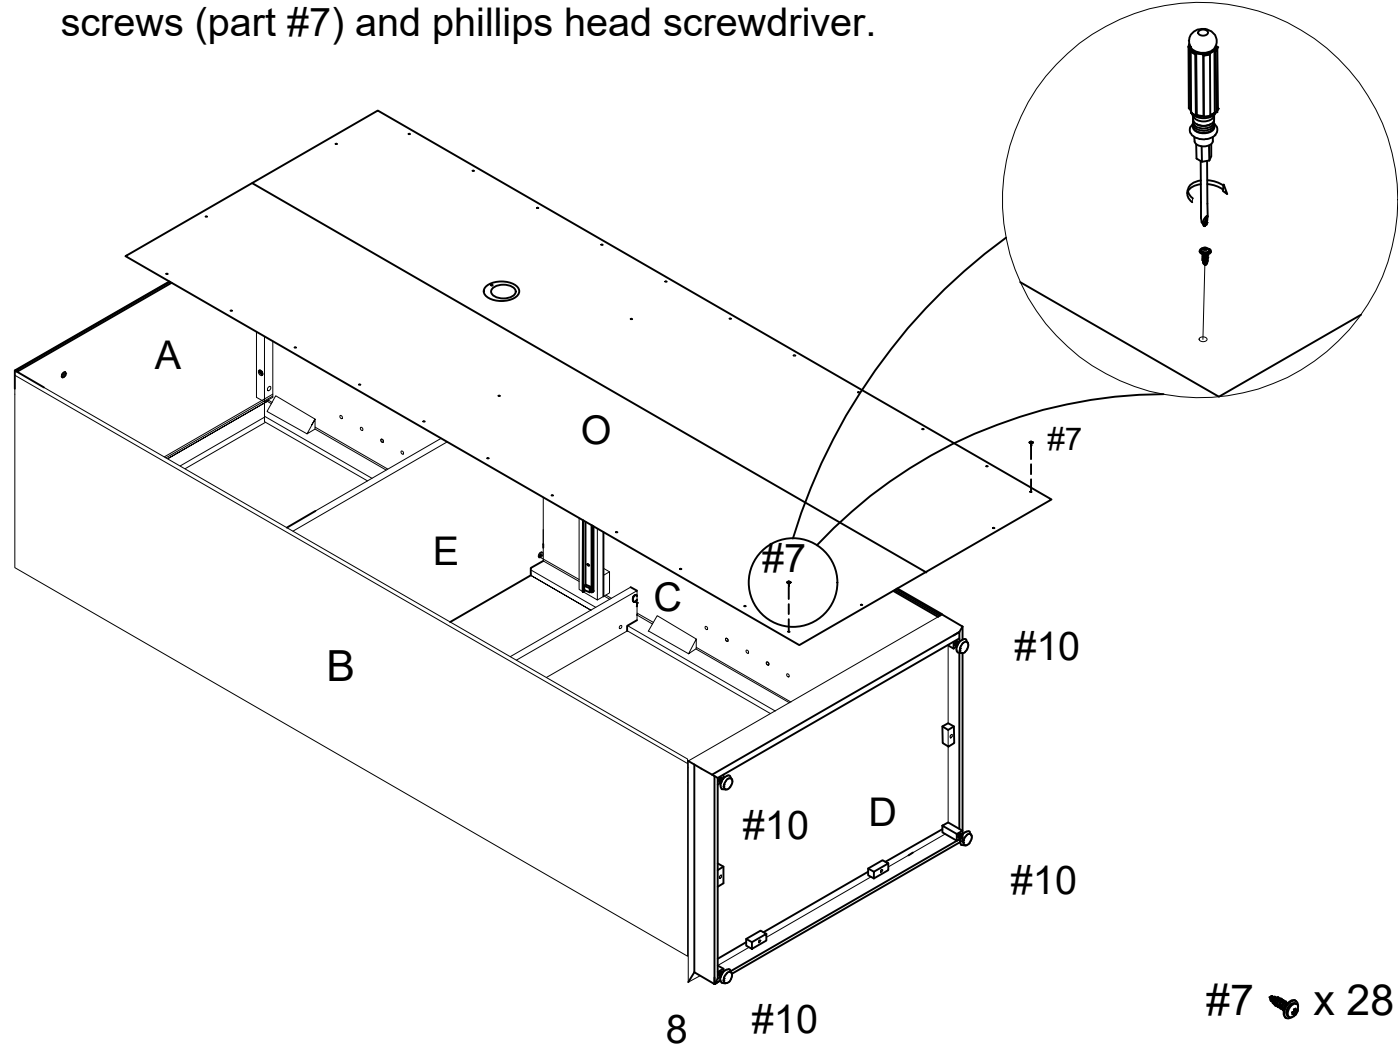 Step 9. Attach back panel (part O) to assembled unit (parts A, B, C, D & E) using screws (part #7) and phillips head screwdriver.



#7  x 28



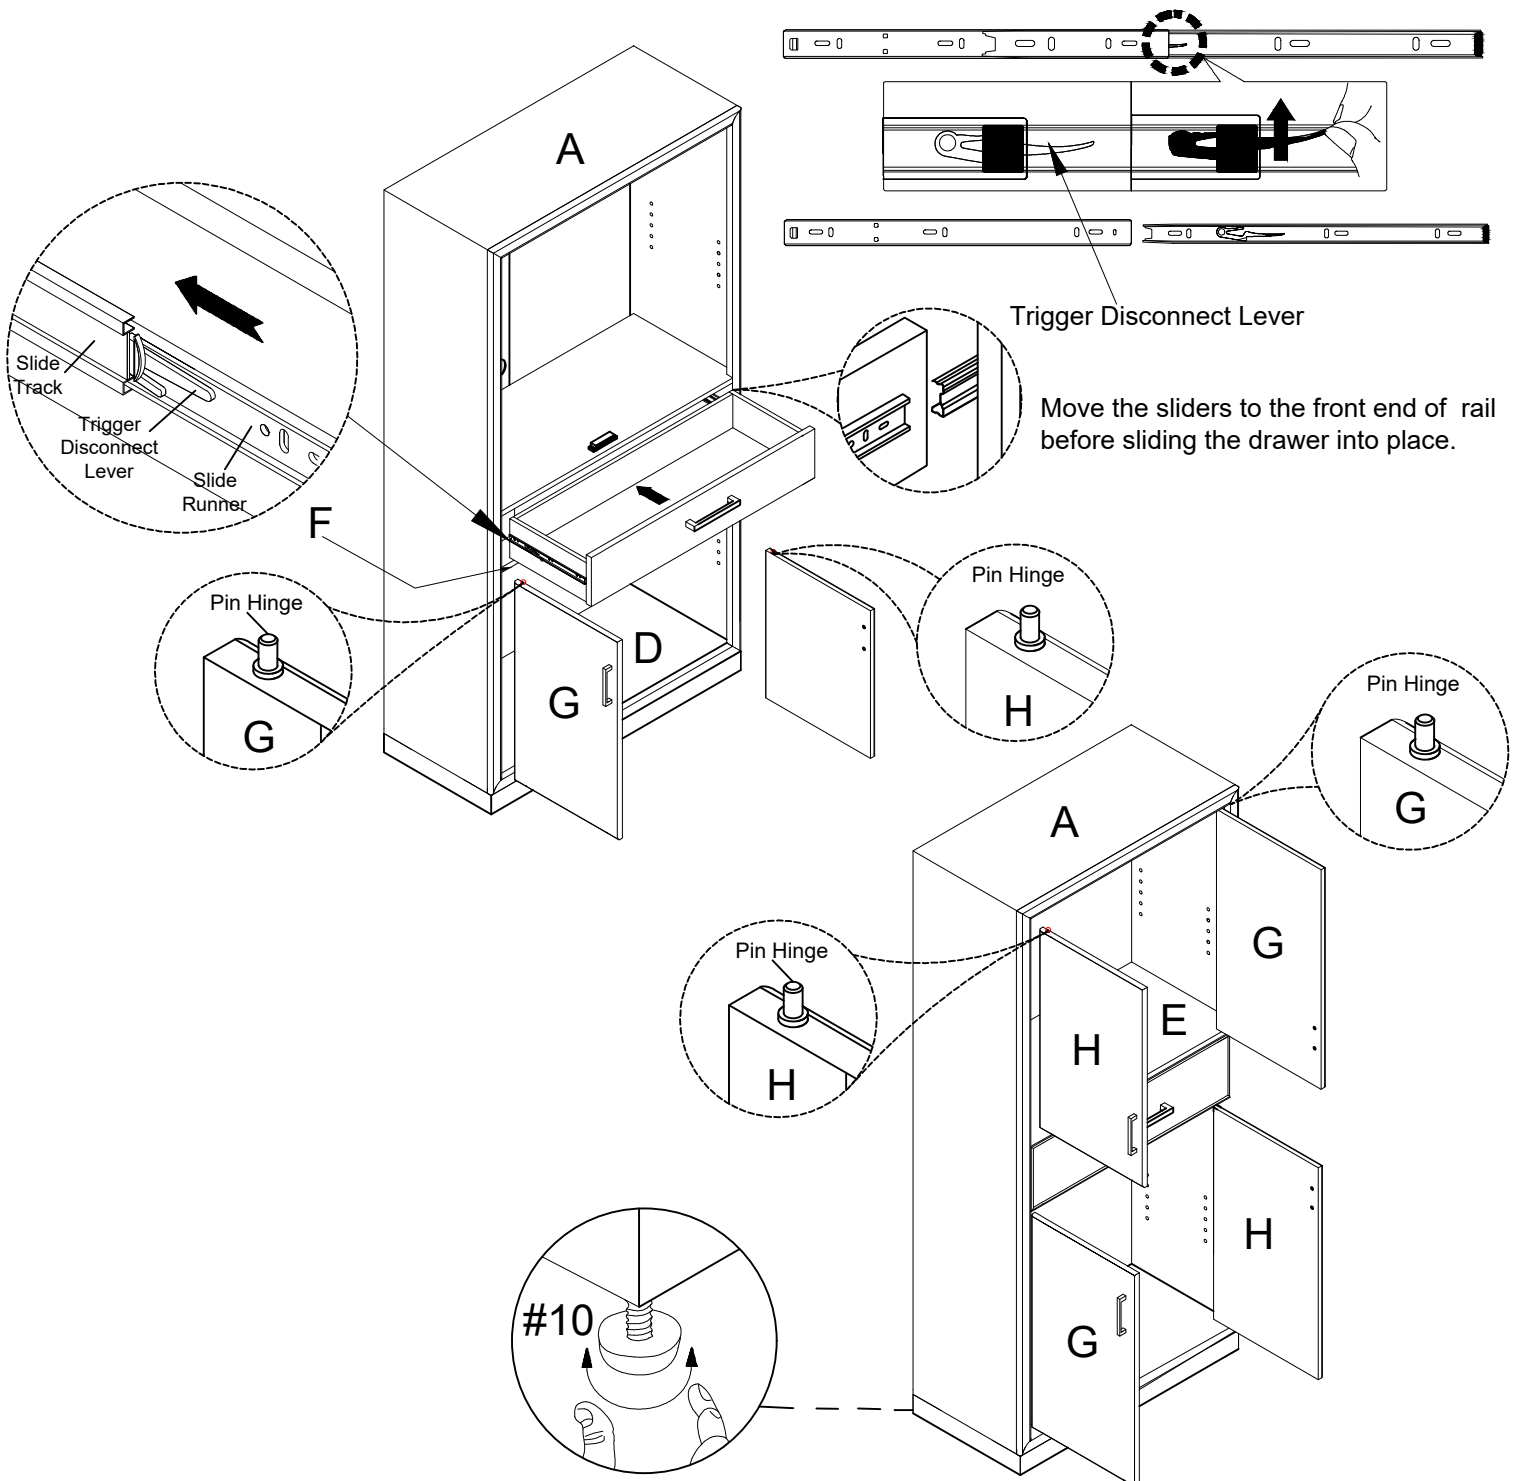 
Step 10. Carefully turn unit upright. Slide assembled drawer into place.

Attach doors (parts G & H) by placing bottom pin hinge (pre-installed in door) in the pre-drilled hole of bottom panel (part D) and fixed shelf (part E). Then depress the top spring-loaded pin hinge so it can be placed in the pre-drilled hole of rail (part F) and top panel (part A).

NOTE: Be sure top and bottom pin hinges are fully extended to secure door in place.

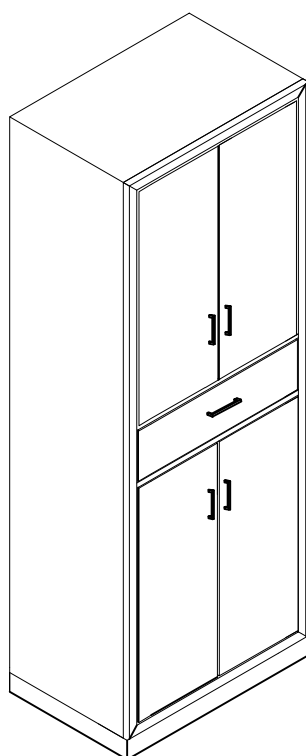 
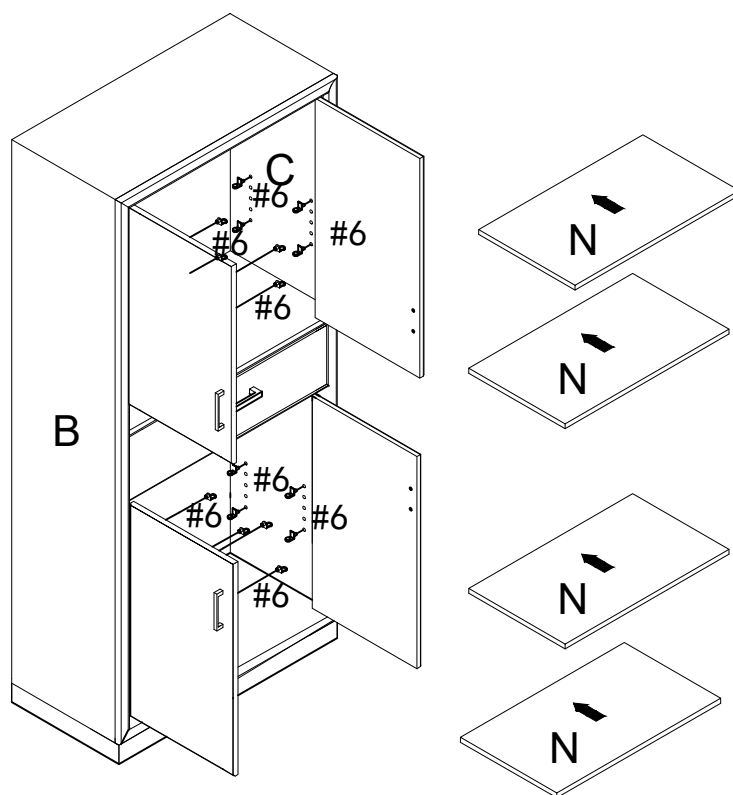 
NOTE: To release trigger disconnect levers push one side up and the other down.


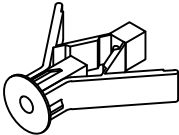



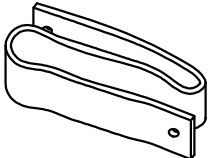 
**NOTE:** It is important to adjust levelers once fully assembled and upright. Extend adjustable leveler until it's firmly in contact with the floor. If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.



Step 11. Place shelf holders (part #6) into desired position and then slide adjustable shelves (part N) into place.

Important: Safety strap kit (part #12) must be installed to prevent tipping, damage and/or injury.




#12	A	B	C	D	E
			 D8*3/4"	 D8*1-1/2"	
Safety Strap Kit 1 SET	Wall Anchor 1 PC	Washer 2 PCS	Short Screw 1 PC	Long Screw 1 PC	Safety Wall Strap 1 PC

## SAFETY WALL STRAP INSTALLATION

Note: It is highly recommended to install this safety strap kit to prevent tipping, damage and/or injury.

1. Insert short screw (C) through washer (B) and safety wall strap (E) and attach to back panel (part O) using phillips head screwdriver.
2. Drill a 11/32" hole where you want to secure the unit. The drilled hole will be at the same height as the hole in back panel (part O) where the safety wall strap (E) is attached. Tap wall anchor (A) into the hole.
3. Insert long screw (D) through washer (B) and safety wall strap (E) into wall anchor (A) using phillips head screwdriver.

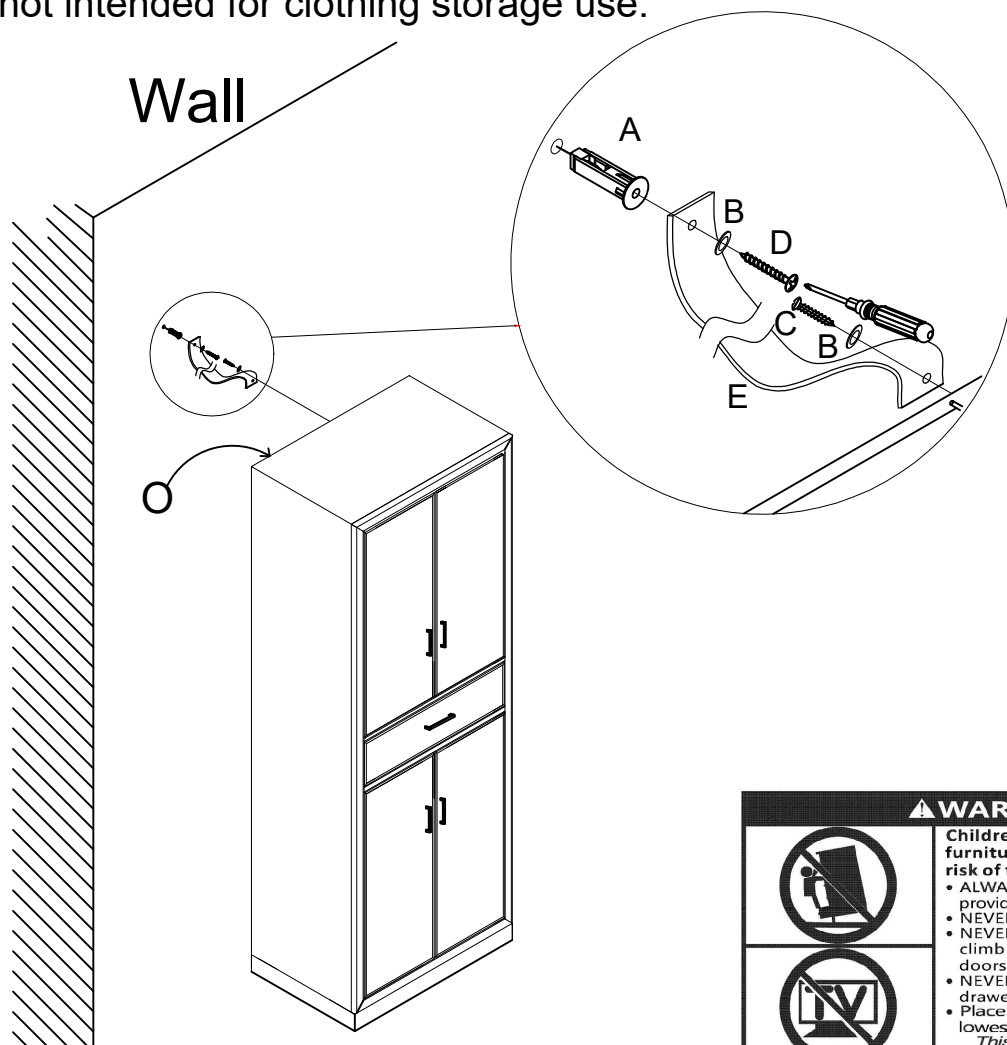 Note: This item is not intended for clothing storage use.



**⚠ WARNING**

Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

*This is a permanent label. Do not remove!*