

*ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE*



Fine Furniture for every stage of life

707726
MEDIA TOWER

ITEM:707726

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

 
 
 
 
 
 
 
 
 
 
 
 
1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

50 MINUTES

PARTS IDENTIFICATION

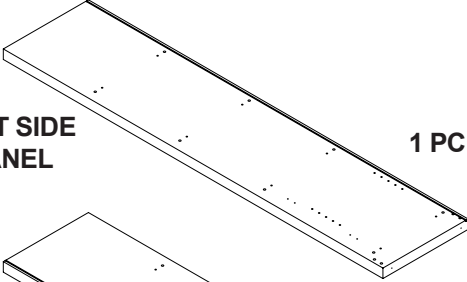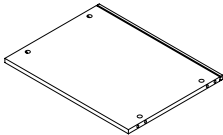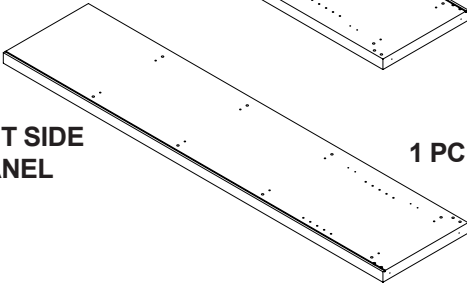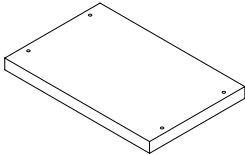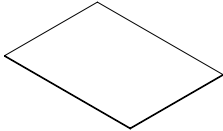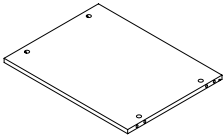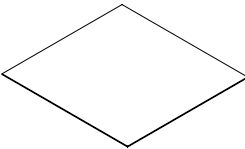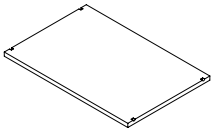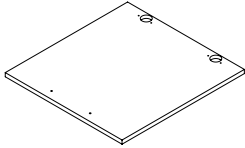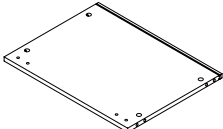 

 

 
 




 

 

 
 
A	LEFT SIDE PANEL		1 PC	G	UPPER CROSS PANEL		2 PCS
B	RIGHT SIDE PANEL		1 PC	H	TOP PANEL		1 PC
C	FRONT CROSS BRACE		1 PC	I	UPPER BACK PANEL		3 PCS
D	BOTTOM PANEL		1 PC	J	LOWER BACK PANEL		1 PC
E	ADJUSTABLE SHELF		1 PC	K	DOOR		1 PC
F	LOWER CROSS PANEL		1 PC	L	BACK CROSS BRACE		1 PC

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM:707726

HARDWARE IDENTIFICATION**Z**

NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 40g		1 PC	9	HANDLE BOLT M5x25mm BLK		2 PCS
2	WOODEN DOWEL ø8x30mm		28 PCS	10	NUT M5		2 PCS
3	CAM BOLT ø7x35.5mm SR		16 PCS	11	HINGE ø35mm SR		2 PCS
4	CAM LOCK ø15x12mm SR		16 PCS	12	HINGE SCREW ø4x15mm SR		8 PCS
5	PLASTIC FEET Ø15mm		4 PCS	13	FIXER		6 PCS
6	PIN FOR ADJUSTABLE SHELF ø4.9x8mm SR		4 PCS	14	FIXER SCREW ø3x19mm SR		6 PCS
7	DOOR CATCH		1 PC	15	SCREW Ø4.5x42mm SR		4 PCS
8	HANDLE BLK		1 PC	16	STICKER ø20mm		3 PCS

Z8,Z9,Z10,Z11 not included in blister packaging.

 
 
 
 
NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: 707726

STEP 1





COASTER
FINE FURNITURE

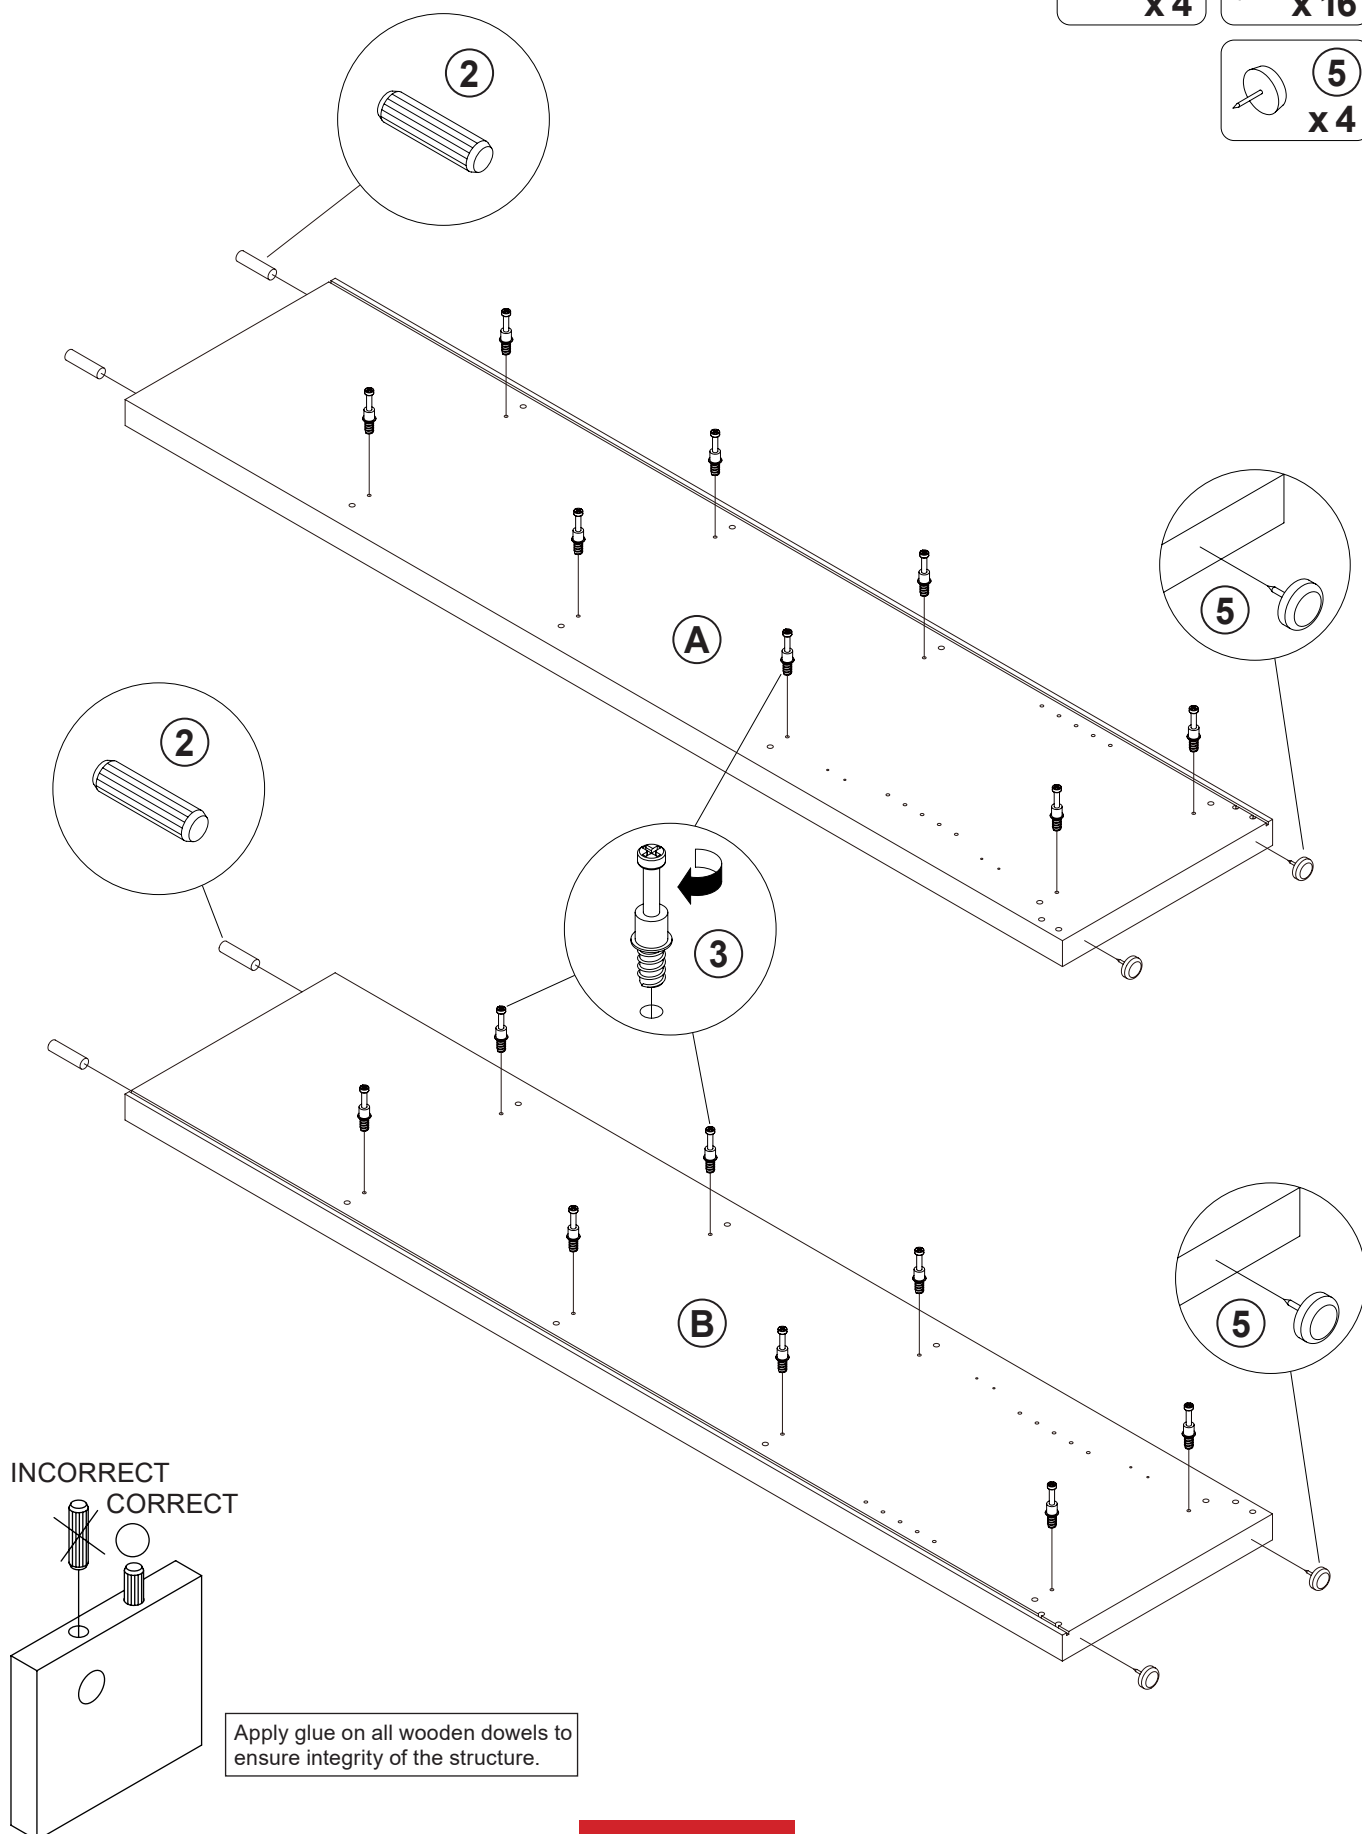

ITEM: **707726**

STEP 2

    COASTER
FINE FURNITURE

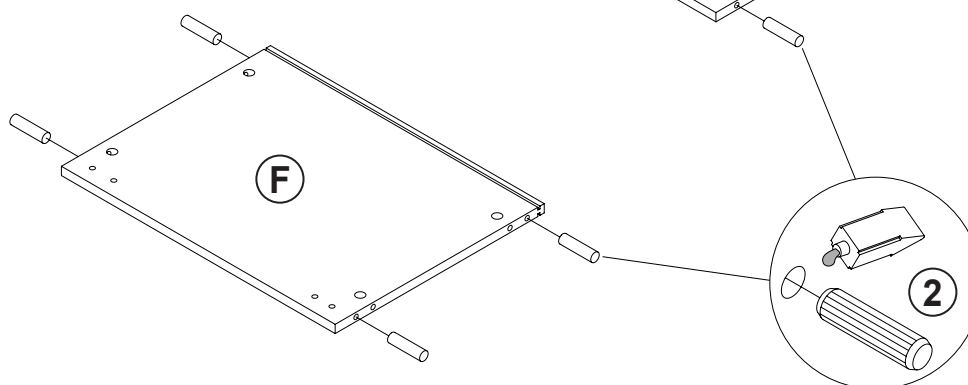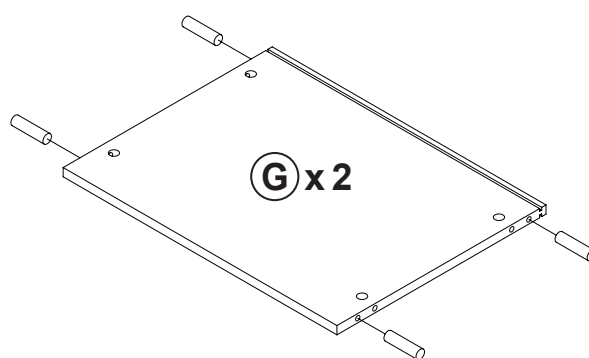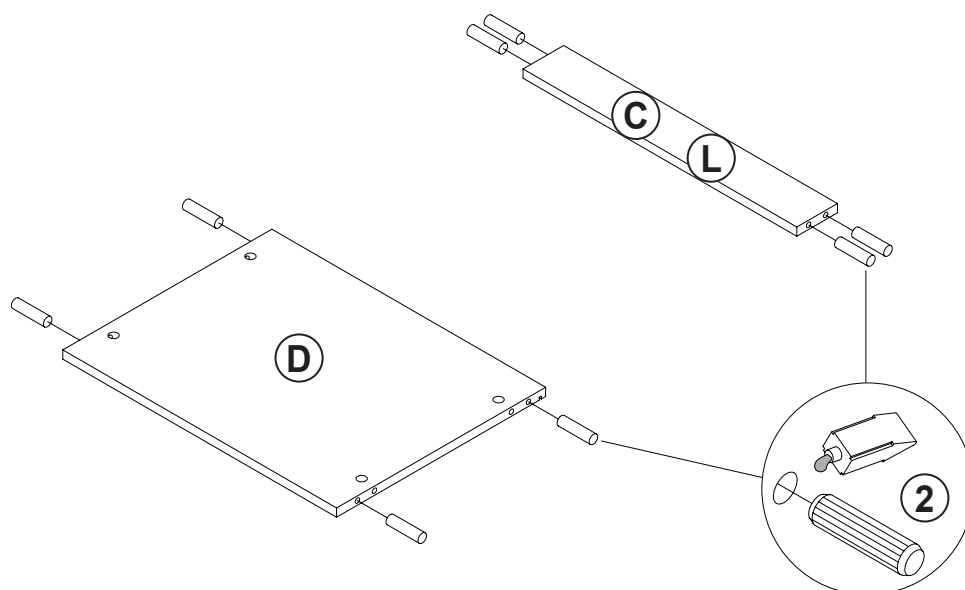



Apply glue on all wooden dowels to ensure integrity of the structure.


ITEM: 707726

STEP 3

  COASTER
FINE FURNITURE

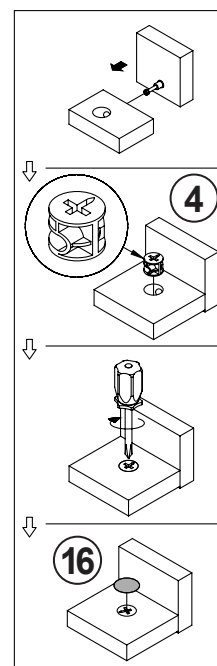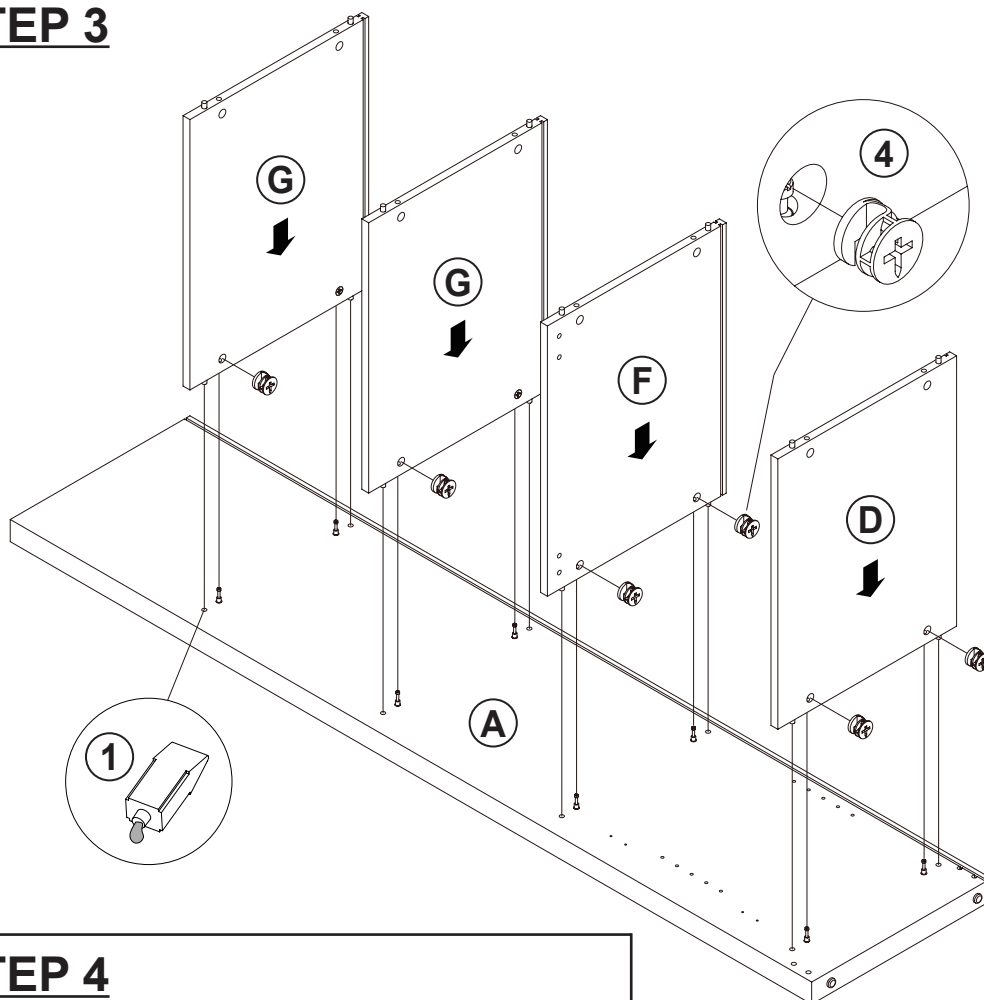

 STEP 4


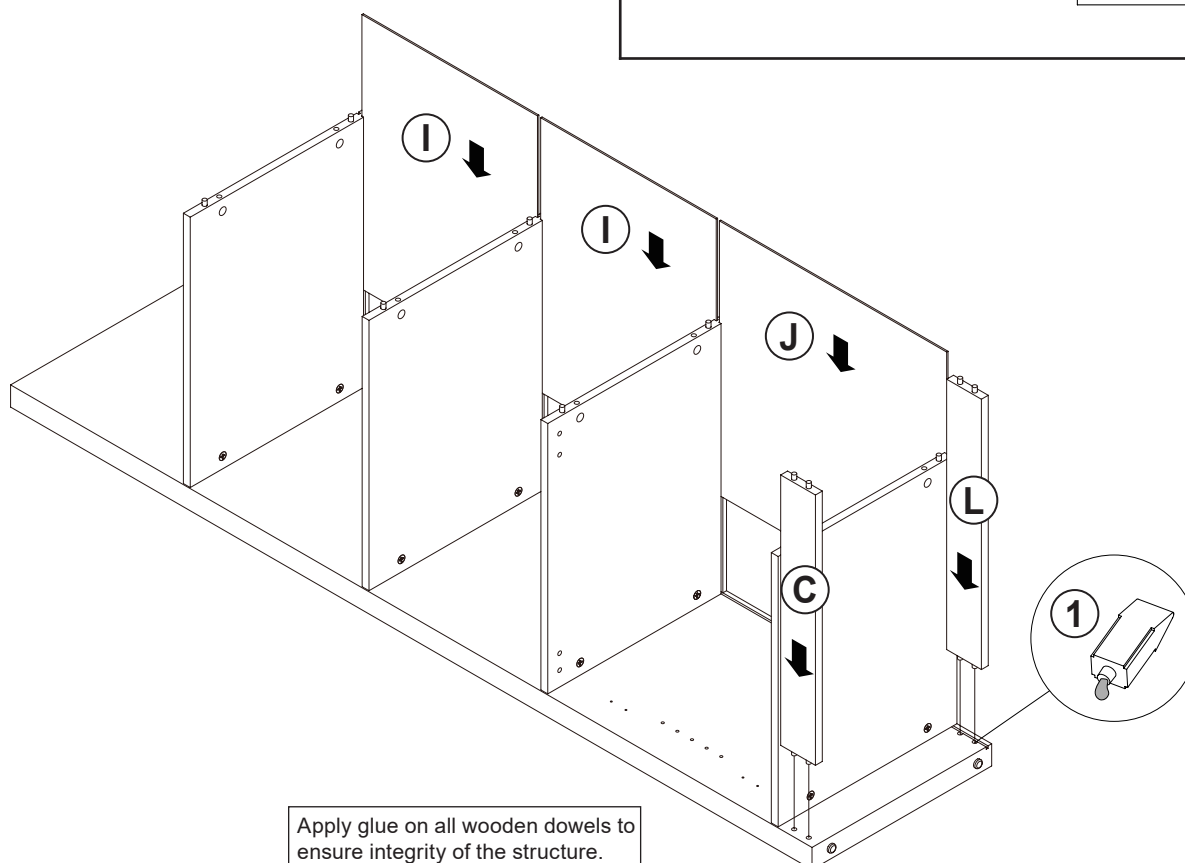


Apply glue on all wooden dowels to ensure integrity of the structure.


ITEM: **707726**

STEP 5

  COASTER
FINE FURNITURE

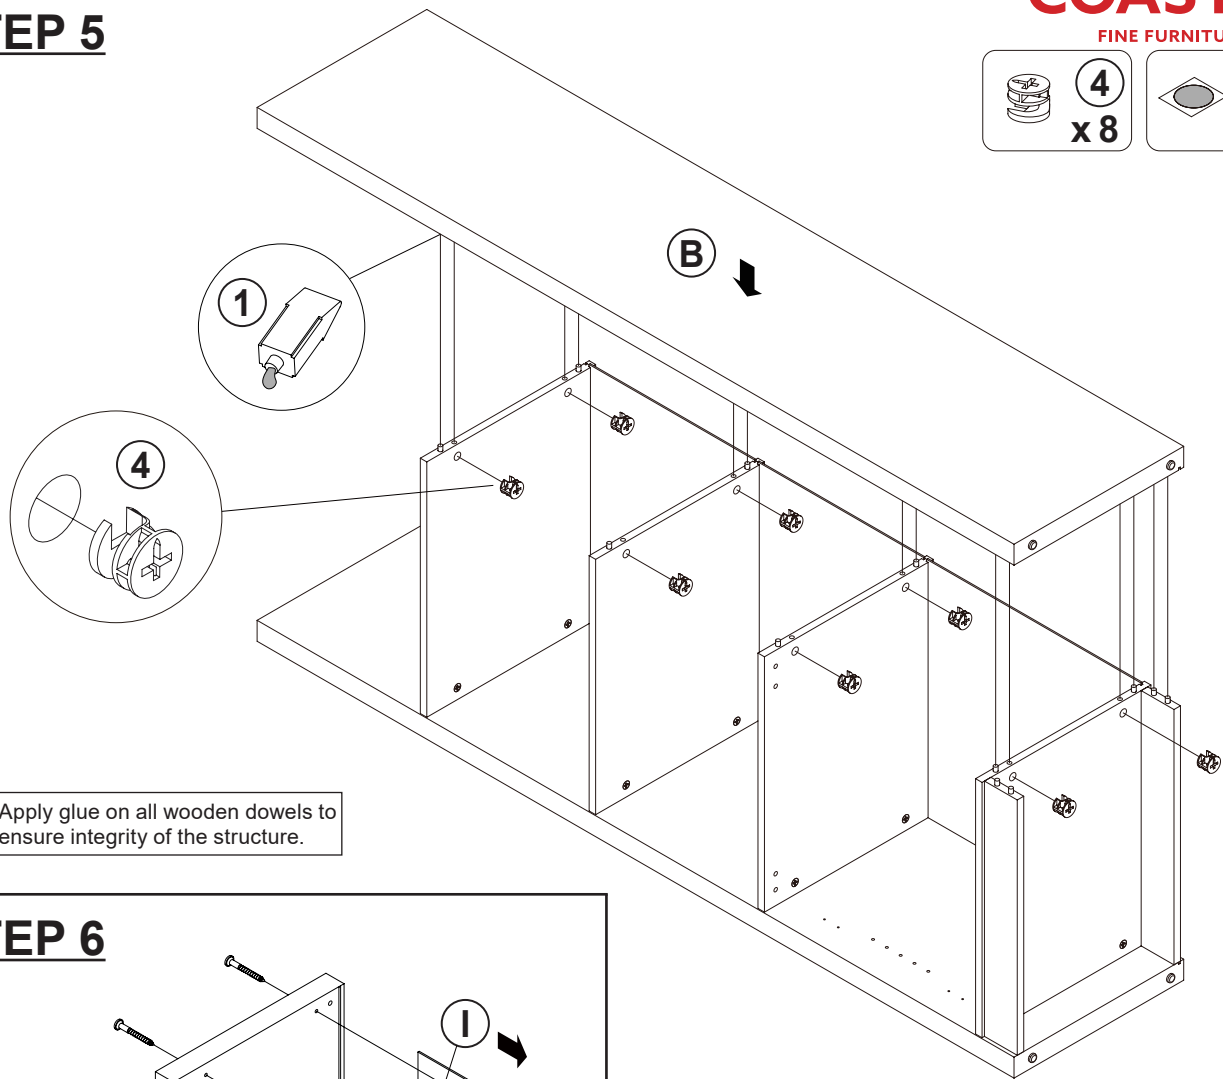


 
STEP 6

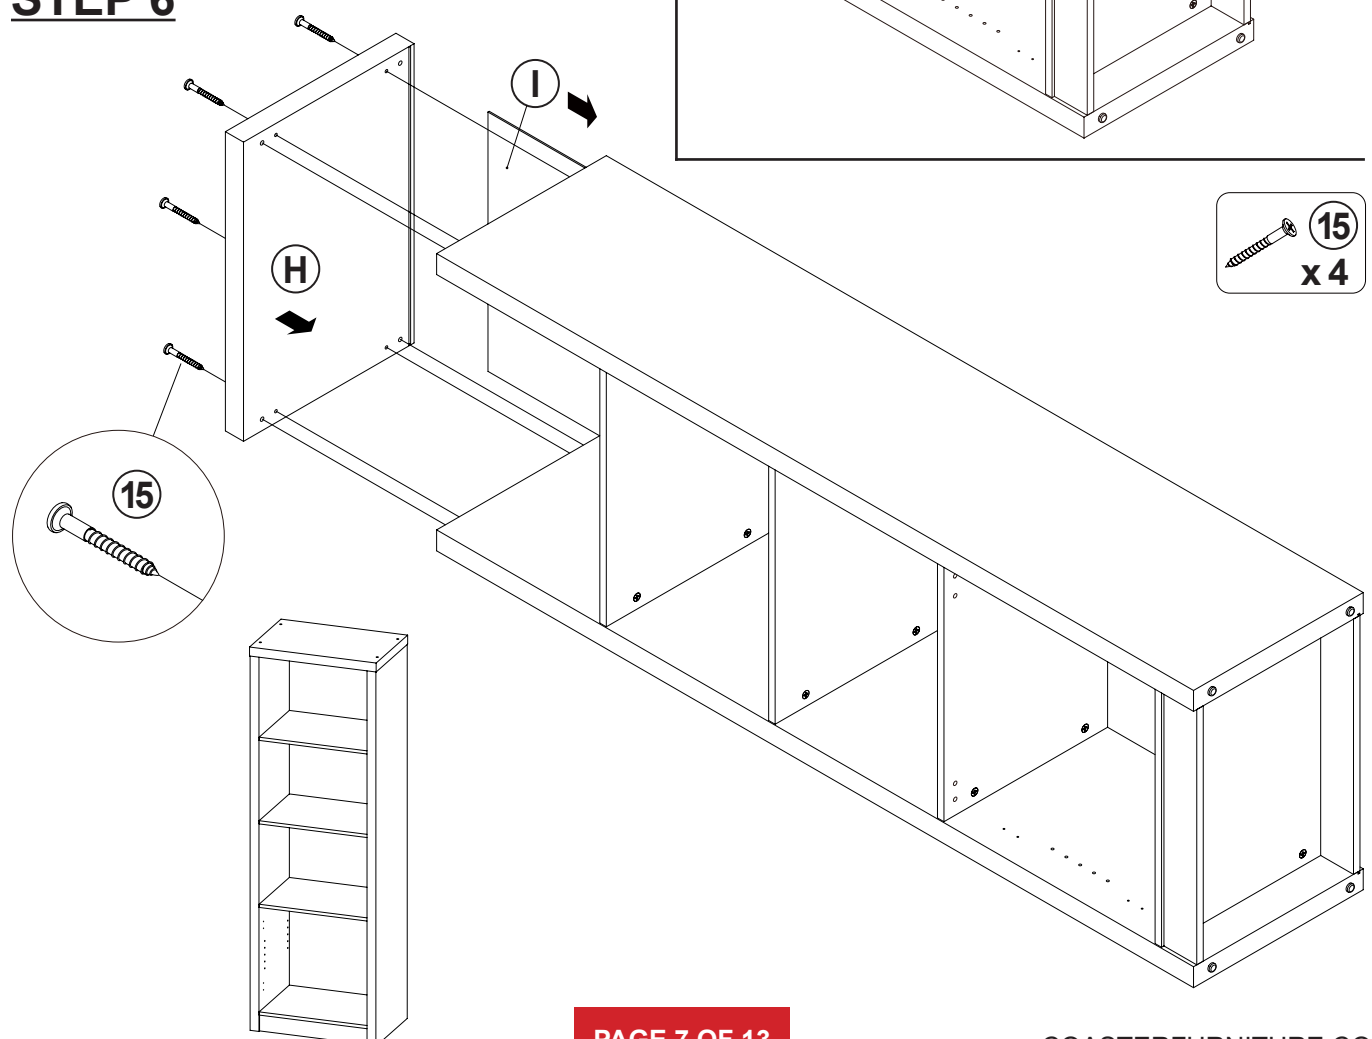




ITEM: **707726**

STEP 7

  COASTER
FINE FURNITURE

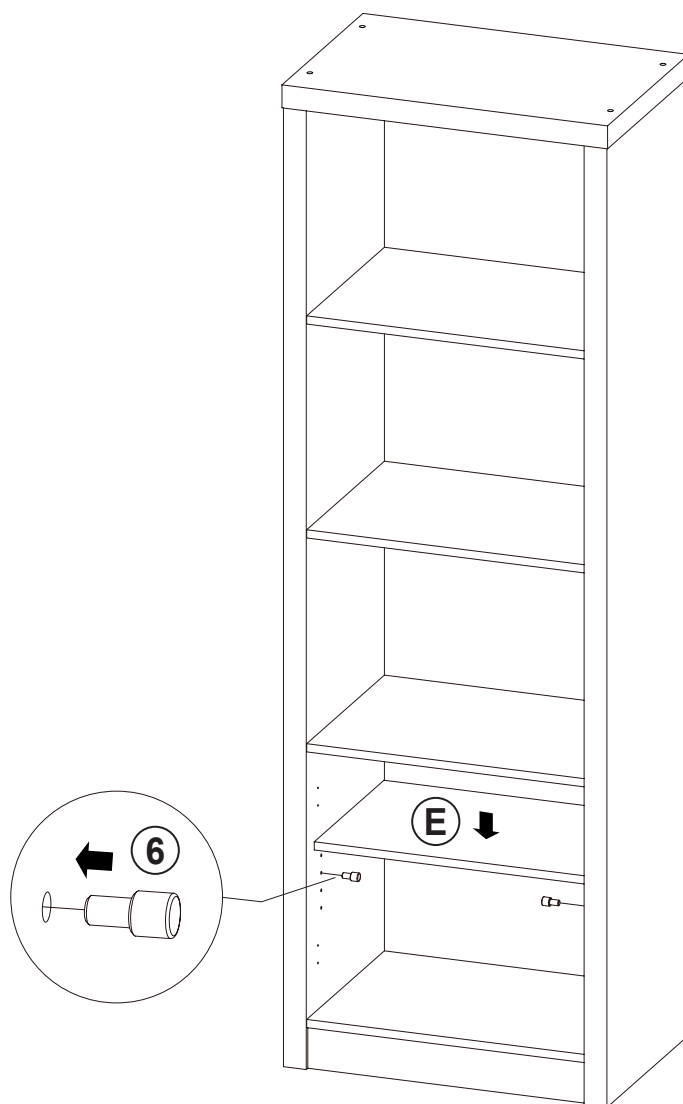

   STEP 8

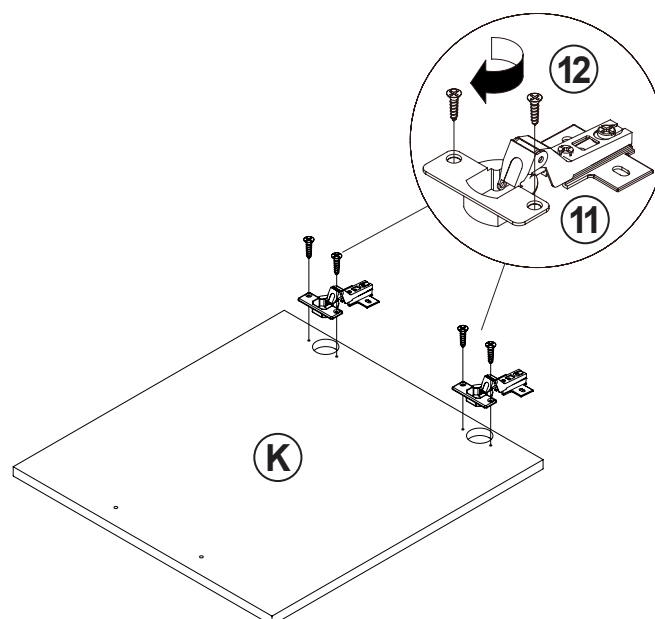



ITEM: **707726**


COASTER
FINE FURNITURE

STEP 9

  LEFT

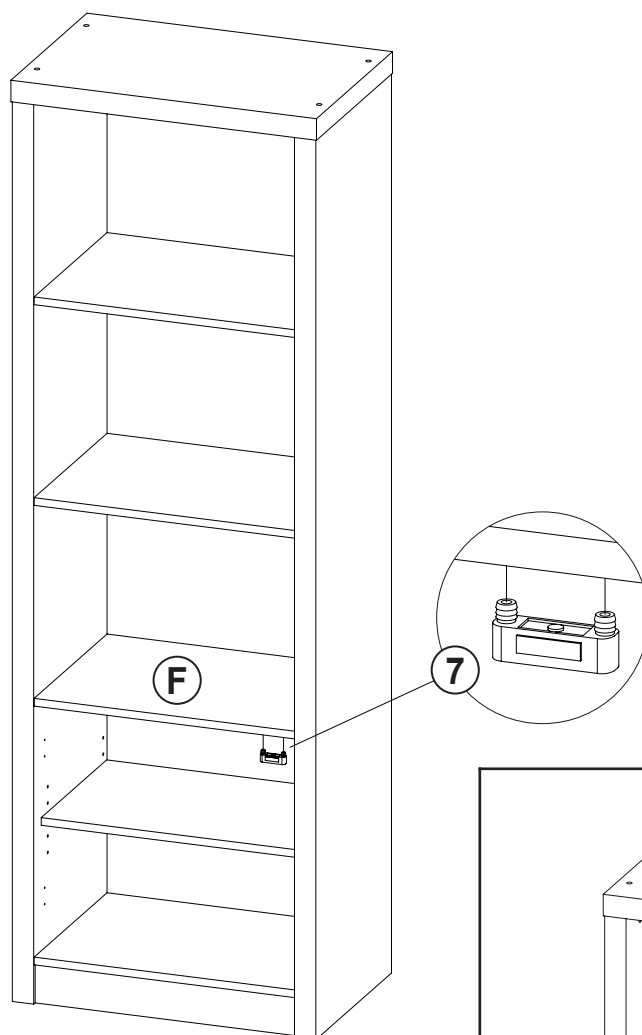



RIGHT

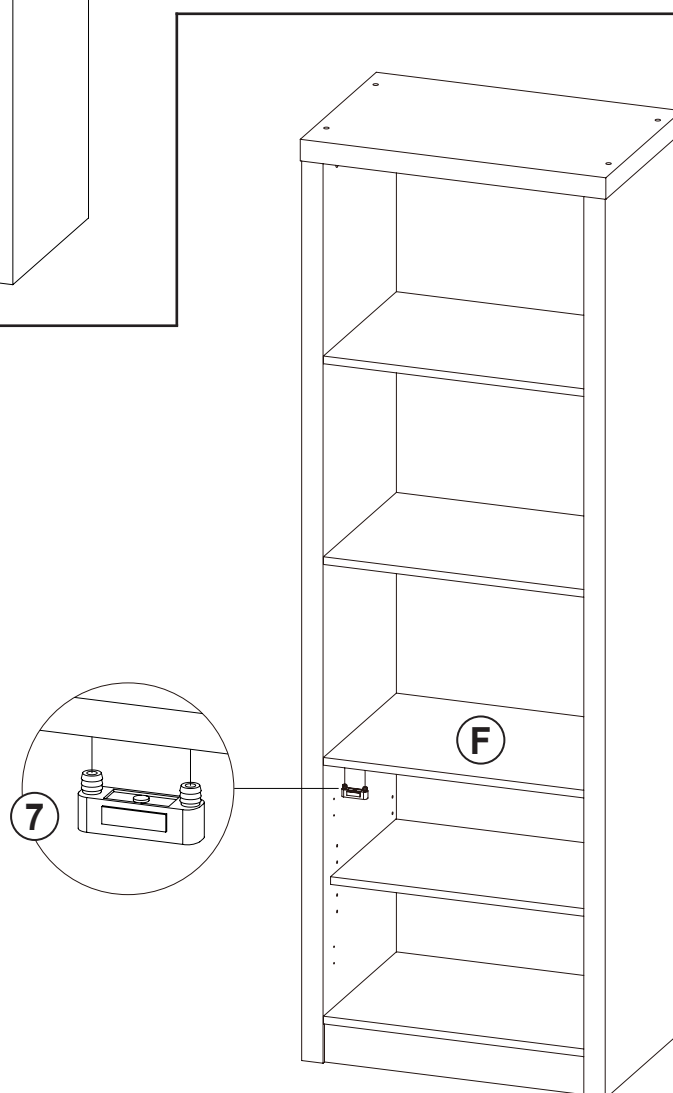 



ITEM: 707726

STEP 10

  
COASTER
FINE FURNITURE

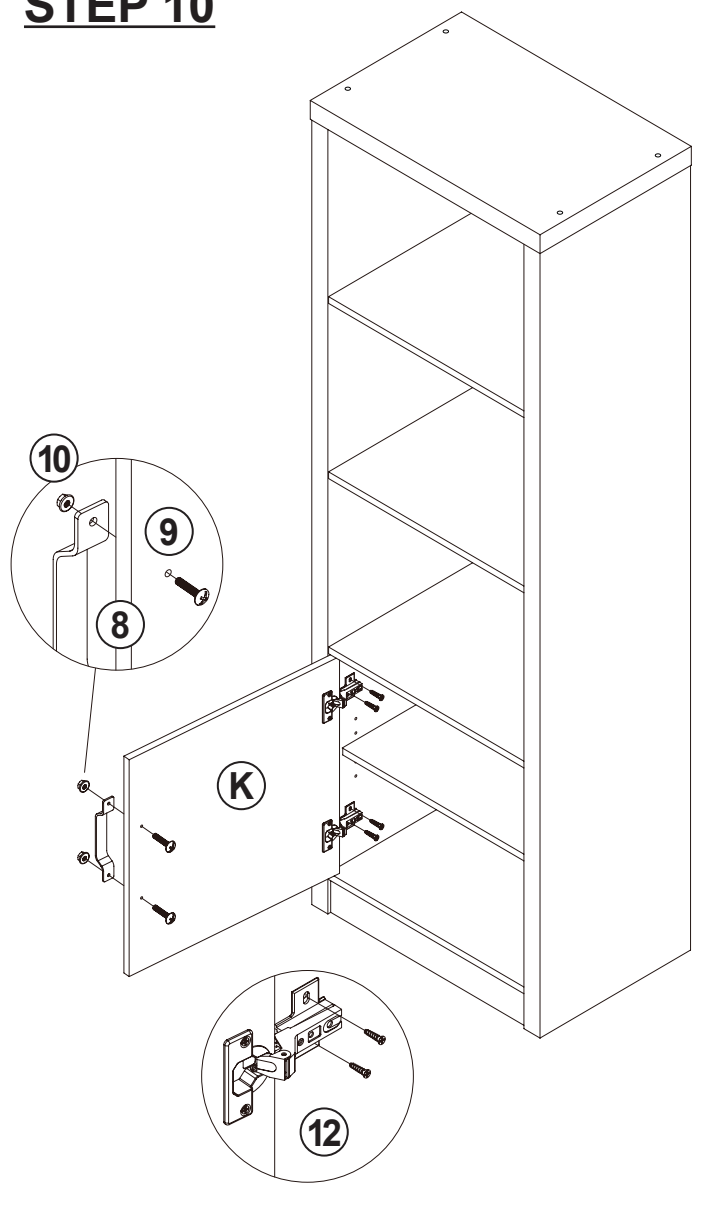


RIGHT

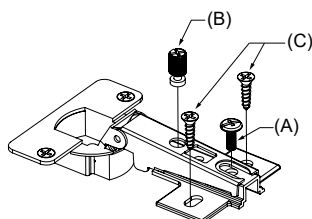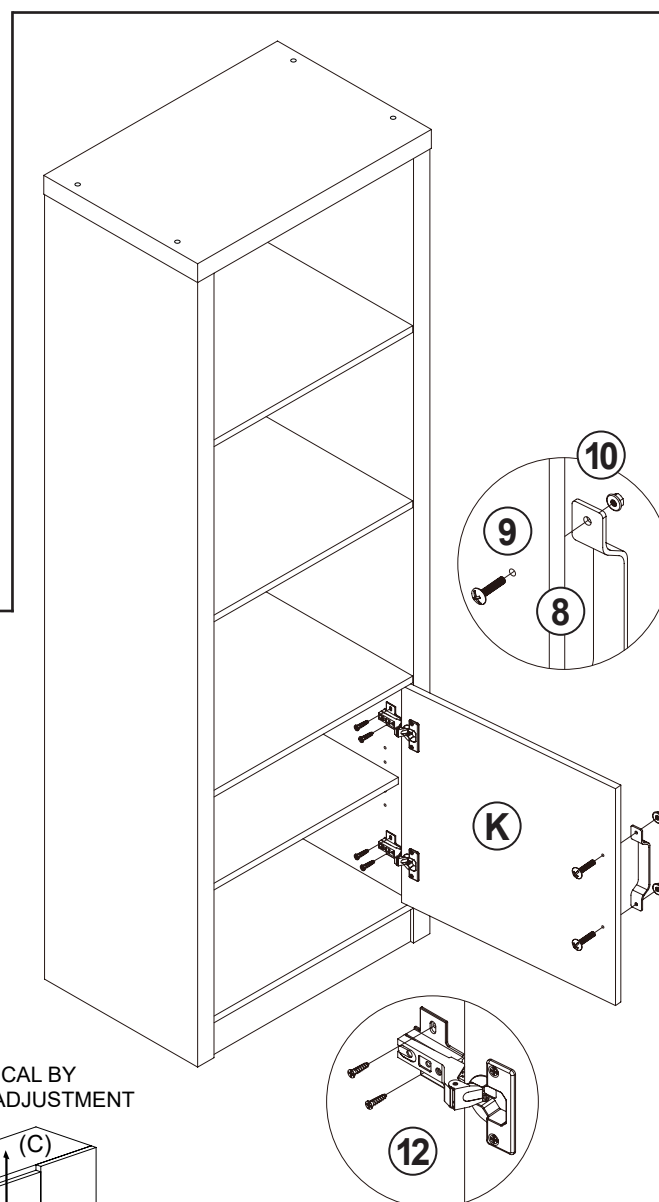  


HORIZONTAL BY
SCREW A ADJUSTMENT

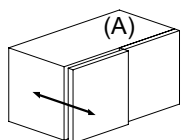 

LATERAL BY
SCREW B ADJUSTMENT

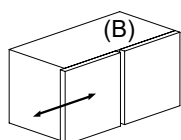 






VERTICAL BY
SCREW C ADJUSTMENT

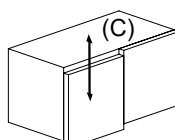 



ITEM: **707726**

STEP 11

     
COASTER
FINE FURNITURE

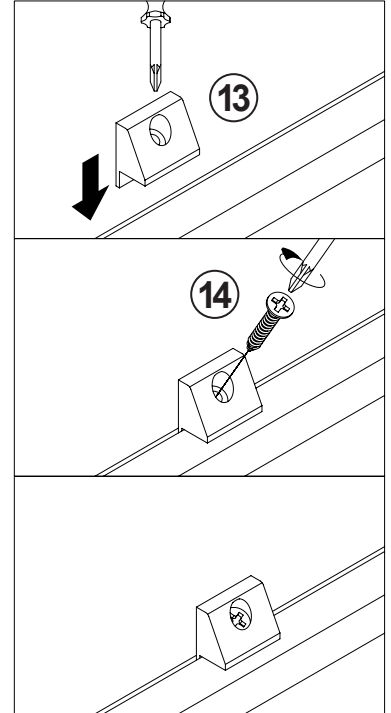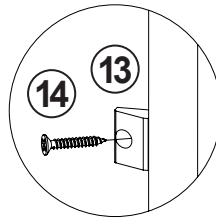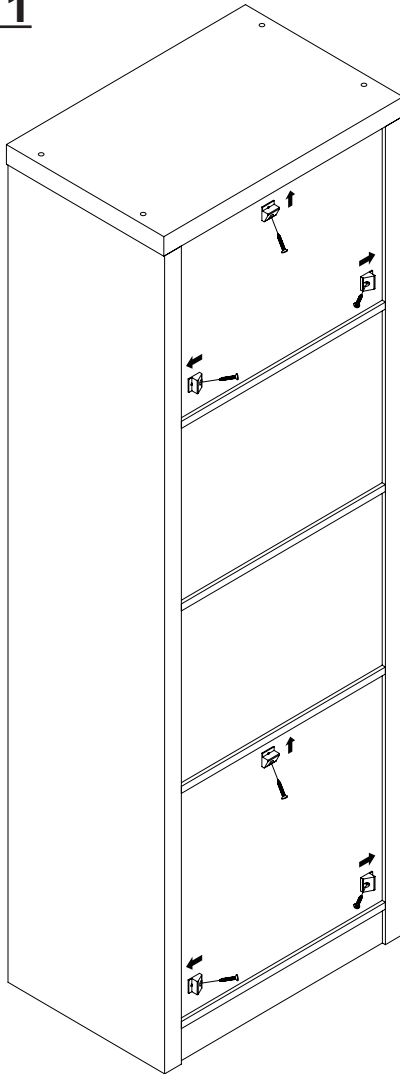

  STEP 12

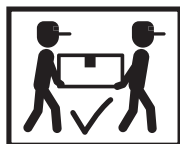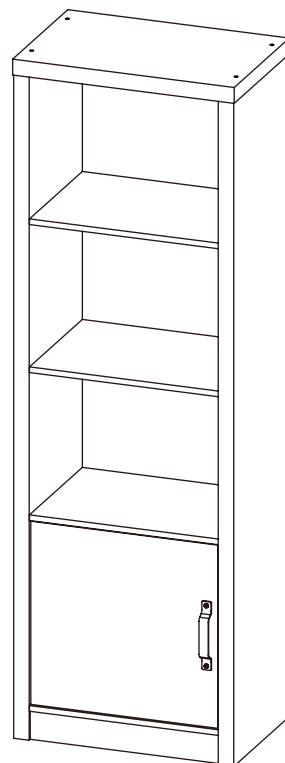

ITEM: 707726

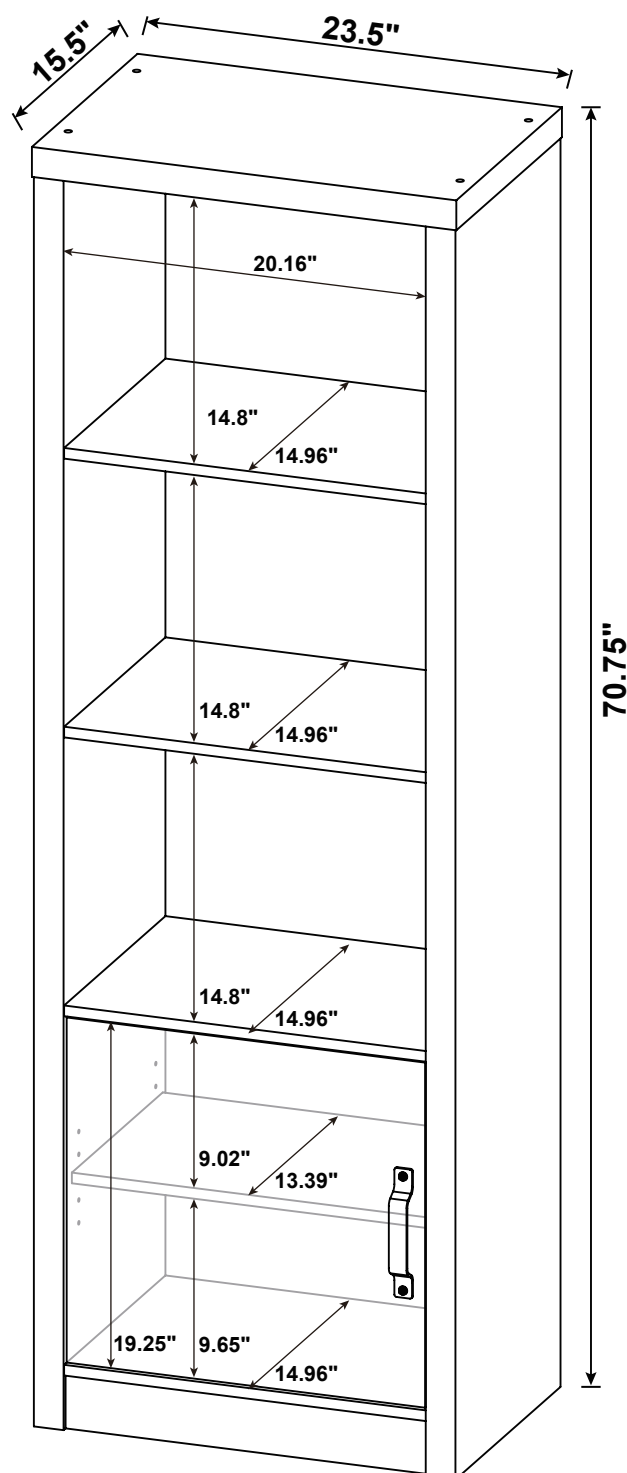 

Note : Dimension tolerance $\pm 5\%$

ANTI-TIPPING INSTALLMENT INSTRUCTIONS

FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture.
This restraint may protect against tipping furniture.
Do not allow children to climb on furniture.
This restraint is not a substitute for proper adult supervision.
Failure to detach this restraint before moving the furniture
may result in injury and damage.

1. To attach the anti-tip strap, securely mount one end to the top of the case piece with the 5/8" screw.
2. Position the case piece against the wall in the desired location.
3. Pull the anti-tip strap taut and mark the position of where you will secure the other end on the wall.
4. Drill a 1-1/4" hole in the spot you marked.
5. Tap in plastic wall plug.
6. Fasten anti-tip strap with wall screw provided.

(Please install the anti-tipping kit in the middle of the case piece if only have one set of anti-tipping kit.)

