



 
Parker Living®
HORIZON

MODEL : CLAYTON SECTIONAL

ASSEMBLY INSTRUCTIONS NOTICE DE MONTAGE

*Please keep these instructions and have the product model # and part # available when requesting a service.

LEFT ARM

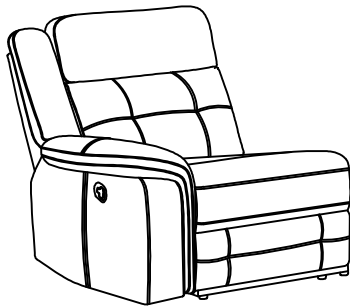


ENTERTAINMENT CONSOLE




MANUAL ARMLESS RECLINER



 
CORNER WEDGE

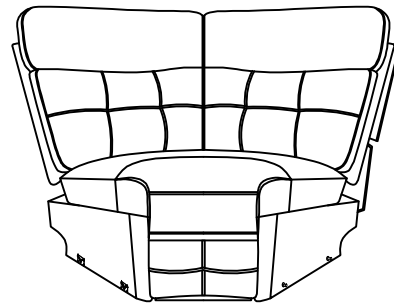

ARMLESS CHAIR

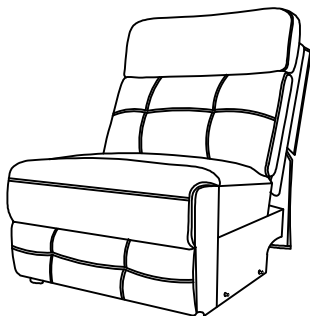 


RIGHT ARM

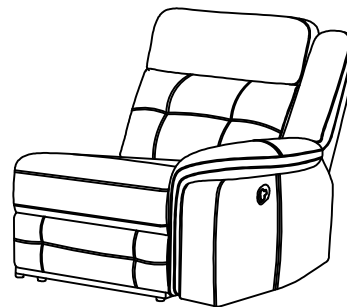 

IMPORTANT NOTE

 
Do not use a power tool to assemble this product as it could damage the thread of the hardware and affect the solidity/durability of the product.



MADE IN VIET NAM

Page 1 of 6

 A x 1

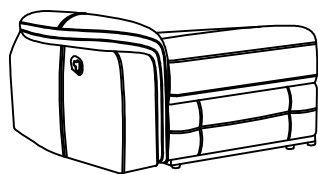

B x 1

 


C x 1




LEFT ARM


STEP 1

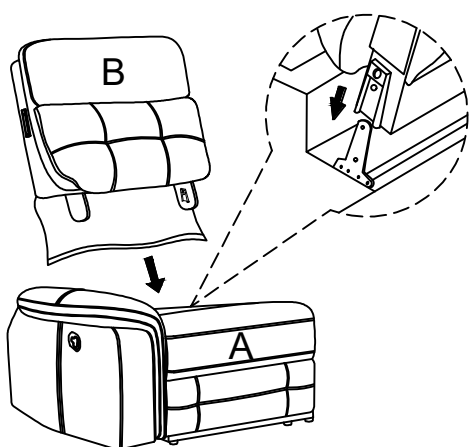

 
STEP 2

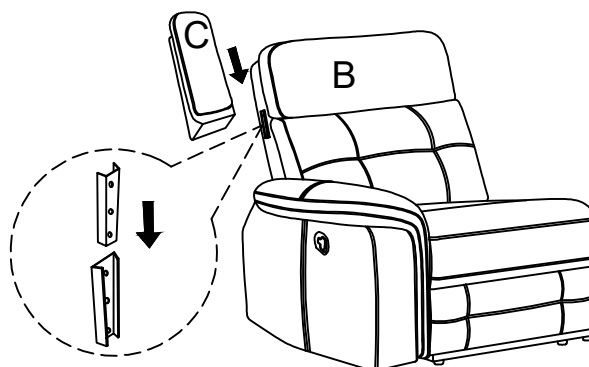

 
STEP 3

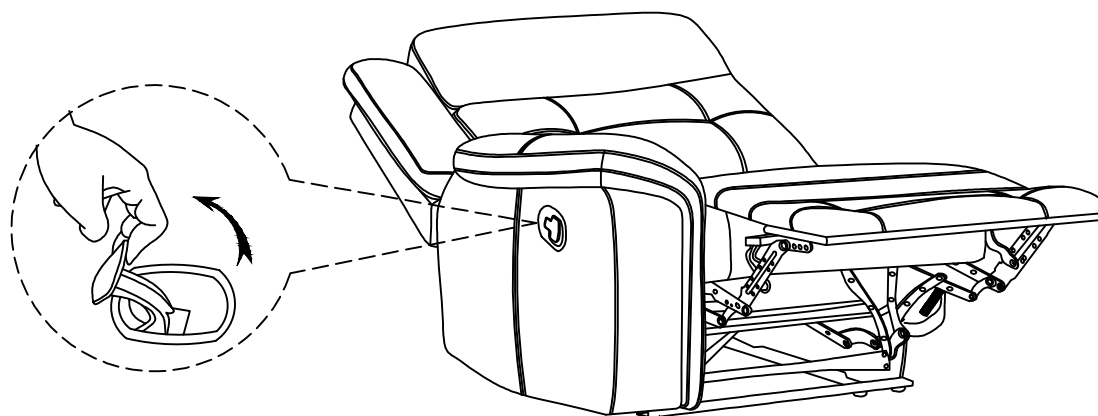


D x 1

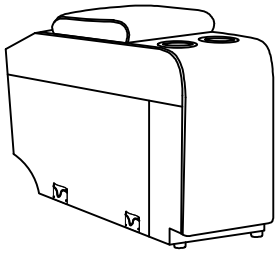 

E x 1

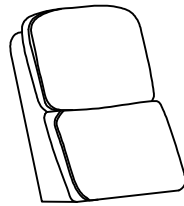 


F x 2

 


ENTERTAINMENT CONSOLE

 
STEP 4

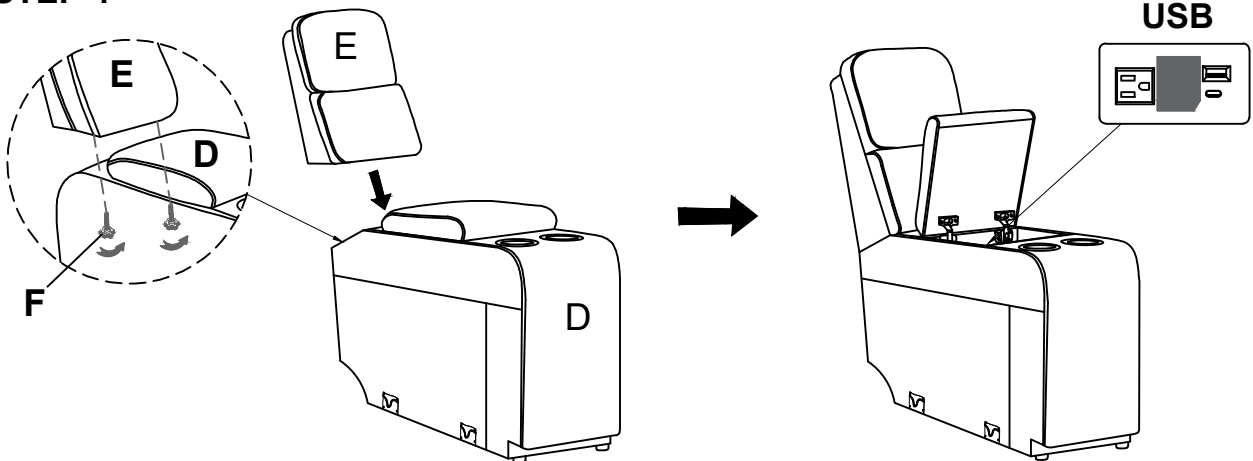

G x 1

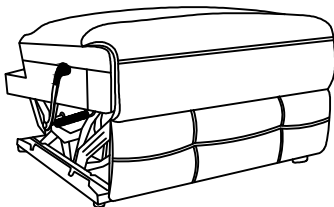 


H x 1

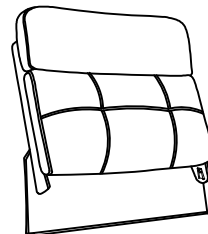 

MANUAL ARMLESS RECLINER

 
STEP 5

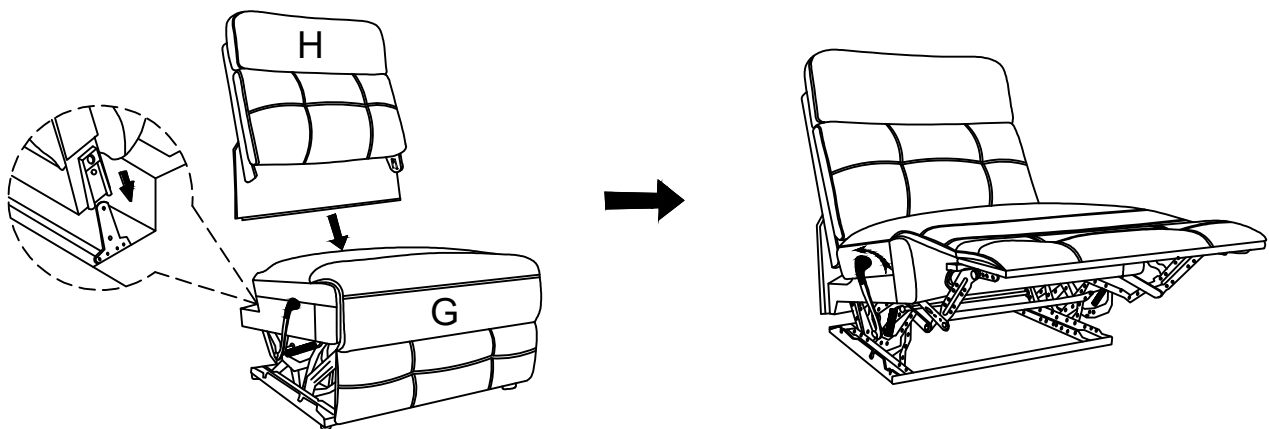

I x 1



 J x 1

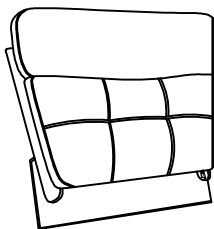


K x 2




CORNER WEDGE

 
STEP 6

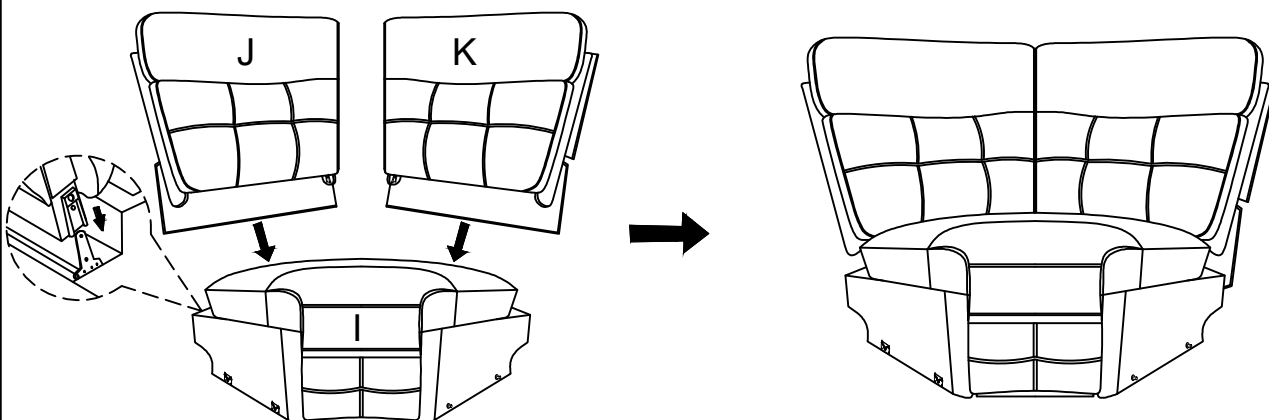

L x 1

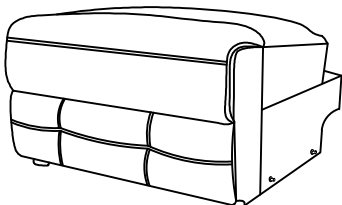 


M x 1

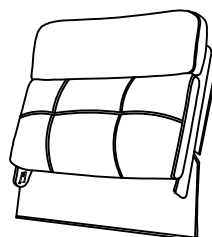 


ENTERTAINMENT CONSOLE

 STEP 7

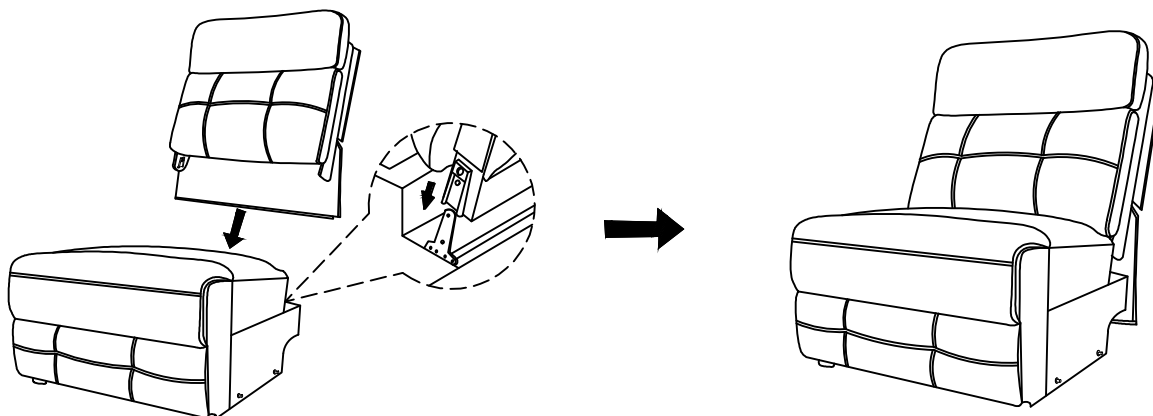

N x 1

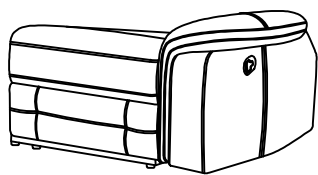 

O x 1

 


P x 1




RIGHT ARM


STEP 8

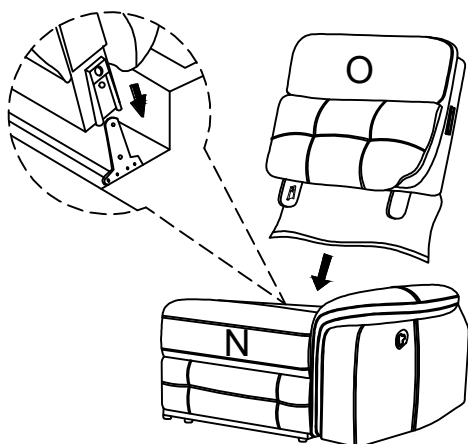

 
STEP 9

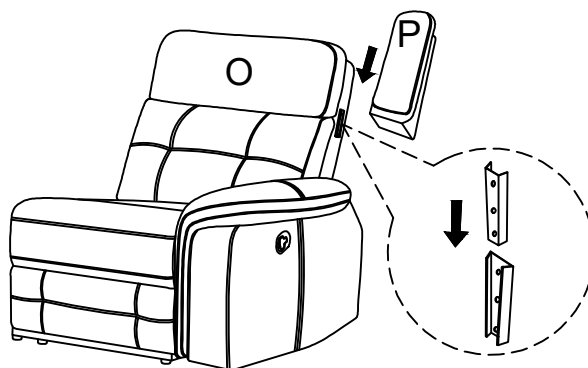

 STEP 10

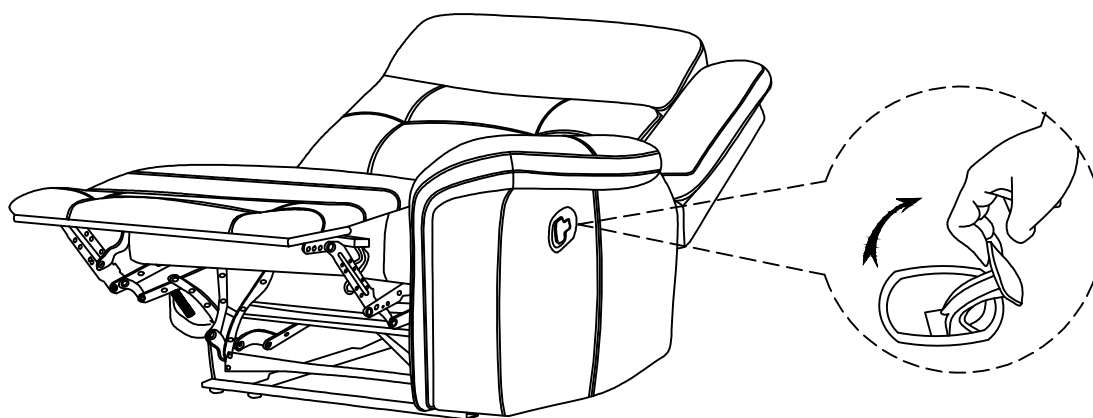

 STEP 11

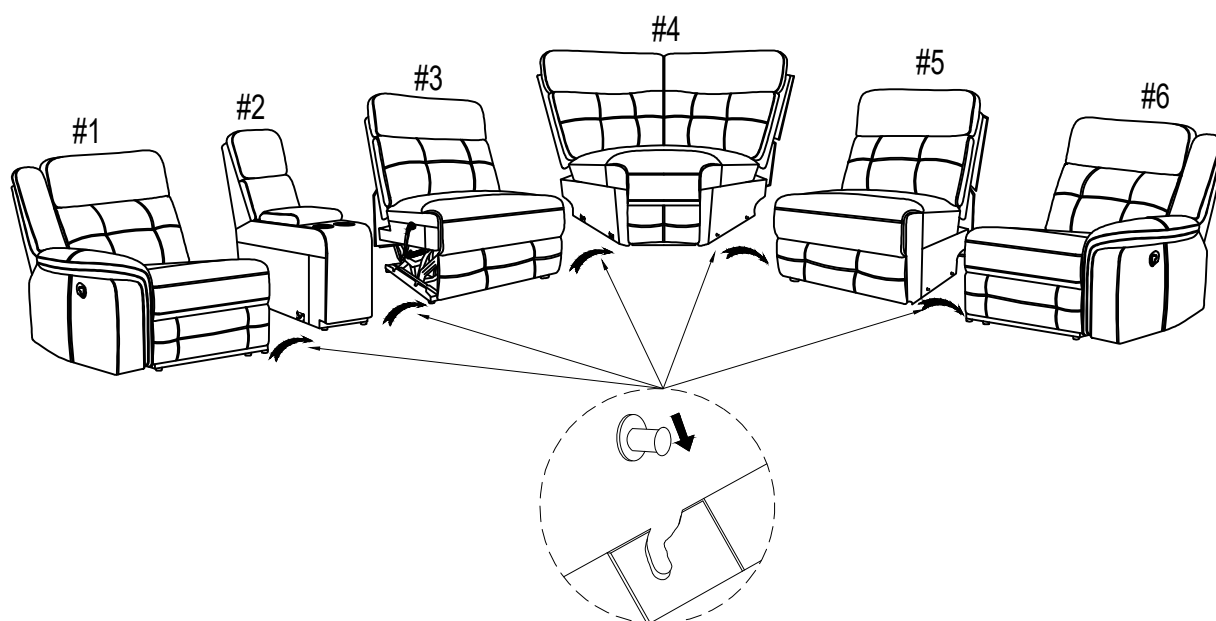

To connect your sectional pieces start with the piece on the left side when facing the sectional(#1). Hook the pins of the piece you want next to it into the slots on the bottom of item #1, continue connecting the remaining sectional piece in order. You can configure the pieces many ways. To disconnect, go in the reverse direction, in the drawing below you would begin with #6.

COMPLETED

