 
 
 
 



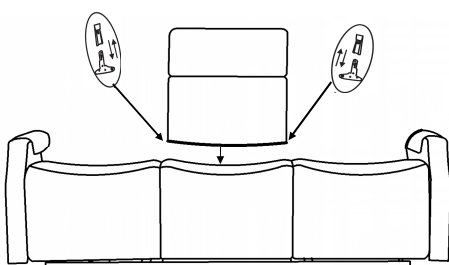
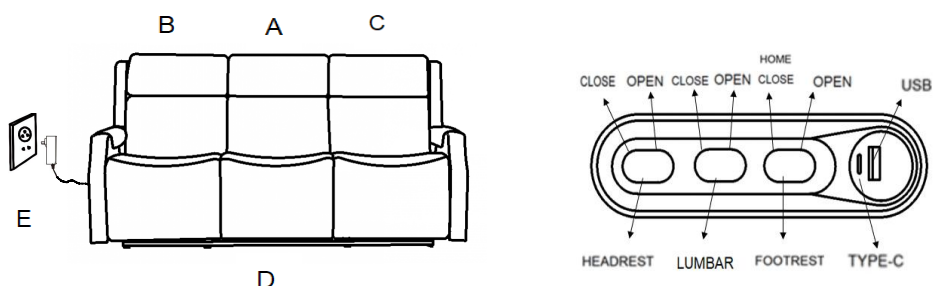
ASSEMBLY INSTRUCTION

ITEM: SS836-PHZL3-049 Nelson Zero Gravity PWR Sofa w/PWR Headrest and Lumbar
SS836-PHZL3-070 Nelson Zero Gravity PWR Sofa w/PWR Headrest and Lumbar
SS836-PHZL3-402 Nelson Zero Gravity PWR Sofa w/PWR Headrest and Lumbar


Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.

Read all instruction and study the drawing carefully before starting the assembly process.


Parts List			
NO	DESCRIP TION	SKETCH	QTY
A	Middle Back Cushion		1pc
B	Left Back Cushion		1pc
C	Right Back Cushion		1pc
D	SEAT		1pc
E	Power Source		1pc




STEP 1 - Place Bracket into Sleeve and press top of back down firmly to lock your KD back in place

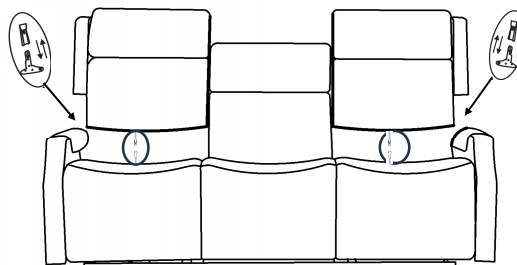

STEP 2 - Connect the wire on back cushion and seat cushion

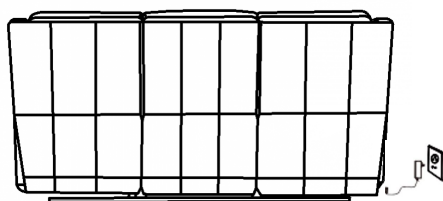

STEP 3 - Connect the connector from motor to the power cord and transformer

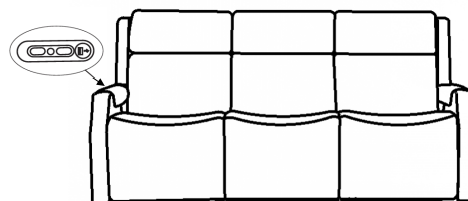

STEP 4 - Use the handcontroller to enjoy your Hooker Furnishings

CAUTION

Do not allow children to play on this mechanism furniture or operate the mechanism. Leg rest folds down on closing so that child could possibly be injured. Always leave in an upright and closed position and keep hands feet clear of mechanism. Only the occupant should operate it.