


ASSEMBLY INSTRUCTION FOR

SERVER

D-16730-8-SV

Caution: Please read instructions thoroughly before unpacking assembly parts. Sharp, exposed staple tips can cause injury, therefore, for your protection, please remove any exposed staples used in packing.


1. We recommend that you should assemble this product with the assistance of another person; this will make assembly easier, and will help to eliminate damage to the product or injury to persons during assembly.
2. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.
3. Please do not over tighten screws or bolts.
4. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

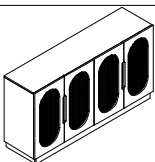PARTS LIST			HARDWARE LIST			
NO.	PART DESC	Q'TY	NO.	HARDWARE DESC	CODE	Q'TY
A	 Server	1pc	1	 Anti-Tip Kit-Metal (Set)	P-ATKNWF-M	1
			 SCREW-DRIVER (NOT PROVIDED)			




Only tighten all bolts when all bolts aligned with bolt inserts.


STEP: 1

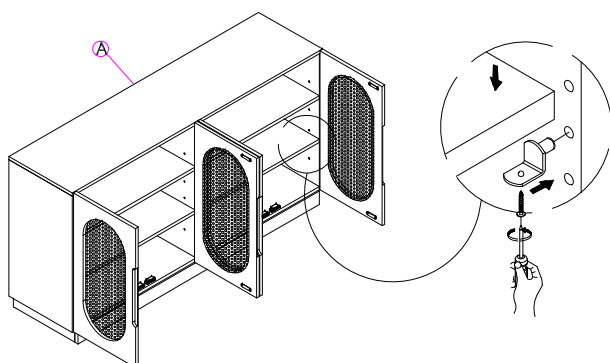

STEP: 2

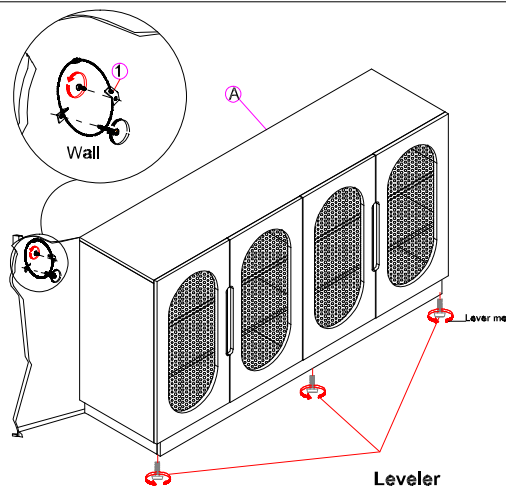


Completed

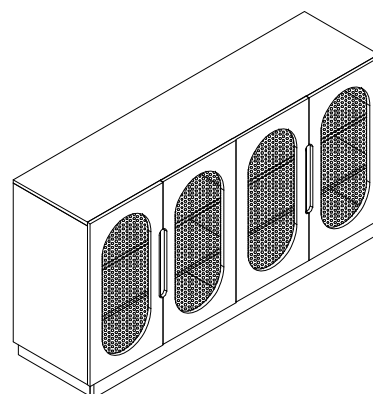




ASSEMBLY INSTRUCTION FOR SERVER D-16730-8-SV

OPTIONAL: To adjust your doors to make the gaps more even.

1: Open the door.

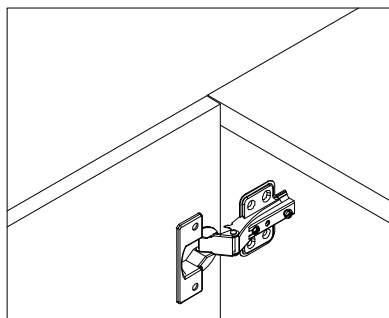

2: Adjust the door panels to be flush with side panel and top panel edge.

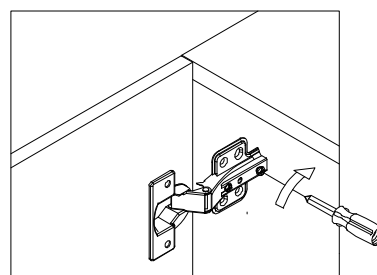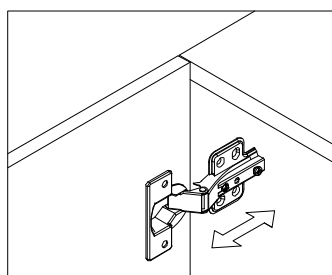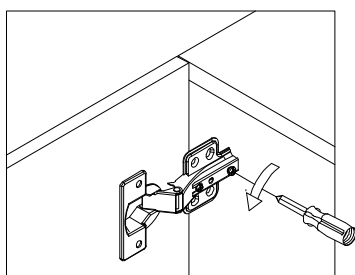

3: Adjust the gap between door panel and side panel.

