


88 5520 6012 King Headboard

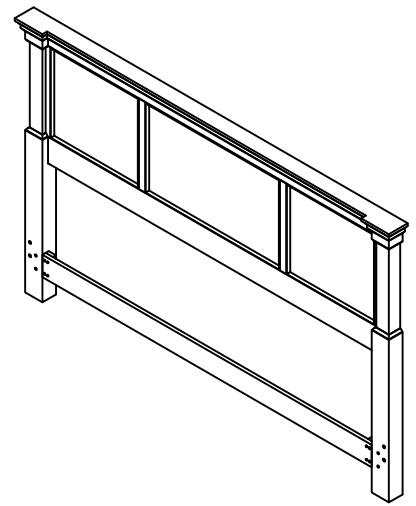


IMPORTANT

Carefully remove all the parts from the carton and place them individually on a soft cloth to prevent scratches or other damage.

Carefully and strictly follow these assembly instructions to ensure a completed product as designed.

Do not use power tools above 8 volts to assemble.

Part List

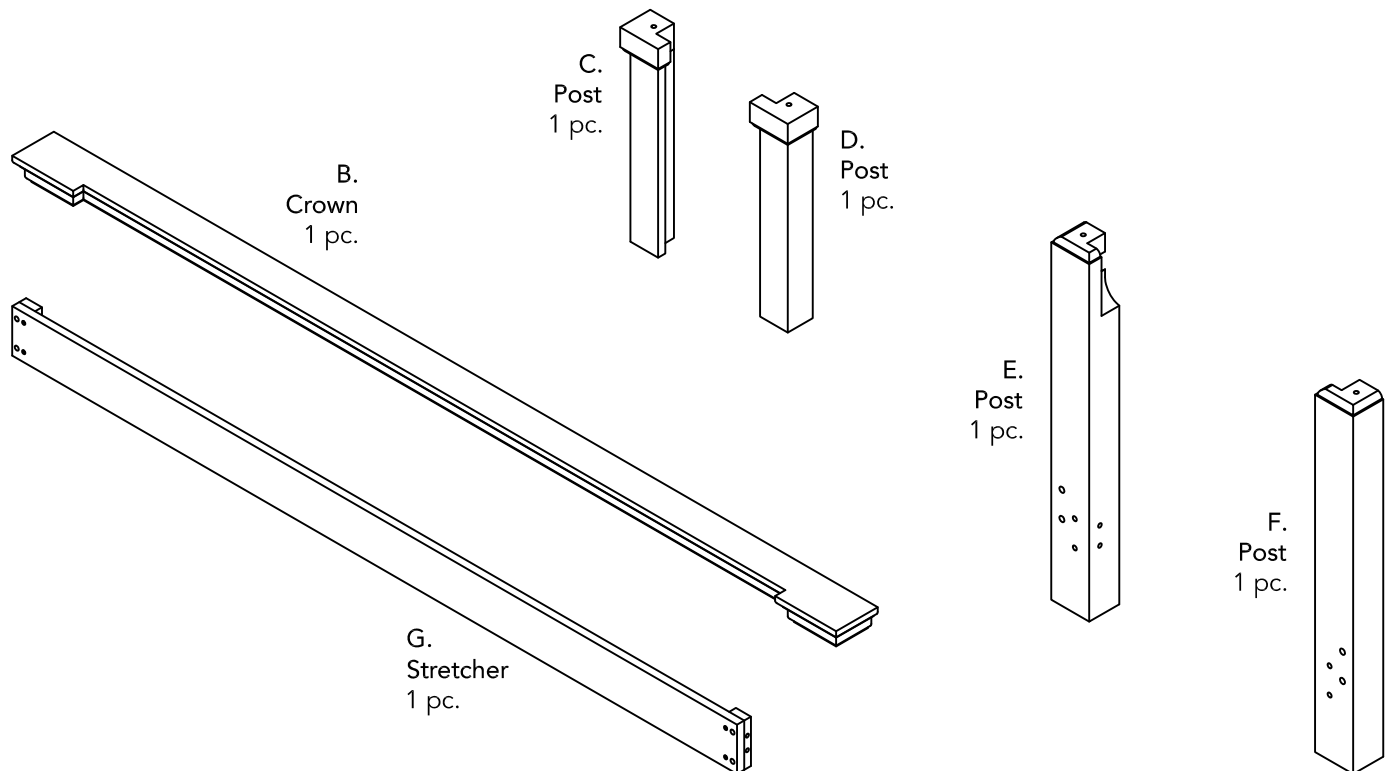


Hardware List



Cam Lock Screw
8 pcs. (+2 extra)



 
Cam Lock
8 pcs. (+2 extra)



Head Cap Bolt (Long)
4 pcs. (+1 extra)



 Head Cap Bolt (Short)
10 pcs. (+1 extra)



Key Wrench
1 pc.



Small Key Wrench
1 pc.



Bolt
2 pcs. (+1 extra)



Square Washer
2 pcs. (+1 extra)



Nut
2 pcs. (+1 extra)



Wrench
1 pc.

Carton 88 5520 6011 is also needed for assembly.

Tool(s) required for assembly: Phillips screwdriver

Home Styles Customer Service: www.homestyles-furniture.com,
servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319


Assembly Instructions 2/3

IMPORTANT

- Use a soft cloth between these parts and the floor.
- Do not use power tools above 8 volts to assemble.
- Do not tighten up all the bolts until each part is properly assembled.
- Keep Key Wrench in a safe place as the bolts may need to be tightened up in the future.

STEP 1

Insert Cam Lock Screws into the pre-drilled holes of Crown (B).

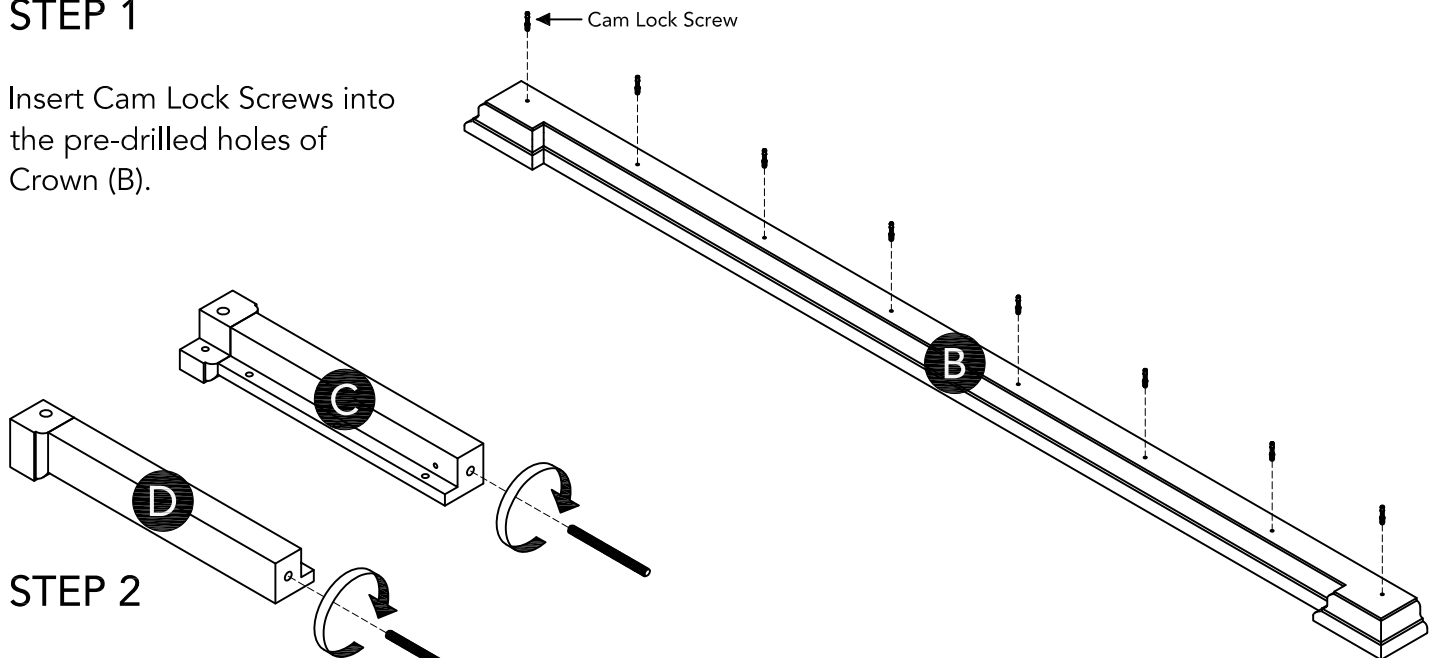

STEP 2

Attach Bolts to Post (C) and (D).

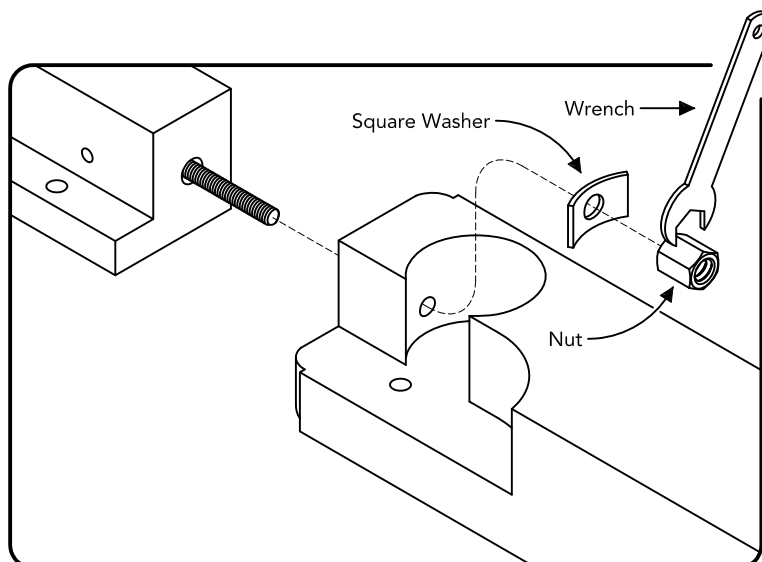
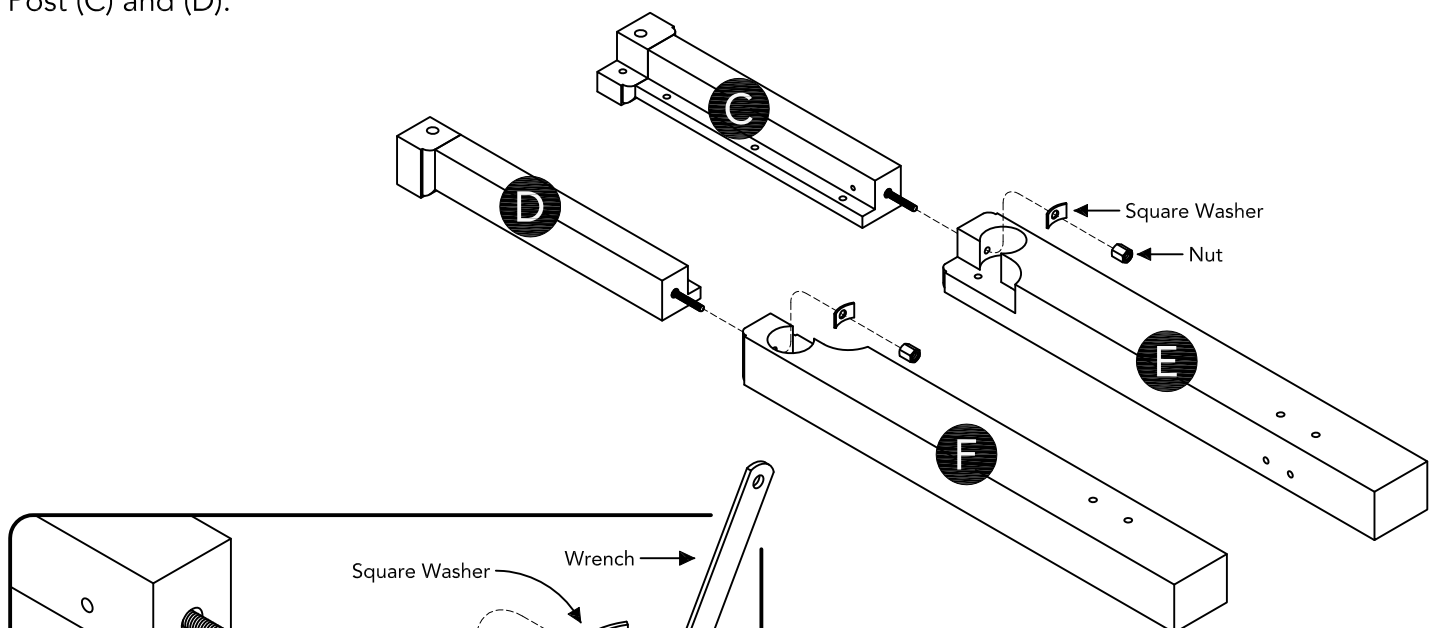


Figure 1

STEP 3

Attach Post (C) to Post (E) and Post (D) to Post (F) using Square Washers and Nuts.

Tighten all the Bolts with Wrench.
(See Figure 1)

STEP 4

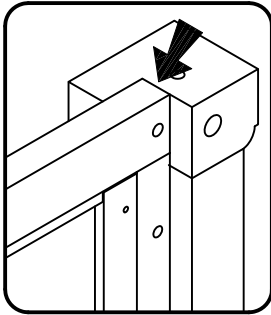


Figure 2


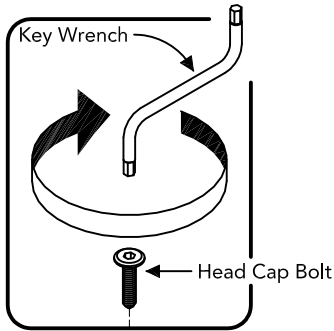


Figure 3

Holding the top of the posts flush with the top of Headboard (A), attach Headboard (A) and Stretcher (G) to posts with Head Cap Bolts. (See Figure 2)

Starting with the upper most Head Cap Bolts first and then proceeding down the unit, tighten all Head Cap Bolts using Key Wrench. (See Figure 3)

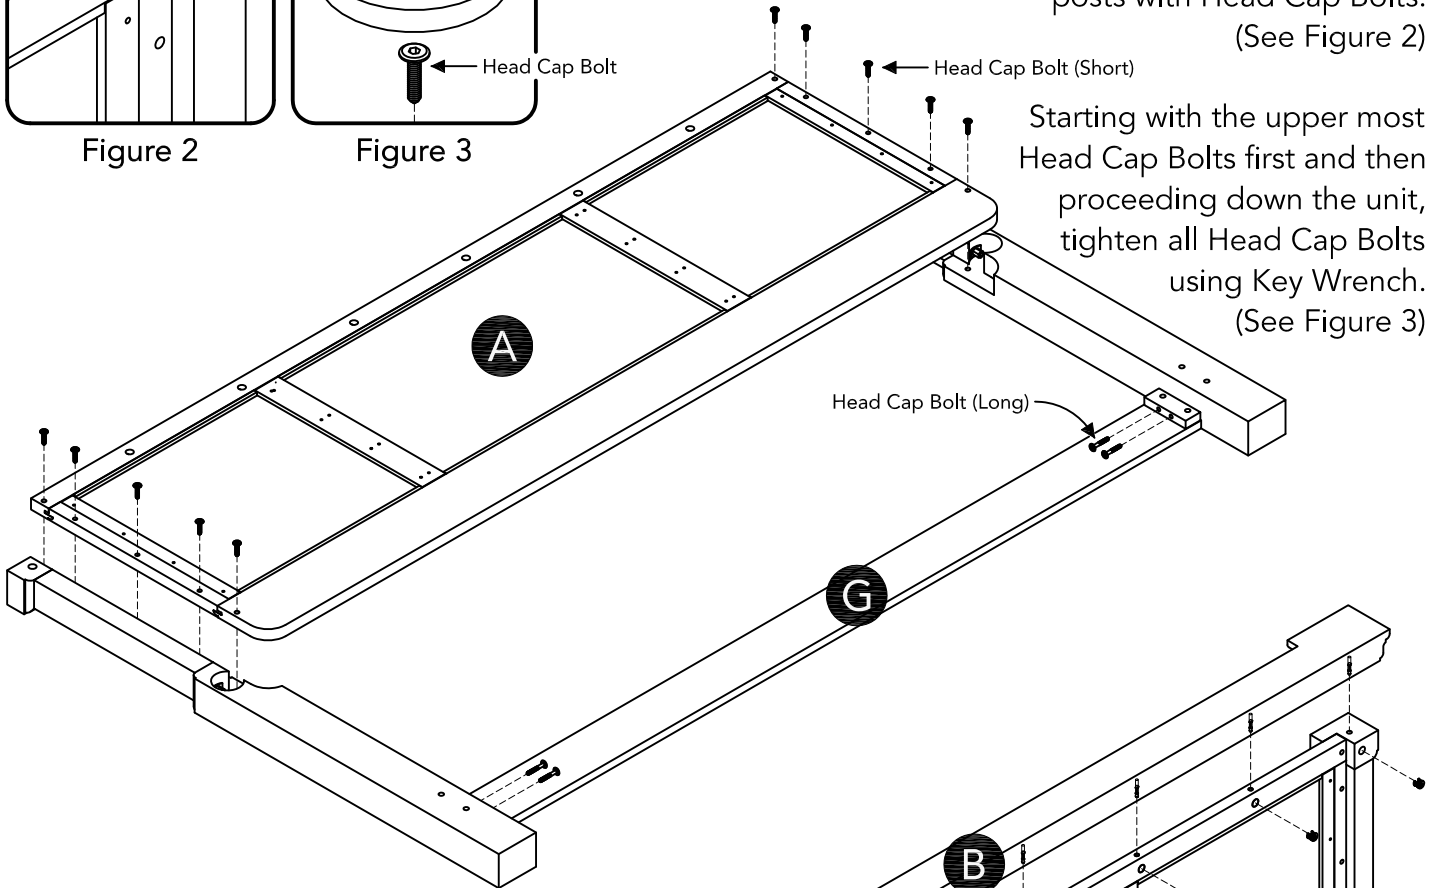

STEP 5

Attach Crown (B) to unit with Cam Locks. (See Figure 4)


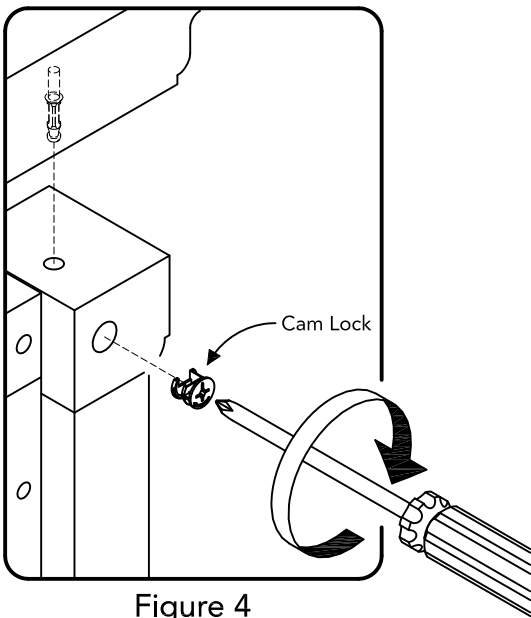


Figure 4

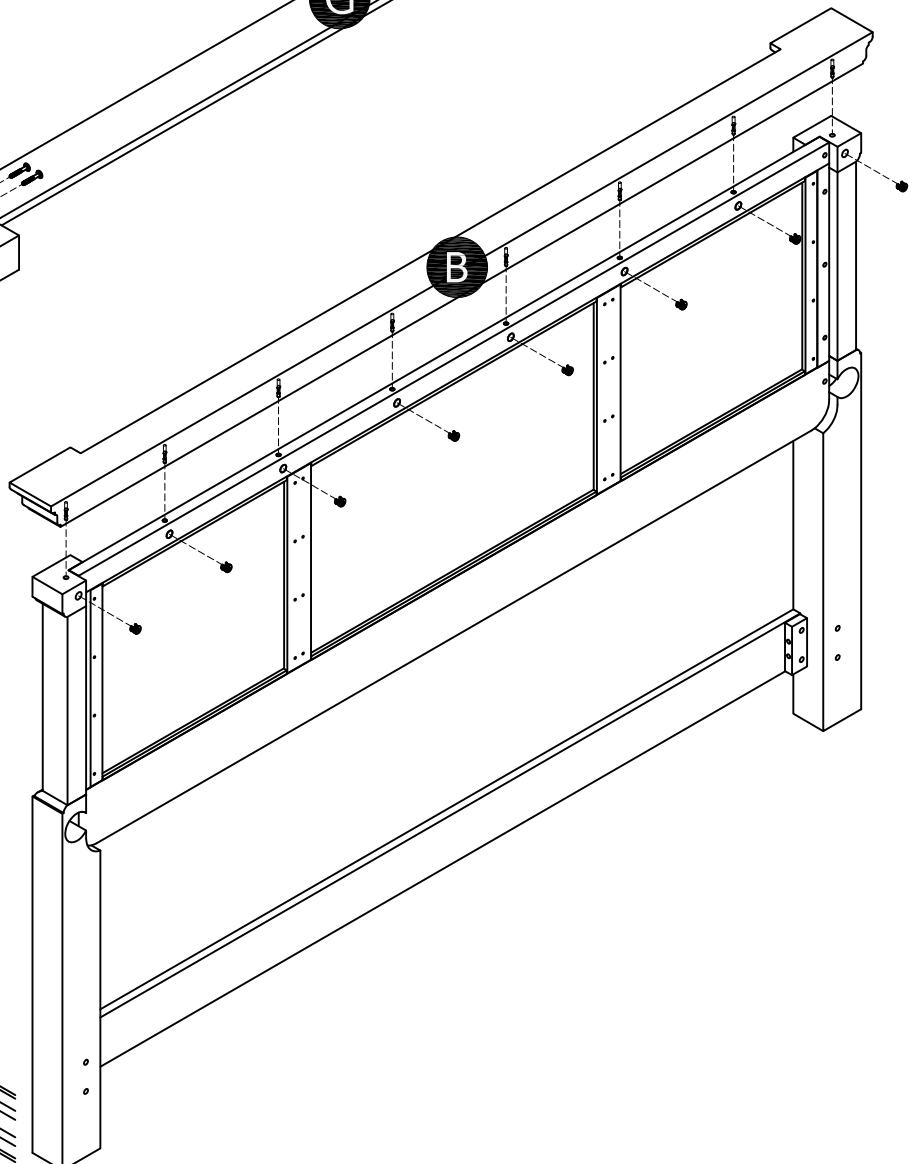

CARE INSTRUCTIONS

NEVER

allow liquids to remain on furniture.
Absorption causes parts to warp
and split and finishes to delaminate.

NEVER

use glass cleaners on
finished furniture. Ammonia
chemically attacks the finish.



Do not use power tools
above 8 volts to assemble.

**PREVENT
CRACKING**



Do not place
in direct sunlight.

**PREVENT
FADING**



Do not write
directly on surface.

**PREVENT
MARKING**



Do not place hot
objects on surface.

**PREVENT
FINISH DAMAGE**



Do not use rubber
based placemats.

**PREVENT
DISCOLORING**




Do not use commercial
waxes and polishes.

**PREVENT
YELLOWING**

CLEAN

with a soft cloth moistened
in lukewarm soap and water.
Buff with a dry clean cloth.

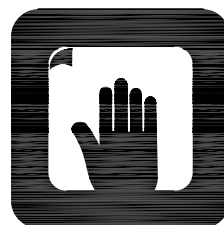

Home Styles will provide replacements free of charge for missing or damaged hardware or parts within 30 days of purchase. Digital images of the defective parts may be required. If the product was not purchased from an authorized retail affiliate, Home Styles is under no obligation to provide replacement parts. Parts are not available for fully assembled items nor are parts available for sale. Replacements for missing or damaged hardware or parts may be requested at:
www.homestyles-furniture.com/customer-service/replacement-parts

**Home Styles Customer Service: www.homestyles-furniture.com,
servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319**