

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

706257
END TABLE

ITEM: 706257



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.




WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.


ASSEMBLY TIME 20 MINUTES

PARTS IDENTIFICATION

A GLASS 1PC

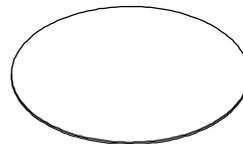

B TOP FRAME 1PC

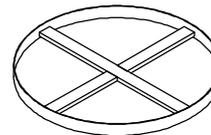

C DOUBLE LEG FRAME 1PC



D SINGLE LEG FRAME 2PCS

 


HARDWARE IDENTIFICATION

1 SHORT BOLT (1/4" x 28mm WHT) 8PCS



4 LARGE CAP 4PCS



2 LONG BOLT (1/4" x 45mm WHT) 2PCS



5 SMALL CAP (20 x 20mm WHT) 5PCS



3 SUCTION CUP 4PCS



6 ALLEN WRENCH (4mm) 1PC




ITEM:706257




ASSEMBLY INSTRUCTIONS

STEP 1 Do not tighten until each step is completed or instructed.

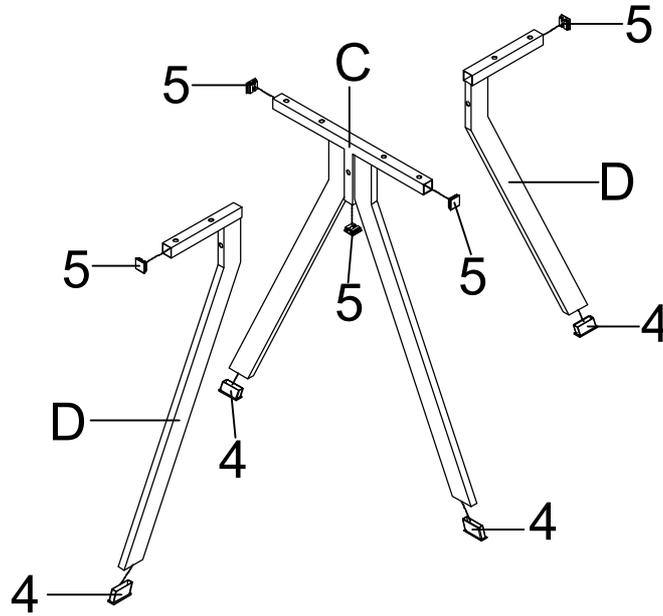


STEP 2

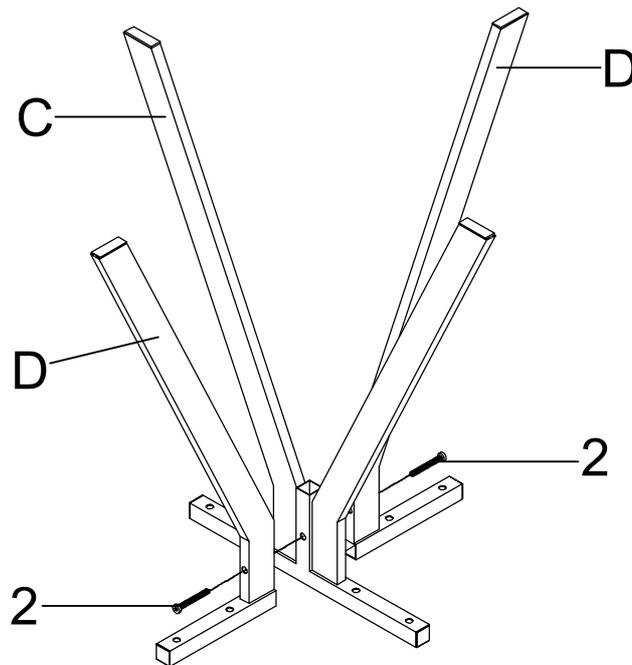


ITEM:706257

ASSEMBLY INSTRUCTIONS


STEP 3

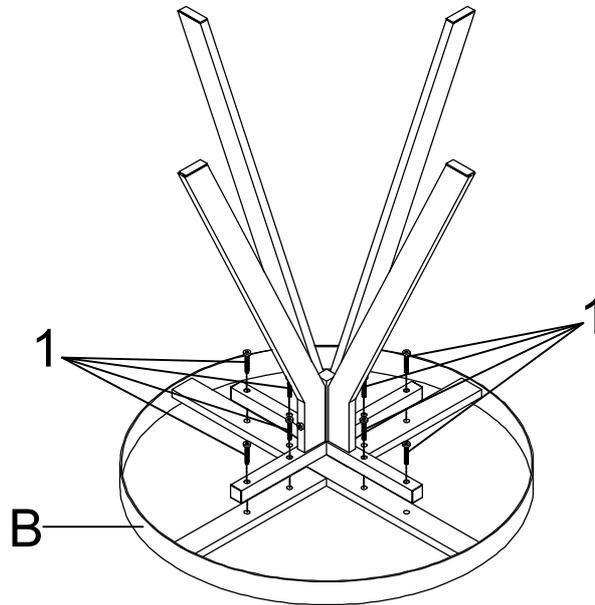

STEP 4

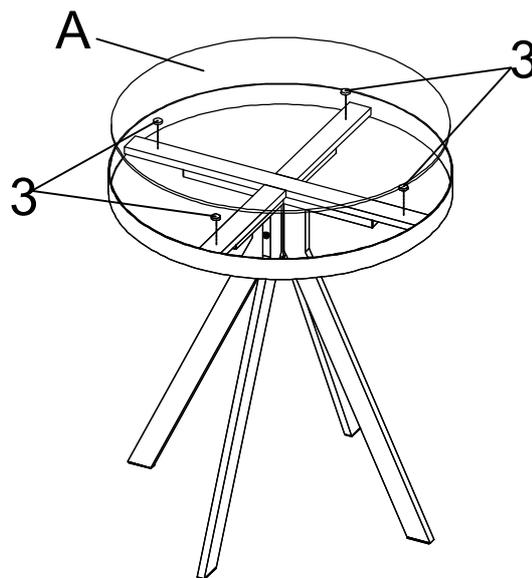


COMPLETE

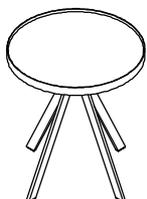

ITEM:706257 ASSEMBLY INSTRUCTIONS



Product Size : 546 DIA X 610H (MM)
Product Size : 21.5" DIA X 24"

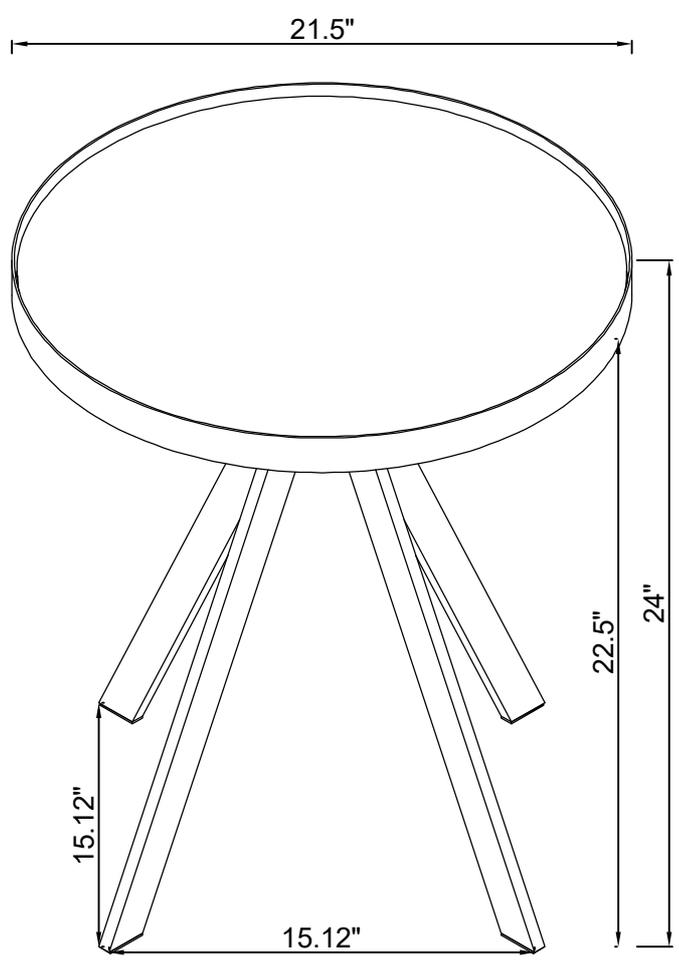

Note : Dimension tolerance $\pm 5\%$