
HOCKER FURNISHINGS ASSEMBLY INSTRUCTION

ITEM: (E2150) SS741-PHZL2C-080 Crosby Zero Gravity PWR


Console LS w/PWR Headrest


Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.

Read all instruction and study the drawing carefully before starting the assembly process.

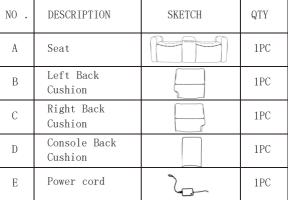



PART LIST

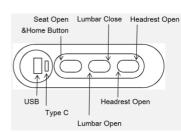

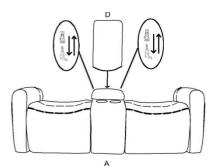


STEP 1 - Lock your KD back as sofa. Connect the wire on back cushion and seat cushion; the headrest wire

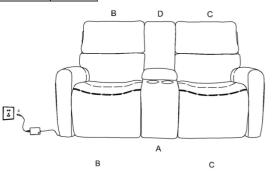


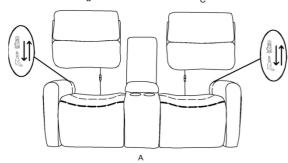

STEP 2 - Connect the connector from motor to the power cord and transformer

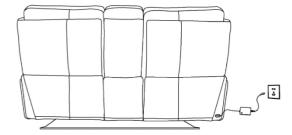

STEP 3 - Connect the connector from motor to the power cord and transformer

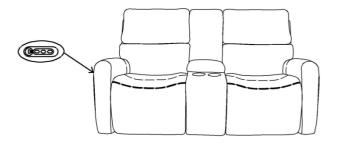

STEP 4 -Use the hand controller to enjoy your Hooker Furnishings

CAUTION

Do not allow children to play on this mechanism furniture or operate the mechanism. Leg rest folds down on closing so that child could possibly be injured. Always leave in an upright and closed position and keep hands feet clear of mechanism. Only the occupant should operate it.