homestyles°

5450-41


Chest


IMPORTANT


Carefully remove all the parts from the carton and place them individually on a soft cloth to prevent scratches or other damage.

Carefully and strictly follow these assembly instructions to ensure a completed product as designed.

Do not use power tools above 8 volts to assemble.

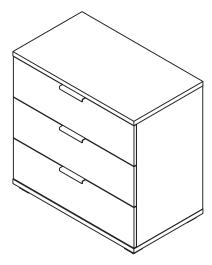

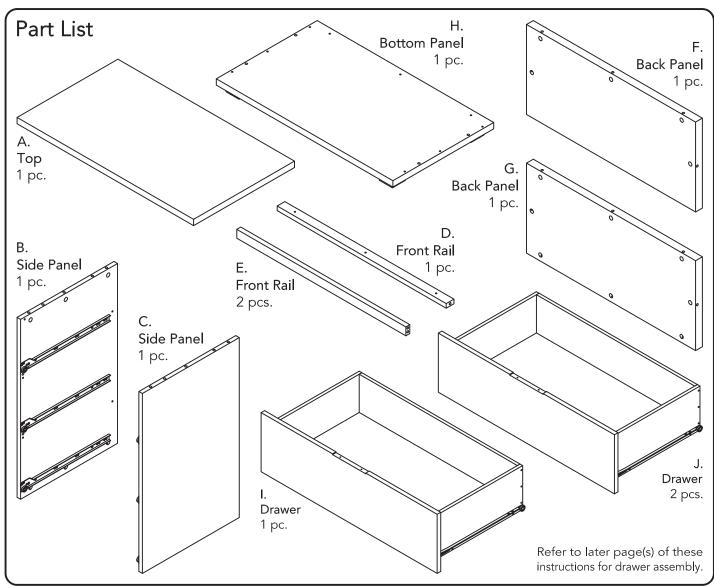

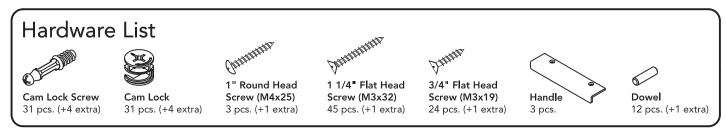


Tool(s) required for assembly: Phillips screwdriver, Level, Pencil, Drill (8 volts or less), 3/8" Drill Bit

Assembly Instructions 2/9

IMPORTANT

- Use a soft cloth between these parts and the floor.
- Do not use power tools above 8 volts to assemble.
- Do not tighten all the bolts until each part is properly assembled.
- The unit must be level to work properly. Use the included adjustable levelers to level.

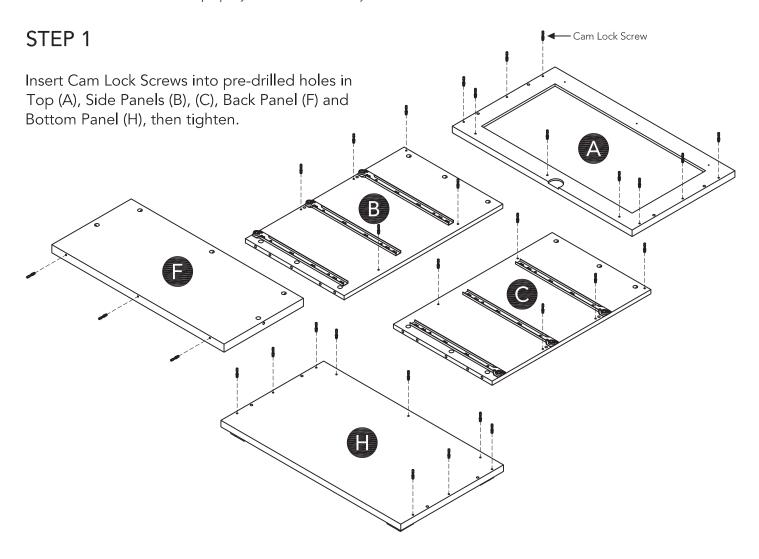

STEP 2


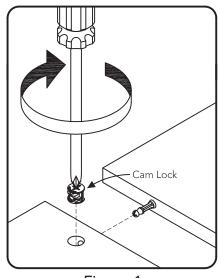


Figure 1

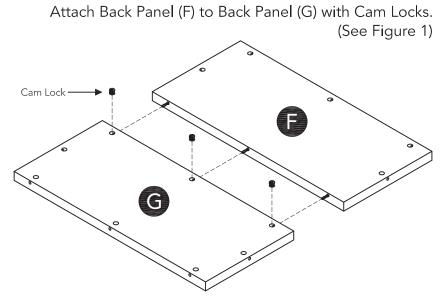


Assembly Instructions 3/9


STEP 3

Attach Side Panel (B) to unit with Cam Locks.


Attach Front Rails (D) and (E) to unit with Dowels and Cam Locks.

Attach Side Panel (C) to unit with Dowels and Cam Locks.

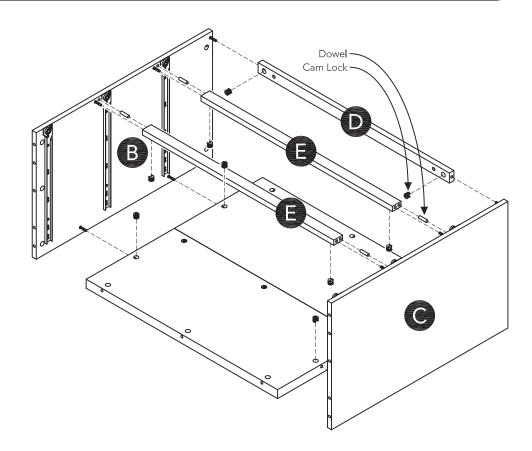

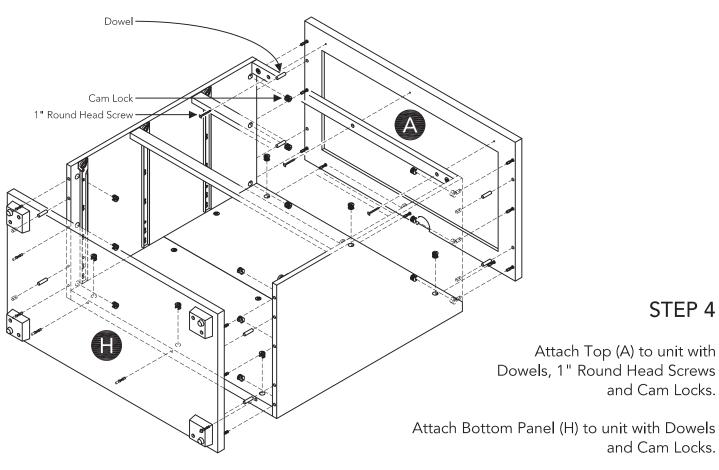

Assembly Instructions 4/9

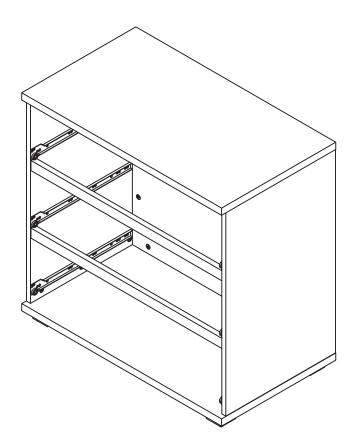

STEP 5

Turn unit to its upright position.

Level unit by adjusting the adjustable levelers on bottom of unit. (See Figure 2)

Note: Unit must be level to work properly.

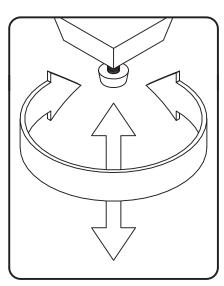


Figure 2

Assembly Instructions 5/9

IMPORTANT

• To help reduce the risk of the unit tipping over, the Tipover Restraint must be installed following these instructions exactly.

STEP 6

Place unit at desired location.

Mark wall with pencil just above and in-line with hole in Top (A). (See Figure 3)


Move unit.

Drill a 3/8" hole in wall 1 1/2" below mark.

Insert Anchor into the wall hole and attach Tipover Restraint to Anchor with 1 1/2" Round Head Screw and Flat Washer. (See Figure 4)

Move unit back into place and insert Tipover Restraint into unit through hole in Top (A). (See Figure 5)

Attach Tipover Restraint to unit with 1/2" Round Head Screw and Flat Washer. (See Figure 6)

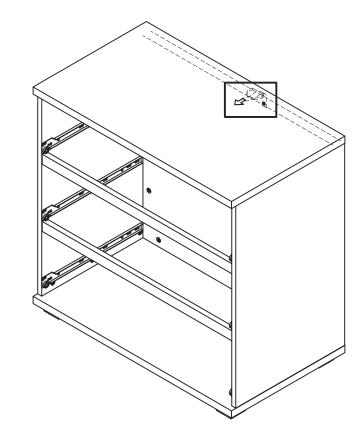



Hole in Top (A)
Tipover Restraint

Figure 5

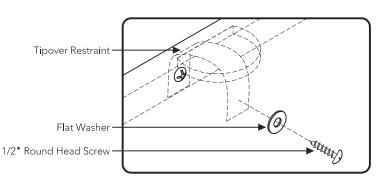


Figure 6

Hardware List







Anchor 1 pc. (+1 extra)



M3x38 1 1/2" Round Head Screw 1 pc. (+1 extra)




M3x13 1/2" Round Head Screw 1 pc. (+1 extra)




Flat Washer 2 pcs. (+1 extra)


Assembly Instructions 6/9

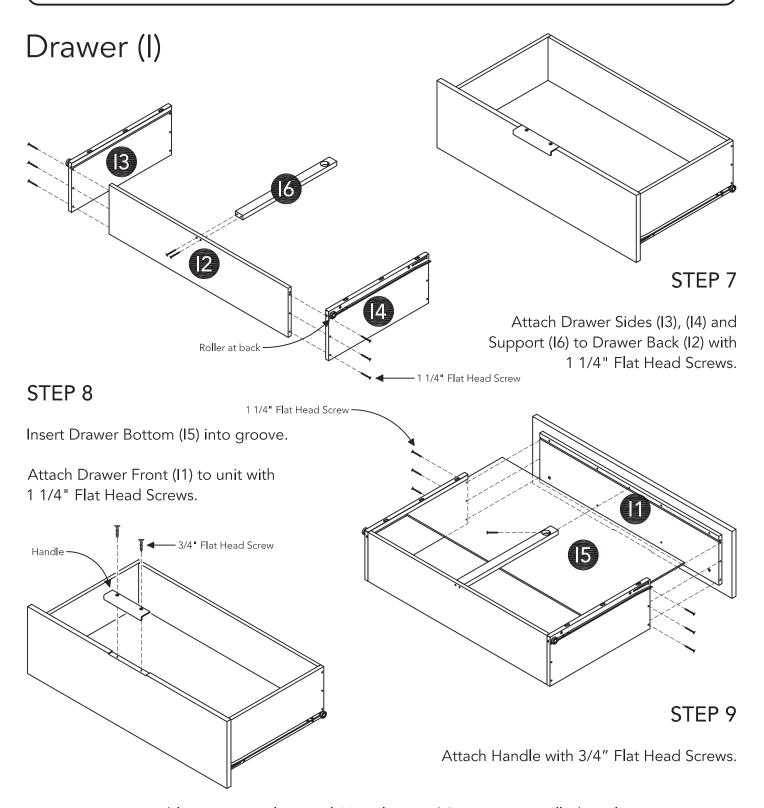


Note: Drawer assembly is not complete until 3/4" Flat Head Screws are installed in a later step.

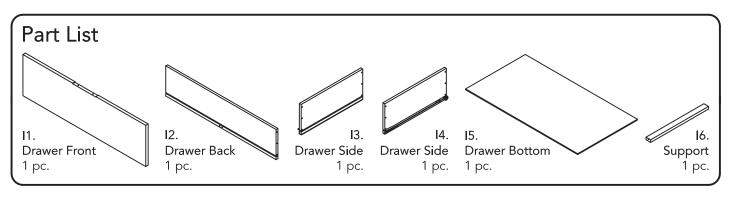

Assembly Instructions 7/9

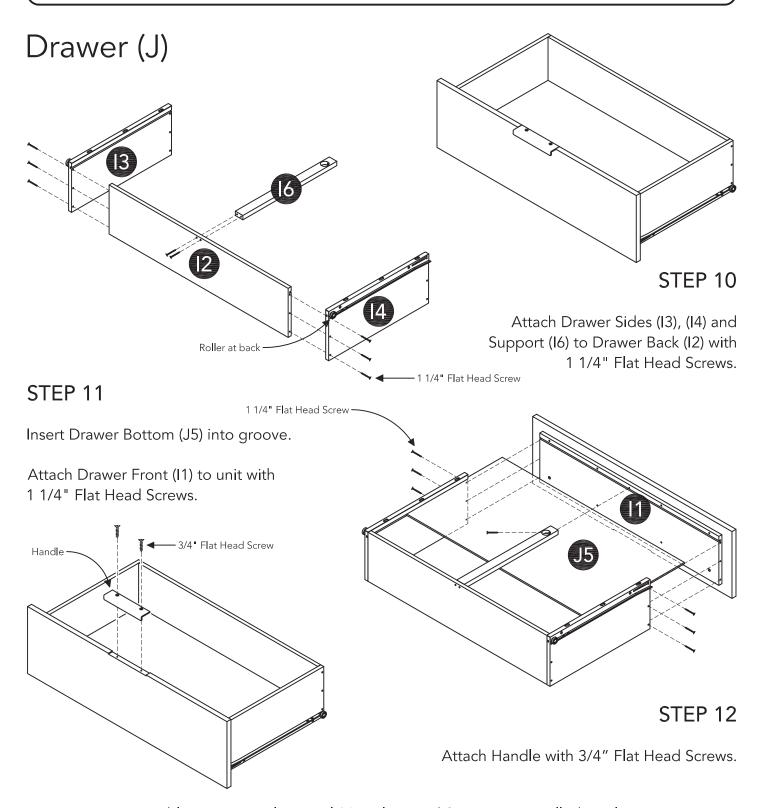


Note: Drawer assembly is not complete until 3/4" Flat Head Screws are installed in a later step.

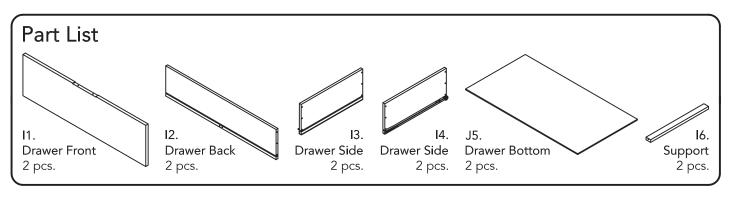


Assembly Instructions 8/9

STEP 13

Loosen slightly the screws pre-installed on back of drawer fronts.

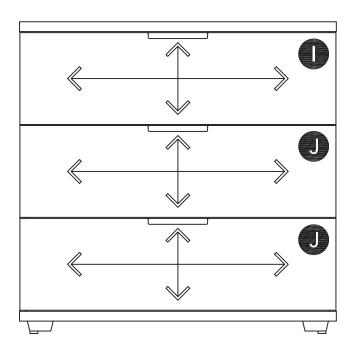

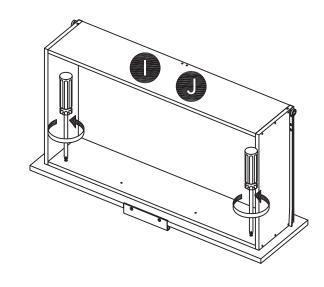

STEP 14


Insert Drawers (I) and (J) into unit, then adjust drawer front panels left or right and up or down until drawer gaps look proportional.

STEP 15

Pull each drawer open slowly, then re-tighten screws from Step 13.

Make sure drawer front panels do not move and lock drawer front panels into position with 3/4" Flat Head Screws.


Note: These 3/4" Flat Head Screws must be installed to complete the drawer assembly.

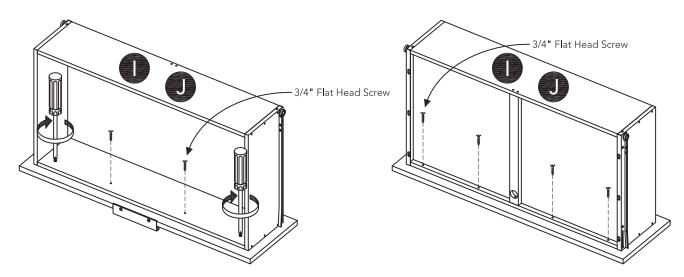

Assembly Instructions 9/9

STEP 16

Slide Drawers (I) and (J) into position.

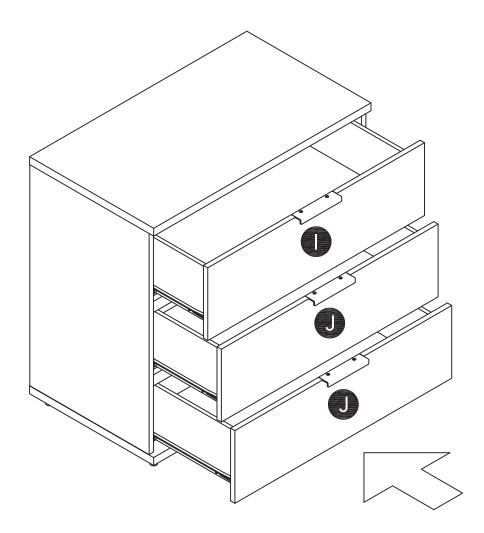

CARE INSTRUCTIONS

NEVER

allow liquids to remain on furniture. Absorption causes parts to warp and split and finishes to delaminate.

NEVER

use glass cleaners on finished furniture. Ammonia chemically attacks the finish.



Do not use power tools above 8 volts to assemble.

PREVENT

CRACKING



Do not place in direct sunlight.

PREVENT FADING



Do not write directly on surface.

PREVENT MARKING



Do not place hot objects on surface.

PREVENT FINISH DAMAGE



Do not use rubber based placemats.

PREVENT DISCOLORING



Do not use commercial waxes and polishes.

PREVENT YELLOWING

CLEAN

with a soft cloth moistened in lukewarm soap and water. Buff with a dry clean cloth.



homestyles will provide replacements free of charge for missing or damaged parts within 30 days of purchase. Digital images of the defective parts may be required. If the product was not purchased from an authorized retailer, **home**styles is under no obligation to provide replacement parts. Parts are not available for fully assembled items nor are parts available for sale. Replacements for missing or damaged parts may be requested via contact info below.