

USER'S MANUAL

BV6658B

BLUETOOTH®

DVD/MP3/CD AM/FM RECEIVER

FEATURING 2-ZONE FUNCTION



 **Bluetooth®**



BOSS®
AUDIO SYSTEMS

CONTENTS

Precautions.....	1
Safe Notes.....	1
Accessories.....	1
How To Handle Discs.....	1
Lithium Battery Cell Warnings.....	1
Installation.....	2-3
Prepare Radio.....	2
Mount Radio.....	2
Wiring Connections.....	3
Removal Of The Main Unit.....	3
Control Panel Button Locations.....	4
General Operations.....	5
Turn Unit On/Off.....	5
Adjust Volume(VOL).....	5
Adjust Menu Options (SEL).....	5
Change The Source (SRC).....	5
2 Zone Function (Zone A / Zone B).....	5
Setting The Clock (CLK).....	5
Mute On/Off (MUTE).....	5
Reset System (RESET).....	5
Radio Operation.....	6
Switch Between US And EU Frequency.....	6
Change Bands (BND).....	6
Manual Tuning.....	6
Auto Seek Tuning.....	6
Auto Store / Recall Preset Station (AMS).....	6
Store / Recall Preset Station (1~6).....	6
Local / DX Reception.....	6
Stereo / Mono Reception.....	6
DVD/CD/MP3/USB Operation.....	7-9
Insert and Eject Disc/USB.....	7
Play / Pause Playback.....	7
Stop Playback.....	7
Selecting Next / Previous Chapter / Title / Track.....	7
Fast Forward/Backward.....	7
Introduce Scan.....	7
Repeat Playback.....	8
Random Playback.....	8
Track Search.....	8
Go To.....	8
Program.....	8
Zoom in / Zoom Out.....	8
Slow Playback.....	8
Multi-Angle View.....	9
Multi-Subtitle.....	9
Multi-Audio.....	9
Title Playback.....	9
PBC Playback.....	9
OSD(On Screen Display) Function.....	9
Auxiliary Input Operation.....	9
Bluetooth Operation.....	10
Remote Control.....	11
Setup Operation.....	14
Specifications.....	16
Troubleshooting.....	17





PRECAUTIONS

Safe Notes

To avoid the risk of accident and the potential violation of applicable laws, the driver should never view video or operate this DVD player while the vehicle is moving. The DVD video functions will only view or operate when vehicle is in park and the parking brake is engaged.

Accessories

Please check and confirm the accessories in the package before using this unit.

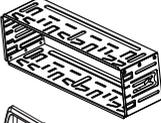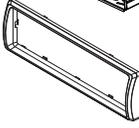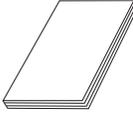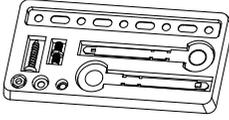1. Mounting Sleeve 
2. Trim Ring 
3. User Manual 
4. 12Pin PWR/SPK Harness 
5. Remote Control 
6. Metal Accessories Kits 
 - Including:
 - 1) Meatal Mounting Strap: 1pc
 - 2) Disassemble Keys: 2pcs
 - 3) Tapping Screw: 1pc
 - 4) Hex Bolt: 1pc
 - 5) Hex Nut: 1pc
 - 6) Plain Washer: 1pc
 - 7) Spring Washer: 1pc

How to Handle Discs

- Handle a disc by its edges. Do not touch the playing side.
- Before inserting a disc, wipe the disc outward from the disc center with a clean, soft, dry and lint-free cloth. Do not use solvents or thinners such a petrol/benzene or cleaners.
- After removing a disc from the disc slot, place the disc in a sleeve or case to keep it clean and prevent scratches.
- Do not stick paper or tape on the disc surface. If there is glue (or adhesive) on the disc surface, remove it before using the disc.




Lithium Battery Cell Warnings

- Cell leakage may cause damage to the remote control.
- Do not throw cells into fire, as this may cause an explosion.
- Keep battery cells out of reach of children.


INSTALLATION

Prepare Radio

1. Before you begin, disconnect the battery negative terminal.
2. Remove the transport screws.

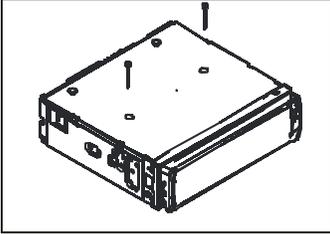

3. Remove chassis from the mounting sleeve.

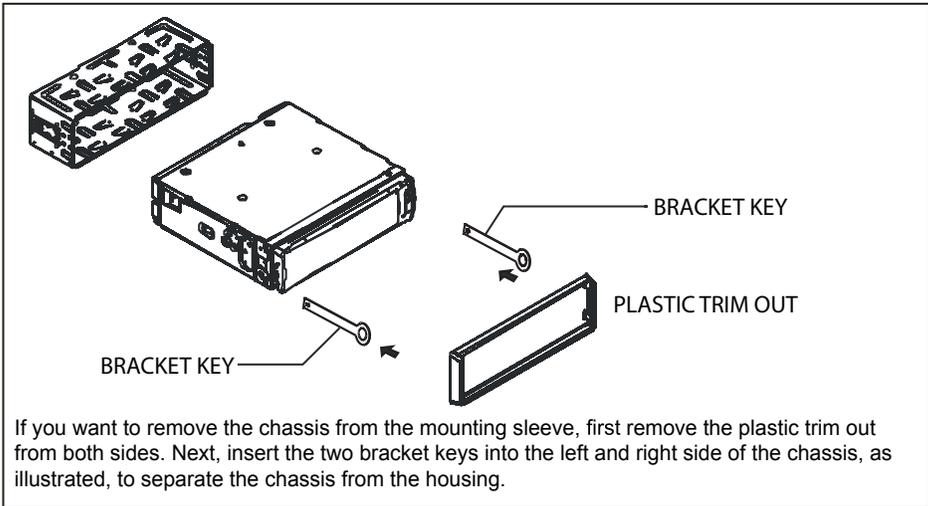


Mount Radio

Refer to the "Installation Diagram" to install the unit.


1. Bend the tabs on the mounting sleeve, where necessary, to ensure than the front part of the main unit will remain fixed into the vehicle dash opening.
2. Insert radio into the mounting sleeve.
3. Use a metal strap to secure the rear part of the chassis using the hardware indicated.
4. Make wiring connections, as illustrated in the "Wiring Diagram."
5. Install the plastic trim out.

INSTALLATION (CONT.)

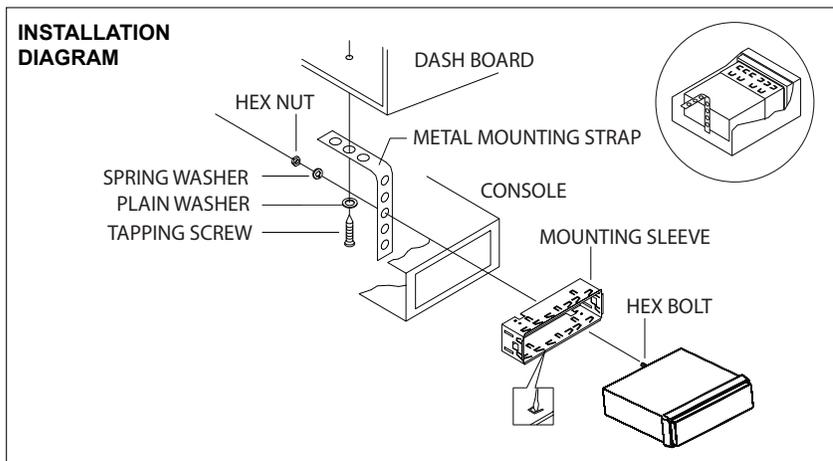

- Only use speakers with 4 ohm impedance.
- The maximum current of the Amp Remote trigger is 200mA.


Wiring Connections

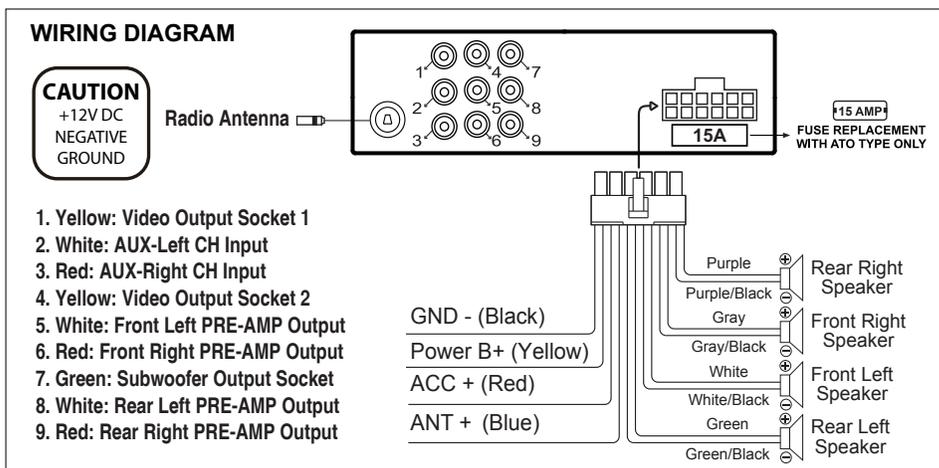

Removal of the Main Unit

1. Remove the metal strap from the main unit.
2. Remove the plastic trim out from the main unit.
3. Insert a bracket key into the left and right side of the main unit and draw the unit out of the mounting sleeve.

CONTROL PANEL BUTTON LOCATIONS

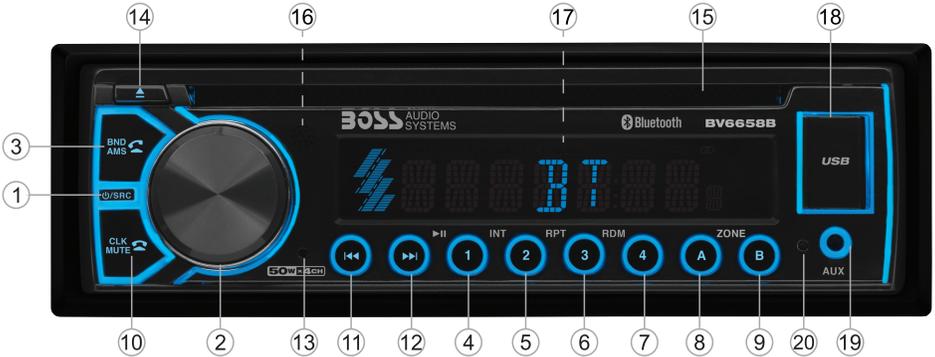

1. ⏻ (power) / SRC (source) button
2. SEL (select/menu) button and VOL (volume) knob
3. BAND/AMS(automatic store station, automatic music search) and 📞 (answer call) button
4. ⏸ (pause/play), Preset station 1 button
5. INT (intro), Preset station 2 button
6. RPT (repeat), Preset station 3 button
7. RDM (random), Preset station 4 button
8. -10(previous 10 tracks), previous folder, Zone A (Front Speaker) button
9. +10(next 10 tracks), next folder, Zone B (Rear Speaker) button
10. CLK (clock setting), MUTE button, 📞 (end call) button
11. ⏮ (tune/seek down, previous track, fast reverse) button
12. ⏭ (tune/ seek up, next track, fast forward) button
13. Hands-free Microphone
14. EJECT button
15. Disc slot
16. IR remote sensor
17. Display
18. USB Port
19. AUX IN (auxiliary input) jack
20. Reset button

GENERAL OPERATION

Turn Unit On/Off

Press the power (⏻) /SRC button to turn on the unit. Press and hold it to turn off the unit.
Press the power (⏻) button on the remote control to turn the unit on or off.

Adjust Volume (VOL)

Rotate the **VOL** knob on the front panel or press the **VOL+/-** button on the remote control to increase or decrease the volume level.

Adjust Menu Options (SEL)

- Press the **SEL** button repeatedly to cycle through the following adjustable audio functions: BASS, TREBLE, BALANCE, EQ OFF/ROCK/POP/CLASS/FLAT, LOUD ON/OFF, DX/LOC, STEREO/MONO and VOLUME.
- Press and hold the **SEL** button to access these additional functions: VOL (LAS/ADJ), AREA EU/US, Clock 12/24, and BEEP ON/OFF.
- Rotate the **VOL** knob on the front panel or press the **VOL+/-** button on the remote control to adjust the selected item.

Change the Source (SRC)

Press the **SRC** button to switch between RADIO, BT, DISC, USB and AUX-IN modes.

2 Zone function (ZONE A / ZONE B)

This function enables audio to be separated from Front and Rear speaker outputs.

Press the **ZONE A/ZONE B** button to turn on or off the front/rear audio outputs: ZONE A ON, ZONE B ON, ZONE A+B ON, ZONE A+B OFF(ZONES OFF).

Set the Clock (CLK)

1. To display clock time, press and hold the **CLK** button on front panel.
2. To set clock time, press and hold the **CLK** button and the hour will flash.
3. Press the **◀** or **▶** button or press the **NEXT** or **PREV** button to adjust the hour.
4. Press the **CLK** button and the minutes will flash.
5. Press the **◀** or **▶** button or press the **NEXT** or **PREV** button to adjust the minutes.
6. Finally press and hold the **CLK** button to confirm the time adjustments.

Mute on/off (MUTE)

Press the **MUTE** button on the remote control to toggle mute on or off. The muted state will be also released, when the volume knob or **VOL+/-** button are used.

Reset System (RESET)

The **RESET** button is used to reset all parameters to factory default settings.

This function may be used when the LCD does not display normally or sound is distorted, or when any of the controls are disabled. To reset your system, use a thin object with a pointed end to depress the **RESET** button.

RADIO OPERATION

Switch Between US and EU Frequency

In radio mode, press and hold the **VOL** button to select the AREA EU/US, then rotate it to switch between US (USA) and EU (Europe) frequency. The system will change the frequency setting in about 3 seconds.

Change Bands (BAND)

Press the **BAND** button to switch between the F1 (FM1), F2 (FM2), F3 (FM3), A1 (AM1) and A2 (AM2) bands. Each band stores up to six preset stations.

Manual Tuning (◀ / ▶)

Press and hold the ▶ or ◀ button to enter manual tuning mode. In manual tuning mode, press the ▶ or ◀ button to move the radio frequency number up or down one step.

Auto Seek Tuning (◀ / ▶)

In standby mode or while not in manual tuning mode, quickly press the ▶ or ◀ buttons to move to the next/previous available station automatically.

Auto Store / Recall Preset Station (AMS)

Press and hold the **AMS** button for more than 2 seconds to select six strong stations and store them in the current band. The radio will automatically scan the current frequency and enter the six strongest stations into the preset memory positions for that band.

Briefly press the **AMS** button on the remote control to scan each preset station in each band.

Store/Recall Preset Stations (1 - 6)

The radio can store 6 preset stations for each band (FM1, FM2, FM3, AM1 and AM2) for a total of 30 stored stations.

1. To memorize a station, turn the radio on and select the desired band and station.
2. Press and hold the desired preset button (numbered **1-4** on the faceplate, numbered **1-6** on the remote control) for more than 2 seconds to save the station to that preset number.
3. Repeat for the remaining five presets on the current band and for all presets on the other four bands.
4. A stored station can be recalled at any time by choosing a band and then pressing the corresponding preset button.

Local/DX

In urban areas, most stations are strong enough and “LOCAL ON” mode should be selected. Switch to LOCAL OFF mode to search for stations with weaker signals.

Press the **LOC** button on the remote control to choose local or distant reception mode.



Stereo/Mono

FM station is received in stereo mode. However, if the signal is weak or reception is not as good as you would like, switching to MONO mode usually improves the overall sound quality. Press the **ST** button on the remote control to choose FM STEREO or MONO audio effect.

DVD/CD/MP3/USB OPERATION

Insert Disc/USB

- To play files on a disc, insert a disc with the label surface up into the disc slot. Playback will begin automatically.
- To play files on a USB device, open the USB port cover and insert the USB storage device into the USB port. Playback will begin automatically.

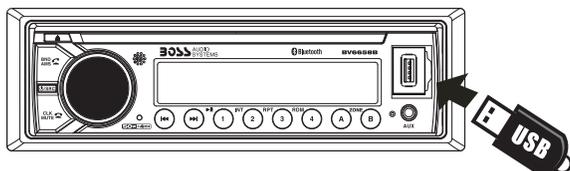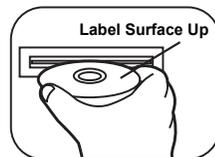

Eject Disc/USB

- To eject a disc, first press the **▶||** button to stop playback. Press the **▲** (eject) button to eject the disc and then remove it.
- To eject a USB device, first press the **▶||** button to stop playback, then remove the storage device.

Play/Pause Playback

Press the **▶||** (play/pause) button to pause or resume playback.

Stop Playback

Press the **■** button on the remote control once to pause playback. Press the **▶||** button to resume playback. Press the **■** button twice to stop playback, press the **▶||** button, the unit will play from the 1st song or video file.

Selecting Next / Previous Chapter / Title / Track

- To play the next chapter / Title/track, briefly press the **▶▶** or **SEEK+ ▶▶** button.
- To play the previous track, briefly press the **◀◀** or **SEEK- ◀◀** button.

Fast Forward/Backward

- To fast forward, press and hold the **▶▶** or **SEEK+ ▶▶** button, With each long pressing, the speed of fast forward changes as follow: X02, X04, X08, X20, Normal Playback.
- To fast backward, press and hold the **◀◀** or **SEEK- ◀◀** button, With each long pressing, the speed of fast backward changes as follow: X02, X04, X08, X20, Normal Playback.

Introduce Scan

Press the **INT** button to play the first 10 seconds of each track, press again to stop the introduction scan and play the current track.

DVD/CD/MP3/USB OPERATION

Repeat Playback

- During DVD playback, press the **RPT** button to toggle between RPT CHP(repeat chapter), RPT TIT(repeat title), RPT ALL(repeat all) .
- During VCD playback, press the **RPT** button to toggle between RPT ONE(Continuously repeats current track), RPT ALL(repeats all tracks).
- During CD/MP3 playback, Press the **RPT** button to toggle between RPT ALL(Repeat all tracks), RPT FLR (Continuously repeats alltracks in current folder) and RPT ONE (Continuously repeats current track).

Random Playback

Press the **RDM** button to play all tracks in random order, press again to cancel this function.

Track Search

During disc, USB playback, press and hold the **AMS** button to enter the track search modes:

- a) In playback of disc or files with MP3 format, press and hold the **AMS** button once to access the track or file number searching mode which allow you to quickly find a specific track or MP3 file by its serial number, and the "TRK SCH" and "TRK ****" will appear on the LCD display in sequence.
- b) Rotate the **VOL** knob to select the number of your favorite track or file with high speed. You can also press the numerical keys on the remote control to select a specific track by its serial number.
- c) Finally press the **SEL** button to confirm and play the selected track.

GO TO

During DVD/VCD playback, press the **GOTO** button on the remote control to search the desired track time to play the Disc. The OSD will be prompted. Use the the cursor keys (◀, ▶, ▲, ▼), numeric keypad on the remote control to choose your desired chapter, track or time. Press the **ENTER** button to confirm your selection.

Program

In DVD/VCD playback, press the **PROG** button on the remote control to enter the program play mode, then user can set the sequence of playback.

Use the the cursor keys (◀, ▶, ▲, ▼), numeric keypad to select the chapter number, title number and Track number. as your desired sequence.

Press the **ENTER** button to begin the program play.

Zoom in / Zoom Out

In DVD/VCD playback, press and hold this button repeatedly to zoom in or zoom out: ZOOM 2, ZOOM 3, ZOOM 4, ZOOM 1/2, ZOOM 1/3, ZOOM 1/4, ZOOM OFF.

Slow Playback

In DVD/VCD playback, press and hold this button repeatedly to play slowly: SL 1/2, SL 1/3, SL 1/4, SL 1/5, SL 1/6, SL 1/7, SL off.

DVD/CD/MP3/USB OPERATION

Multi-Angle View

In DVD playback, press this button repeatedly to switch the viewing angle if the DVD disc is recorded with multi-angles.

Note: The number of angles is different according to the disc.

The function only work for discs having scenes recorded at different angles.

Multi-Subtitle

In DVD playback, press this button repeatedly to switch the language of subtitle if the DVD disc is recorded with multi-subtitles.

Multi-Audio

In DVD playback, press this button repeatedly to switch the language of audio if the DVD disc is recorded with multi-languages. In VCD playback, press this button repeatedly to switch L/R or stereo audio track.

Title Playback

In DVD playback, press this button to return to title menu. The titles of DVD disc will be shown on the connected monitor. User can select the chapter by using the cursor keys (◀, ▶, ▲, ▼) and numeric keypad, finally press the **ENTER** button to play the chapter.

PBC Playback

In VCD playback, press the PBC button on the remote control to turn on the PBC mode, the PBC menu of VCD disc will be displayed on the connected monitor. User can select the chapter by using the cursor keys (◀, ▶, ▲, ▼) and numeric keypad, finally press the **ENTER** button to play the track.

Note: This PBC function is suitable for the SVCD and VCD2.0 disc.

OSD(On Screen Display)

In DVD/VCD playback, press this button repeatedly to show information such as Title number, Chapter number, Track number, elapsed time, remain time etc.

AUXILIARY INPUT OPERATION

This car radio is equipped an external auxiliary input jack (3.5mm) on the front panel, and a pair audio auxiliary input RCA connector at the rear cabinet of the head unit, it is compatible with audio output from an MP3 music player.

If you have plugged such a player into the AUX IN jack with a audio cable. Or connect other audio device to the audio auxiliary input RCA connector on the rear cabinet of the head unit with a audio input cable. Press the **SRC** button to switch to the AUX input mode, then you can listen to music from external devices.

Note:

Do not use the AUX IN jack and the audio auxiliary input RCA connector at the same time, otherwise, it will cause the audio auxiliary function unusable.

BLUETOOTH OPERATION

Pair and Connect

Prior to using the Bluetooth device as a handsfree system for a Bluetooth-enabled mobile phone for the first time, you must pair and connect the two devices as follows:

1. In any mode, prior to pairing and connecting, the BT logo flashes in the LCD indicating that no device is connected. To begin pairing, enable BT mode on your mobile phone.
2. When the phone finds the car audio system, the BOSS BV6658B name will be displayed.
3. Choose the BOSS BV6658B from the device list to pair and connect with the car audio system. Upon confirming, the BT logo will stop flashing.
4. When pairing is complete, the mobile phone audio will automatically transfer to the car audio system whenever a call is made or received, or when the mobile phone plays musics.

Make a Call

- To make a call, dial the call directly from the paired mobile phone.
- To make a call with this Bluetooth handsfree system.
 - a) When linking up the Bluetooth mobile phone to this car audio handsfree system, press the  button to access the dial telephone number mode, then press the "0~9", * and # button on the remote control to input the telephone number, the entered number will be shown on the LCD.
 - b) If a number has been incorrectly input, press the  button to delete it.
 - c) Press the  button to make outgoing call.

Redial Last Dialed Number

Press and hold the  button on the control panel to redial the last dialed phone number.

Answer a Call

- When the mobile phone is called, the incoming telephone number displays in the LCD.
- To receive the call, press the  button on the control panel or remote control.

Reject or End a Call

To reject the call or end an active call, press the  button.

Switch Audio Between Car and Mobile Phone

During a call, press the **VOL** knob/button to switch the audio source from the car audio system back to your mobile phone.

Adjust Call Volume

- During a call, use **VOL** knob or **VOL +** and **VOL -** buttons to adjust the volume level.
- Use the **MUTE** button to mute sound.

Audio Streaming (A2DP)

1. Press the /SRC button to enter BT mode and display pause in the LCD.
2. When a mobile device is paired, music played through that device will automatically be heard through the car audio system.
3. Press the  or  button to play the next or previous song/file on the mobile phone.
4. Press the  button to pause or resume music playback.

REMOTE CONTROL

Button Names and Locations

1. (Power on/off) button

Press once to turn on the unit, press again to switch off the unit.

2. **MODE(Source)** button

Press the button to select different modes: RADIO/DISC/USB/AUX IN/BT(Bluetooth).

3. **Band** button, **SYS(PAL/NTSC System)**

In radio mode, press this button to select band.

During video playback, press this button to choose TV system: AUTO, PAL or NTSC.

4/5/8/26. **Cursor keys(UP, DOWN, LEFT, RIGHT)**

In DVD/VCD/MP4/MP3 mode, press these buttons to move cursor in the menu to choose the item in menu.

6. **ENTER, (Play/Pause)** button

In DVD/VCD/MP4/MP3 mode, press this button to confirm the setting of the menu.

Press this button to pause or resume the playback.

7. (**STOP**), (**Return**) button

In DVD/VCD/MP4/MP3 mode, press this button to PRE STOP(Pause) or stop playback.

9. **AMS(Auto Store/Recall Preset Station), RPT(Repeat)** button

In radio mode, press and hold this button to store radio station, press this button to recall the preset stations.

In DVD/VCD/MP4/MP3 mode, press this button to enter different repeatedly playing modes: RPT CHP(chapter), RPT TIT(title), RPT ONE, RPT FLR(folder), RPT ALL,

10. **ST(Stereo/mono), PROG(Program)**

In FM reception mode, press this button to choose STEREO or MONO audio effect.

In DVD/VCD mode, press this button to enter the program play mode, then user can set the sequence of playback.

11. **LOC(LOC/DX), RDM(Random)** button

In FM reception mode, press this button to choose local or distant reception mode.

In DVD/VCD/MP4/MP3 mode, press this button to play all the tracks in random order.

12/31. **SEEK-/SEEK+, /**

In radio mode, press and hold the **SEEK-/SEEK+** button to enter manual tuning mode.

Then press the **SEEK-/SEEK+** button to manual tuning or seek tuning down or up.


In DVD/VCD/MP4/MP3 mode, press the  /  button to skip to previous or next track.

Press and hold  /  button to reverse and fast forward with X2, X4,X8,X20 speed.

13. **PBC(Playback Control), (Answer/Outgoing call/ Redial)**

In VCD playback, press this button to choose PBC on or off.

When PBC is on, the PBC interactive menu will be visible on the connected monitor, user can select a desired video or track by using the numeric keys on remote control.

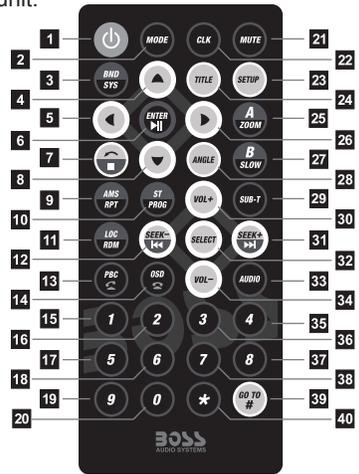

REMOTE CONTROL (CONT.)

Button Names and Locations

In BT mode, press this button to answer a call, make a call or redial the last dialed phone.

14. OSD(On Screen Display), (Reject or End a call) button

In DVD/VCD playback, press this button repeatedly to show information such as Title number, Chapter number, Track number, elapsed time, remain time etc.

In BT mode, press this button to reject or end a call.

15~20, 35~40. Numeric Keypad, GO TO button

In radio mode, press and hold the preset buttons(1~6) to store the preset stations manually. Press the preset buttons (1~6) to recall the preset stations.

In DVD/VCD playback, press the numeric keys to choose the desired chapter, title or track.

In DVD/VCD playback, press the **GOTO** button to enter the title or track search mode.

In BT mode, press the numeric keys to input the telephone number.

21. MUTE button

Press this button to silence the audio output, press again to resume volume level.

22. CLK(Clock Settings) button

Press this button to show clock time. Press and hold this button to enter clock setting mode.

23. Setup button

In DVD/VCD playback, press this button to enter the setup page.

24. Title button

In DVD playback, press this button to enter title menu.

25. A(ZONE A), ZOOM(zoom in/out) button

Press the **A** button to turn on or off the front audio outputs: ZONE A ON/OFF, A+B ON/OFF.

In DVD/VCD playback, press and hold this button repeatedly to zoom in or zoom out: ZOOM 2, ZOOM 3, ZOOM 4, ZOOM 1/2, ZOOM 1/3, ZOOM 1/4, ZOOM OFF.

27. B(ZONE B), SLOW button

Press the **B** button to turn on or off the rear audio outputs: ZONE B ON/OFF, A+B ON/OFF.


In DVD/VCD playback, press and hold this button repeatedly to play slowly: SL 1/2, SL 1/3, SL 1/4, SL 1/5, SL 1/6, SL 1/7, SL off.

28. ANGLE button

In DVD playback, press this button repeatedly to switch the viewing angle if the DVD disc is recorded with multi-angles.

29. SUB-T(Subtitle language) button

In DVD playback, press this button repeatedly to switch the language of subtitle if the DVD disc is recorded with multi-subtitles.

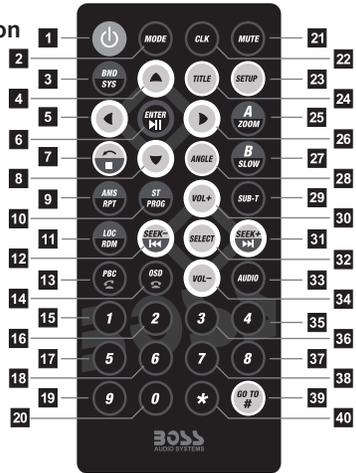

REMOTE CONTROL (CONT.)

Button Names and Locations

30/34. VOL+(Volume Increase), VOL-(Volume Decrease)

Press **VOL+** or **VOL-** button to increase or decrease volume level.


32. SELECT(Audio/Function Settings) button

Press this button to choose aud and function items or confirm the your settings.

33. AUDIO(Audio Language) button

In DVD playback, press this button repeatedly to switch the language of audio if the DVD disc is recorded with multi-languages. In VCD playback, press this button repeatedly to switch L/R or stereo audio track.

Note: When using the remote control for the first time, you must pull out the portective plastic tab from the battery compartment found on the back of the remote control.

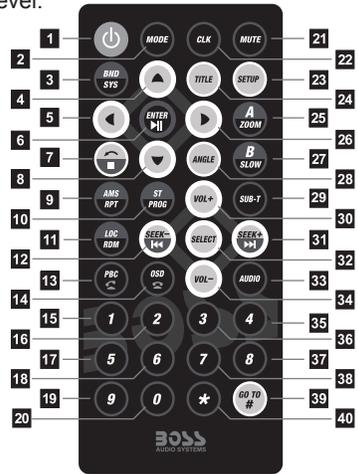


Remove Insulating Sheet

The remote control comes with an insulating sheet attached to the underside of the remote control, as illustrated on the right. The remote control will not work until the insulating sheet is removed.

Replace Lithium Battery Cell

1. When the lithium cell battery becomes weak, replace it as illustrated on the right.
2. Press and hold the movable block in the direction indicated by arrow 1. At the same time, pull the cell holder out of the remote control in the direction indicated by arrow 2.
3. Replace the old cell with a new one, making sure the (+) polarity is facing upward.
4. Re-insert the cell holder into the remote control.

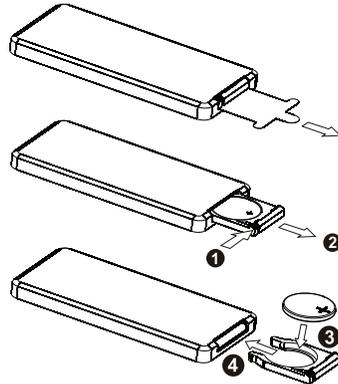

- Cell leakage may cause damage to the remote control.
- Do not throw cells into fire, as this may cause an explosion.
- Keep battery cells out of reach of children.

Remote Control Operation

Position the emitting window of the remote control toward the sensor window of the unit.

- The operation angle for front panel remote control reception is about 30 degrees.
- The distance between the emitting window of the remote control and the sensor window of the unit should remain less than 5 meters.


SETUP OPERATION

In DVD/VCD playback, press the SETUP button on the remote control to enter the system setup. for this unit. The system setup page will be visible on the connected monitor.

A. SYSTEM SETUP

1. TV SYSTEM

This DVD player is compatible with playing discs recorded in either PAL and NTSC format. Please choose PAL or NTSC according to the connected monitor type: PAL TV set or NTSC TV set. You can also choose AUTO if you're unclear which one you connected.

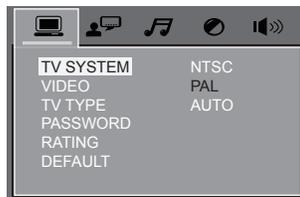

2. VIDEO

Please select the S-Video (Separate Video) format if you connected to a TV set with S-Video cable.

3. TV TYPE

This is to select the appropriate TV aspect (4:3 or 16:9) according to the connected TV set.

- a) 4:3 PS: Played back in the PAN & SCAN style. (If connected to wide-screen TV, the left and right edges are cut off.)
- b) 4:3 LB: Played back in LETTERBOX style. (If connected to wide-screen TV, black bands appear at top and bottom of the screen)
- c) 16:9: Select when a wide-screen TV set is connected.

4. PASSWORD

The password for this DVD player is initially set to factory default "0000". If you want to change your password, you need to enter the old password first and confirm it, then input a new password and confirm.

5. RATING(Parental Setup)

For DVD discs which support the USA rating system, by using this function, children will be barred from watching content that may not be suitable for their age. You have to input the password when you want to change the rating setting.

Rating 1: [KID SAFE] -- Select it if the programs are safe to all kids view.

Rating 2: [G] -- Select it to indicate that it allows admission to person of all ages.

Rating 3: [PG] -- Select it to indicate that it needs parents to guide their children.

Rating 4: [PG-13] -- Select it to indicate that children under 13 are forbidden to view.

Rating 5: [PG-R] -- Select it if "PG-R" was printed on the DVD disc.

Rating 6: [R] -- Select it to indicate that children under 17 must be guided to view by their parents.

Rating 7: [NC-17] -- Select it to indicate that children under 17 are forbidden to view.

Rating 8: [ADULT] -- Select it to indicate that only adults are permitted to view.

6. DEFAULT

Set all values to the factory default values including radio preset stations and other preset memories of this unit.

B. LANGUAGE SETUP

User can select the preferred OSD Language, Audio Language, Subtitle Language and Menu Language. The default language is in English.




SETUP OPERATION

C. AUDIO SETUP

KEY


This is to select key up and down according to your needs.

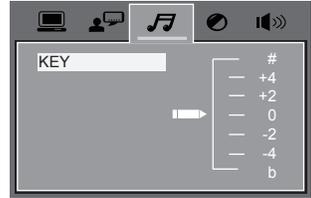

D. VIDEO SETUP

This is to let the user set Brightness, Contrast, Hue, Saturation and Sharpness using the cursor keys(◀ , ▶ , ▲ , ▼) and **ENTER** button on the remote control.

1. BRIGHTNESS: 0,2,4,6,8,10,12.
2. CONTRAST: 0,2,4,6,8,10,12.
3. HUE: -6,-4,-2,0,+2,+4,+6
4. SATURATION: 0,2,4,6,8,10,12
5. SHARPNESS:0,2,4,6,8

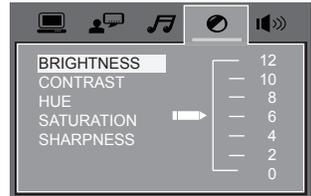

E. SPEAKERS SETUP

DOWNMIX



SPECIFICATIONS

General

Power Supply Requirement.....	DC 12V
Current Consumption	15A MAX
Maximum Power Output.....	50W x 4CH

Radio

FM

USA/Europe.....	87.5 MHz - 107.9 MHz/87.5 - 108.0 MHz
Usable Sensitivity	30 dBu
I.F. Frequency.....	10.7 MHz

AM

USA/Europe.....	530 KHz - 1710 KHz/522 - 1620 KHz
Usable Sensitivity	20 dBu
I.F. Frequency.....	450 KHz

DVD PLAYER

Usable Audio Formats	DVD±R/RW/CD±R/RW/JPEG/MP3/WMA
USB Port Type.....	2.0
USB Charging.....	5V/1A
Pre-amp Output.....	Front and Rear
Frequency Response	20 Hz - 20 KHz
S/N Ratio	60dB

BT

BT Profile supports	A2DP, AVRCP, HFP
Range of frequency	2.4GHz spectrum

TROUBLESHOOTING

Symptom	Cause	Solution
No Power	Car ignition not on	Switch ignition key to "ACC"
	Fuse blown	Replace fuse
Disc cannot be loaded	Another disc is already in the player	Eject disc and insert new one
Disc cannot be read	Disc was inserted upside down	Insert disc with label facing upward
	Disc is dirty or scratched	Clean the disc or try to play a new one
	Temperature inside the car is too high	Allow vehicle to cool before using player
No sound	Volume turned down	Adjust volume to desired level
	Wiring not properly connected	Check and repair wiring connection
Operation keys not working	Front panel not properly fixed into place	Reinstall the front panel
	Car interior is too hot	Allow vehicle to cool before using player
Sound skips	Installation angle is more than 30 degrees	Adjust installation angle to less than 30 degrees
	Disc is dirty or scratched	Clean disc or try to play a new one
Radio does not work	Antenna cable not connected	Insert antenna cable firmly
Automatic radio station selection does not work	Signals are too weak	Select a station manually

USER'S MANUAL

BV6658B

BLUETOOTH® | DVD/MP3/CD AM/FM RECEIVER



BOSS Audio Systems

3451 Lunar Court • Oxnard, CA 93030

www.bossaudio.com

800-999-1236 US Toll-Free

805-751-4853 Customer Service

Tech Support: www.bossaudio.com/support/technical-support



0818

iPod® / iPhone® are trademarks of Apple, Inc. registered in the U.S. and other countries.

BOSS Audio Systems is not affiliated with Apple, Inc.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by BOSS Audio Systems is under license. Other trademarks and trade names are those of their respective owners.