



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

115172
DINING CHAIR

REVISION 0: 06/30/2021

ITEM : 115172



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING !




- 1.Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2.This product is for home use only and not intended for commercial establishments.






ASSEMBLY TIME

5 MINUTES

PARTS IDENTIFICATION

A		BACK REST	1PC
B		SEAT	1PC
C		FRONT LEG	2PCS

HARDWARE IDENTIFICATION


HARDWARE PACKAGE				
1	SHORT BOLT		M8*55	1pcs
2	LARGE BOLT		M8*60	4pcs
3	LARGEST BOLT		M8*75	4pcs
4	ALLEN KEY		M8	1pcs
5	LOCK WASHER			9pcs
6	FLAT WASHER			9pcs

ITEM: 115172




ASSEMBLY INSTRUCTIONS


STEP1

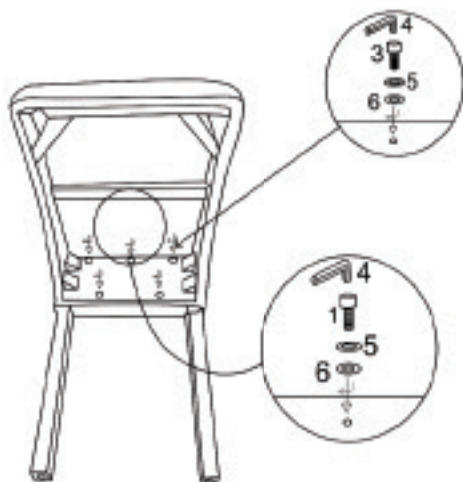

STEP2

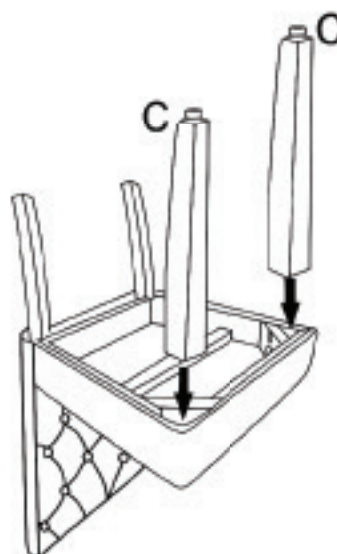

STEP3

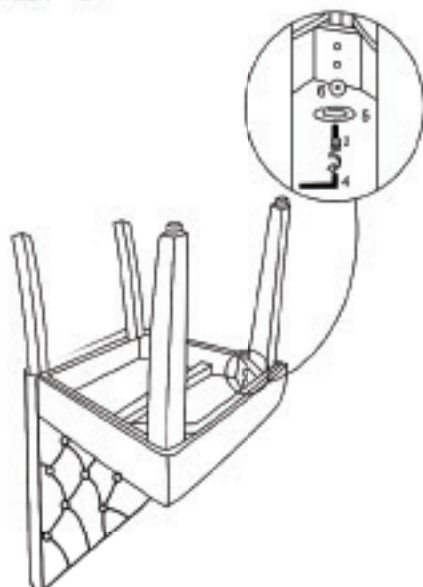


STEP4



ITEM: 115172



ASSEMBLY INSTRUCTIONS

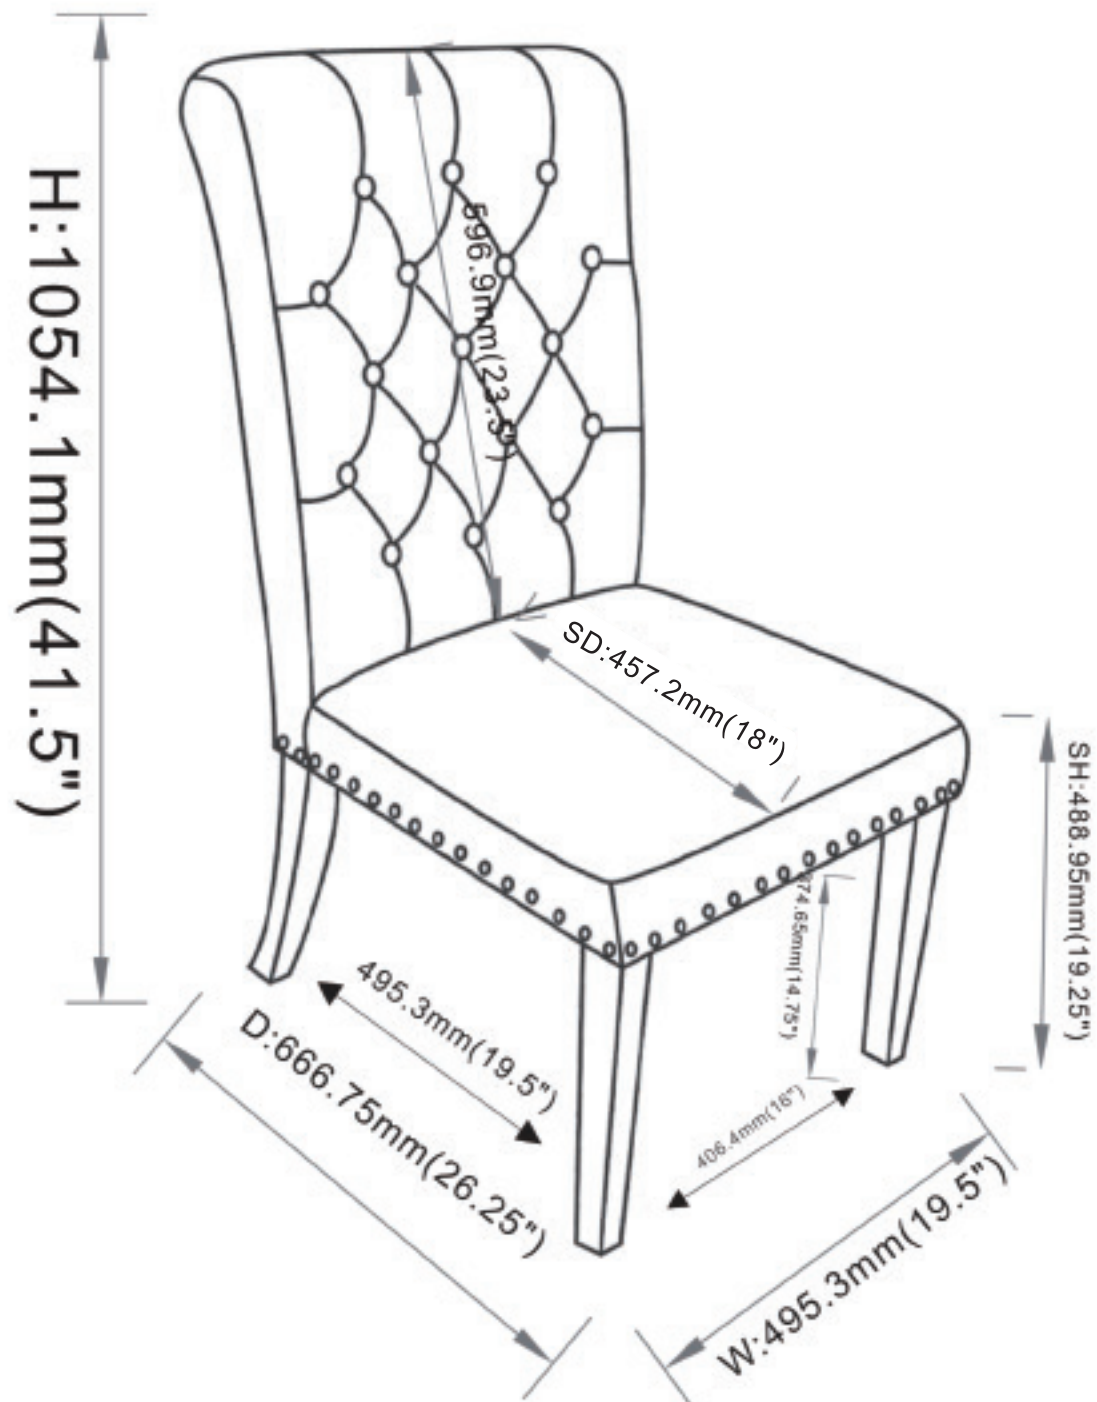

Note:Dimension tolerance $\pm 5\%$