 
 





ASSEMBLY INSTRUCTION FOR POWER MOTION SOFA U-5340-8682-305P

Caution: Please read instructions thoroughly before unpacking assembly parts. Sharp, exposed staple tips can cause injury, therefore, for your protection, please remove any exposed staples used in packing.

1. We recommend that you should assemble this product with the assistance of another person; this will make assembly easier, and will help to eliminate damage to the product or injury to persons during assembly.
2. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.
3. Please do not over tighten screws or bolts.
4. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

PARTS LIST				
NO.	PART DESC		CODE	QTY
A	LAF BACKREST			1
B	RAF BACKREST			1
C	MIDDLE BACKREST			1
D	SEAT			1
E	POWER ADAPTER		PU-5340-ADT	1

 Do not plug your recliner power cord into a power outlet until your recliner is completely assembled and in the location of its intended use.

Notes:

- 1) To help prevent shock or damage to your product, only plug the power cord into a grounded outlet.
- 2) Read the operating instructions carefully before operating your power sofa.
- 3) Mechanism weight limited 350 LBS.

 
ASSEMBLY INSTRUCTION FOR POWER MOTION SOFA U-5340-8682-305P

Please following the drawings below to assemble the item

STEP:1

Attaching the KD Backs:


Position the back of PWR Recliner Sofa with the KD receivers positioned over the mechanism. Check to assure the mechanism are positioned inside of the KD receiver on the back frame, pushing in a downward motion from the top of the back frame until a clicking sound is heard.

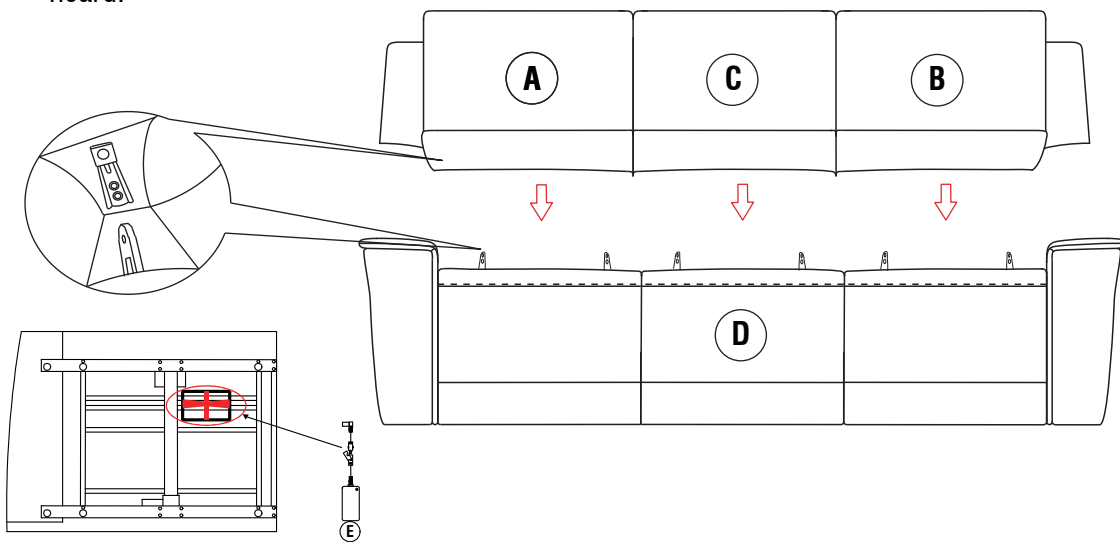

STEP:2

Lift velcroed flap located at the bottom back of the Latch male wire plug from backrest (headrest motor wire) to female wire receiver located in the back bottom of the recliner underneath the flap. This instruction is applicable to all power recliners.

 
Velcroed Flaps

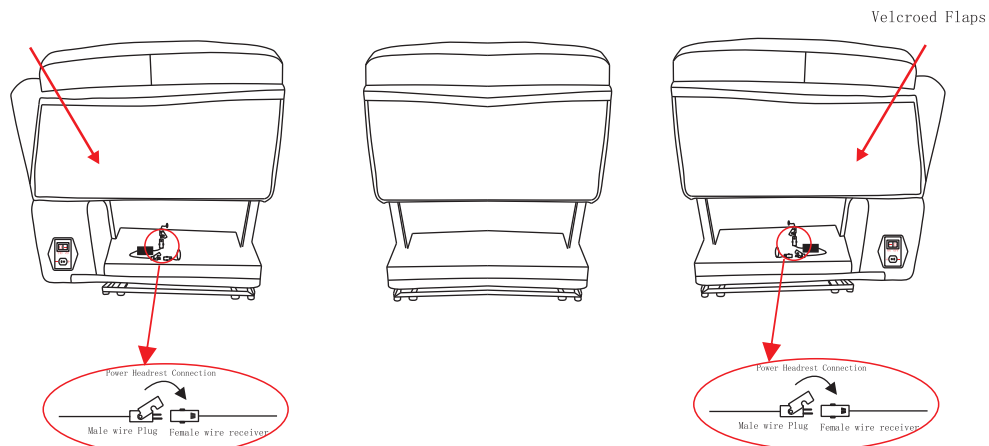



ASSEMBLY INSTRUCTION FOR POWER MOTION SOFA U-5340-8682-305P

STEP:3

 Connect wall plug transformer to transformer switch.
wall plug transformer to Transformer
Power Switch

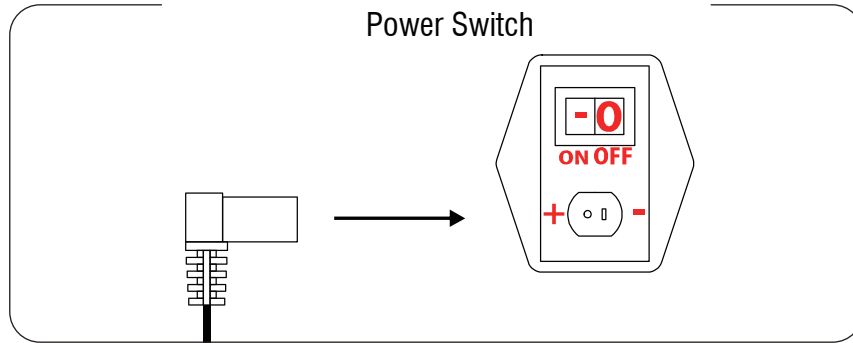

  Connect wall plug transformer from Left Arm Seat to outlet.
wall plug transformer to Electrical Outlet

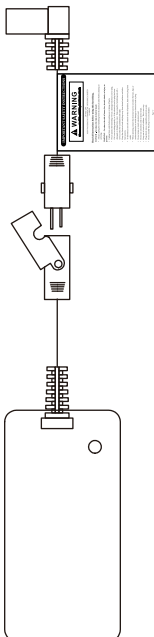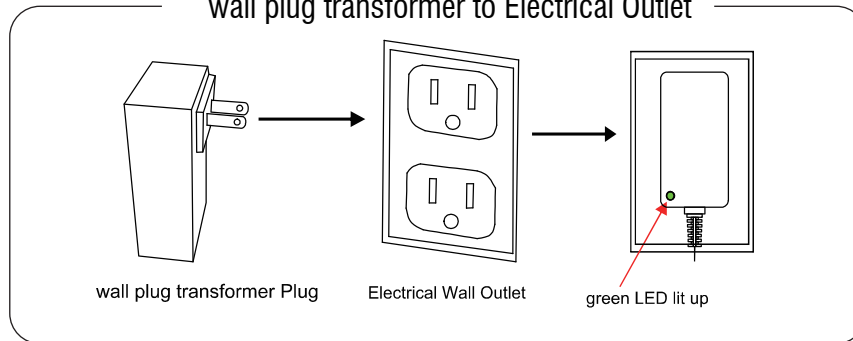

ENGLISH

IMPORTANT SAFETY INSTRUCTIONS

⚠ WARNING

Misuse can result in FIRE or DEATH by ELECTRICAL SHOCK

29 VDC/ 2.0A
MAN WAH (MACAO COMMERCIAL OFFSHORE) LIMITED
141609654

Read all instructions before using this furnishing.

DANGER – To reduce the risk of electric shock:

- Always unplug this furnishing from the electrical outlet before cleaning or servicing.

WARNING – To reduce the risk of burns, fire, electric shock, or injury to persons:

- Unplug from outlet before putting on or taking off parts.
- Never operate this furnishing if it has a damaged electrical cord or plug, if it is not working properly, or if the electrical cord or plug has been damaged or dropped into water. Stop using this furnishing and call a service center for examination and repair.
- Keep the electrical cord and plug away from heated surfaces and other heat sources.
- To disconnect, turn all controls to the off position, then remove plug from outlet.
- When operating, ensure that electrical cord is not under the base, legs, or motion mechanism to avoid damage to electrical cord or plug.
- Do not strain or stretch electrical cord.
- Do not use extension cords or power strips.
- Keep out of reach of children. This is not a toy.
- Plug directly into a compatible electrical socket.
- Do not modify the plug or use any adapters.

SPANISH

INSTRUCCIONES DE SEGURIDAD IMPORANTES

⚠ WARNING

El mal uso puede provocar INCENDIO o MUERTE por DESCARGA ELÉCTRICA

29 VDC/ 2.0A
MAN WAH (MACAO COMMERCIAL OFFSHORE) LIMITED
141609654

Leer todas las instrucciones antes de usar este mobiliario.

PELIGRO – Para reducir el riesgo de descarga eléctrica:

 
- Siempre desenchufe este accesorio de la toma de corriente eléctrica antes de limpiarlo o repararlo.

ADVERTENCIA: para reducir el riesgo de quemaduras, incendios, descargas eléctricas o lesiones a personas:

- Desenchufe del tomacorriente antes de colocar o quitar partes.
- Nunca opere este accesorio si tiene un cable o enchufe eléctrico dañado, si no funciona correctamente, o si el cable o el enchufe eléctrico se ha dañado o se ha caído al agua. Deje de usar este equipamiento y llame a un centro de servicio para que lo examinen y lo reparen.
- Mantenga el cable eléctrico y el enchufe lejos de superficies calientes y otras fuentes de calor.
- Para desconectar, gire todos los controles a la posición de apagado, luego retire el enchufe del tomacorriente.
- Al operar, asegúrese de que el cable eléctrico no esté debajo de la base, las patas o el mecanismo de movimiento para evitar dañar el cable eléctrico o el enchufe.
- No fuerce ni estire el cable eléctrico.
- No utilice cables de extensión o tomas de corriente.
- Mantener fuera del alcance de los niños. Esto no es un juguete.
- Enchufelo directamente a una toma de corriente compatible.
- No modifique el enchufe ni utilice adaptadores.


ASSEMBLY INSTRUCTION FOR POWER MOTION SOFA U-5340-8682-305P

STEP:4

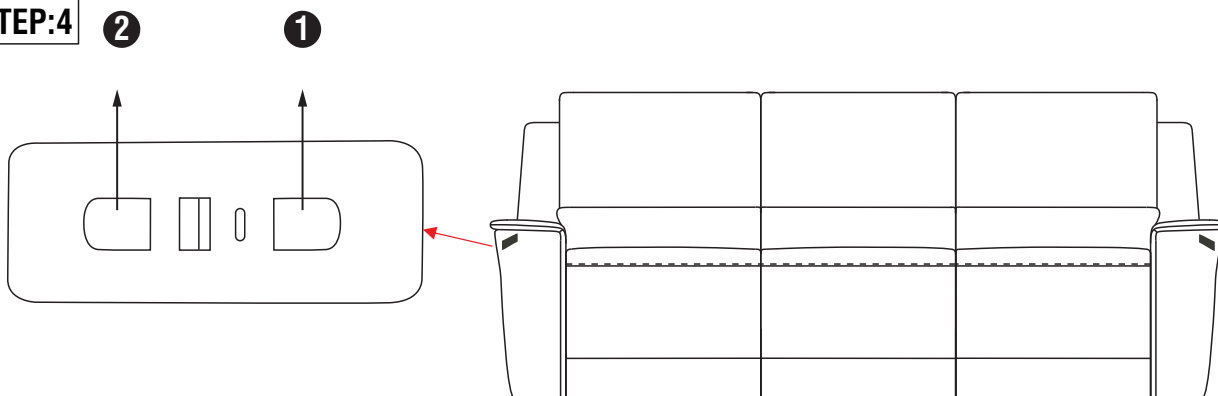

1. Press button **1** to recline the chair to desired position.
2. Press button **2** to raise the chair to the upright position.

 
*Clearance to the wall 30 cm

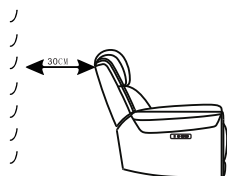

*Avoid placing unit in areas where unit can be exposed to direct sunlight other powerful light source"



*Keep unit at least 24" from all heat sources.

 as fading or discoloration may occur.

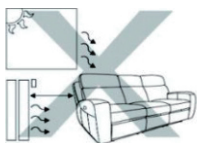

*Do not reach under seat when mechanism is operating or serious injury may occur.

  *Reclining mechanism should only be operated while seated properly.

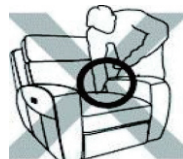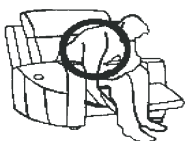

Do not sit on arms or backrest Do not jump or roughhouse on furniture

 






COMPLETED

ASSEMBLY INSTRUCTION FOR POWER MOTION LOVESEAT WITH CONSOLE U-5340-8682-285PSP

Caution: Please read instructions thoroughly before unpacking assembly parts. Sharp, exposed staple tips can cause injury, therefore, for your protection, please remove any exposed staples used in packing.

  1. We recommend that you should assemble this product with the assistance of another person; this will make assembly easier, and will help to eliminate damage to the product or injury to persons during assembly.
2. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.
3. Please do not over tighten screws or bolts.
4. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

PARTS LIST				
NO.	PART DESC		CODE	QTY
A	LAF BACKREST			1
B	RAF BACKREST			1
C	MIDDLE BACKREST			1
D	SEAT			1
E	POWER ADAPTER		PU-5340-ADT	1

Do not plug your recliner power cord into a power outlet until your recliner is completely assembled and in the location of its intended use.

Notes:

- 1) To help prevent shock or damage to your product, only plug the power cord into a grounded outlet.
- 2) Read the operating instructions carefully before operating your power sofa.
- 3) Mechanism weight limited 350 LBS.

 
ASSEMBLY INSTRUCTION FOR POWER MOTION LOVESEAT WITH CONSOLE U-5340-8682-285PSP

Please following the drawings below to assemble the item

STEP:1

Attaching the KD Backs:


Position the back of PWR Recliner Sofa with the KD receivers positioned over the mechanism. Check to assure the mechanism are positioned inside of the KD receiver on the back frame, pushing in a downward motion from the top of the back frame until a clicking sound is heard.

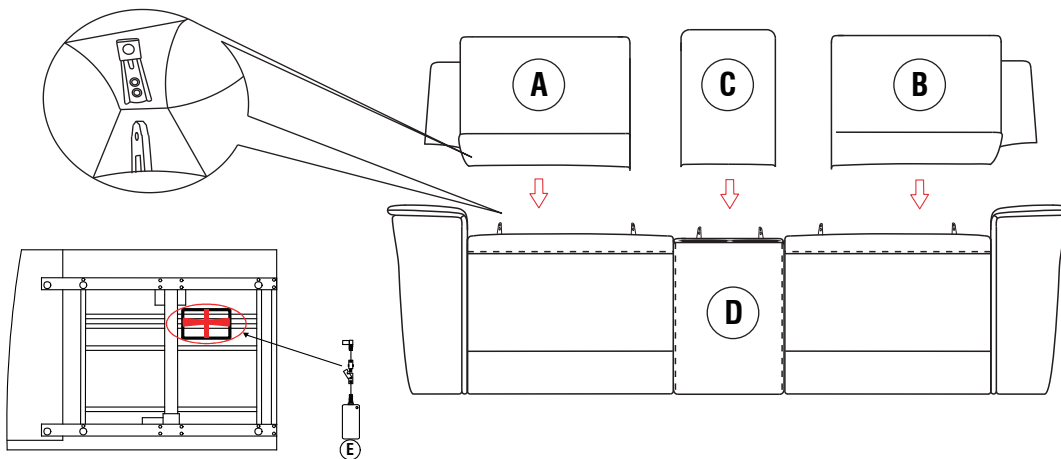

STEP:2

Lift velcroed flap located at the bottom back of the Latch male wire plug from backrest (headrest motor wire) to female wire receiver located in the back bottom of the recliner underneath the flap. This instruction is applicable to all power recliners.

 
Velcroed Flaps

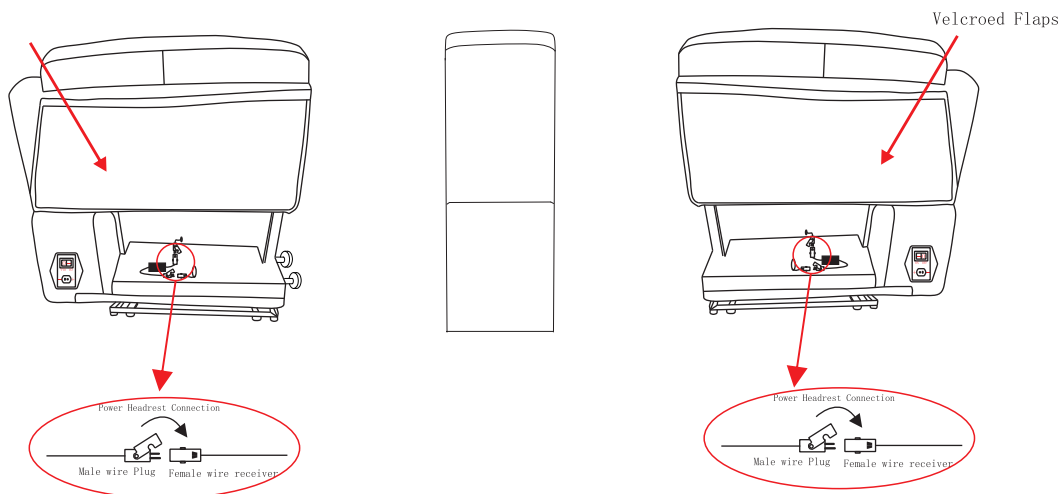



ASSEMBLY INSTRUCTION FOR POWER MOTION LOVESEAT WITH CONSOLE U-5340-8682-285PSP

STEP:3

 Connect wall plug transformer to transformer switch.
wall plug transformer to Transformer
Power Switch

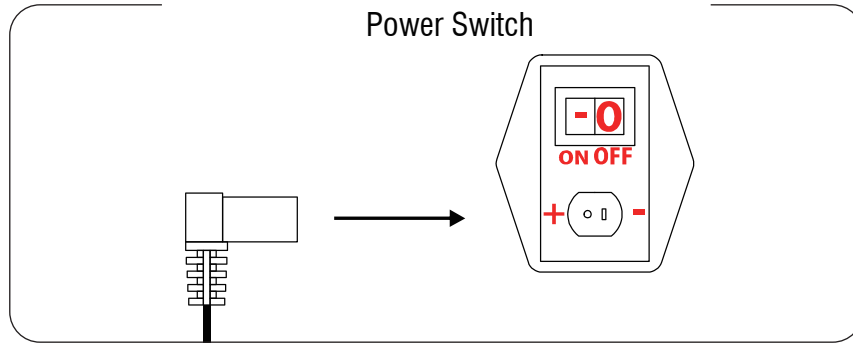

  Connect wall plug transformer from Left Arm Seat to outlet.
wall plug transformer to Electrical Outlet

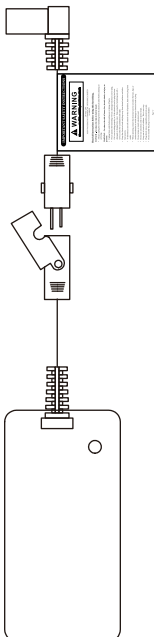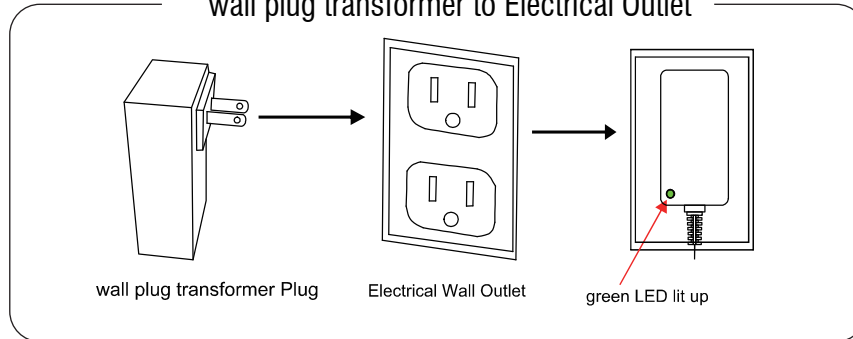

ENGLISH

IMPORTANT SAFETY INSTRUCTIONS

⚠ WARNING

Misuse can result in FIRE or DEATH by ELECTRICAL SHOCK

29 VDC/ 2.0A
MAN WAH (MACAO COMMERCIAL OFFSHORE) LIMITED
141609654

Read all instructions before using this furnishing.

DANGER - To reduce the risk of electric shock:

- Always unplug this furnishing from the electrical outlet before cleaning or servicing.

WARNING - To reduce the risk of burns, fire, electric shock, or injury to persons:

- Unplug from outlet before putting on or taking off parts.
- Never operate this furnishing if it has a damaged electrical cord or plug, if it is not working properly, or if the electrical cord or plug has been damaged or dropped into water. Stop using this furnishing and call a service center for examination and repair.
- Keep the electrical cord and plug away from heated surfaces and other heat sources.
- To disconnect, turn all controls to the off position, then remove plug from outlet.
- When operating, ensure that electrical cord is not under the base, legs, or motion mechanism to avoid damage to electrical cord or plug.
- Do not strain or stretch electrical cord.
- Do not use extension cords or power strips.
- Keep out of reach of children. This is not a toy.
- Plug directly into a compatible electrical socket.
- Do not modify the plug or use any adapters.

SPANISH

INSTRUCCIONES DE SEGURIDAD IMPORANTES

⚠ WARNING

El mal uso puede provocar INCENDIO o MUERTE por DESCARGA ELÉCTRICA

29 VDC/ 2.0A
MAN WAH (MACAO COMMERCIAL OFFSHORE) LIMITED
141609654

Leer todas las instrucciones antes de usar este mobiliario.

PELIGRO - Para reducir el riesgo de descarga eléctrica:

 
- Siempre desenchufe este accesorio de la toma de corriente eléctrica antes de limpiarlo o repararlo.

ADVERTENCIA: para reducir el riesgo de quemaduras, incendios, descargas eléctricas o lesiones a personas:

- Desenchufe del tomacorriente antes de colocar o quitar partes.
- Nunca opere este accesorio si tiene un cable o enchufe eléctrico dañado, si no funciona correctamente, o si el cable o el enchufe eléctrico se ha dañado o se ha caído al agua. Deje de usar este equipamiento y llame a un centro de servicio para que lo examinen y lo reparen.
- Mantenga el cable eléctrico y el enchufe lejos de superficies calientes y otras fuentes de calor.
- Para desconectar, gire todos los controles a la posición de apagado, luego retire el enchufe del tomacorriente.
- Al operar, asegúrese de que el cable eléctrico no esté debajo de la base, las patas o el mecanismo de movimiento para evitar dañar el cable eléctrico o el enchufe.
- No fuerce ni estire el cable eléctrico.
- No utilice cables de extensión o tomas de corriente.
- Mantener fuera del alcance de los niños. Esto no es un juguete.
- Enchúfelo directamente a una toma de corriente compatible.
- No modifique el enchufe ni utilice adaptadores.


ASSEMBLY INSTRUCTION FOR POWER MOTION LOVESEAT WITH CONSOLE U-5340-8682-285PSP

STEP:4

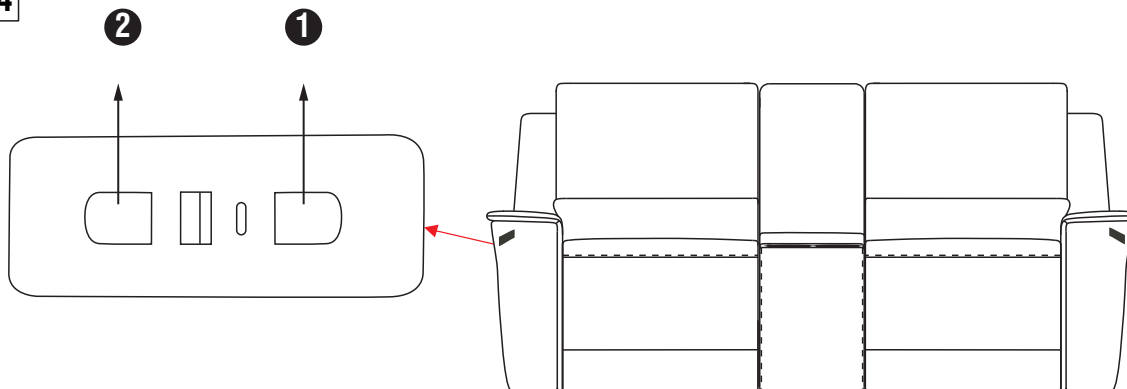

1. Press button **1** to recline the chair to desired position.
2. Press button **2** to raise the chair to the upright position.

 
*Clearance to the wall 30 cm

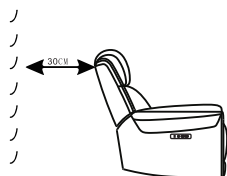

*Avoid placing unit in areas where unit can be exposed to direct sunlight other powerful light source"


*Keep unit at least 24" from all heat sources.

 as fading or discoloration may occur.

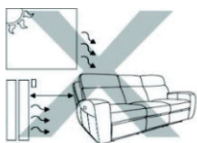

*Do not reach under seat when mechanism is operating or serious injury may occur.

 *Reclining mechanism should only be operated while seated properly.

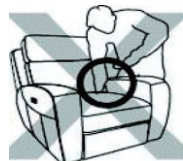

Do not sit on arms or backrest Do not jump or roughhouse on furniture

 
 
 


COMPLETED

ASSEMBLY INSTRUCTION FOR POWER MOTION RECLINER U-5340-8682-105P

Caution: Please read instructions thoroughly before unpacking assembly parts. Sharp, exposed staple tips can cause injury, therefore, for your protection, please remove any exposed staples used in packing.

1. We recommend that you should assemble this product with the assistance of another person; this will make assembly easier, and will help to eliminate damage to the product or injury to persons during assembly.
2. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.
3. Please do not over tighten screws or bolts.
4. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

PARTS LIST				
NO.	PART DESC		CODE	QTY
A	BACKREST			1
B	SEAT			1
C	POWER ADAPTER		PU-5340-ADT	1

Do not plug your recliner power cord into a power outlet until your recliner is completely assembled and in the location of its intended use.

Notes:

- 1) To help prevent shock or damage to your product, only plug the power cord into a grounded outlet.
- 2) Read the operating instructions carefully before operating your power sofa.
- 3) Mechanism weight limited 350 LBS.

 
ASSEMBLY INSTRUCTION FOR POWER MOTION RECLINER U-5340-8682-105P

Please following the drawings below to assemble the item

STEP:1

Attaching the KD Backs:


Position the back of PWR Recliner Sofa with the KD receivers positioned over the mechanism. Check to assure the mechanism are positioned inside of the KD receiver on the back frame, pushing in a downward motion from the top of the back frame until a clicking sound is heard.

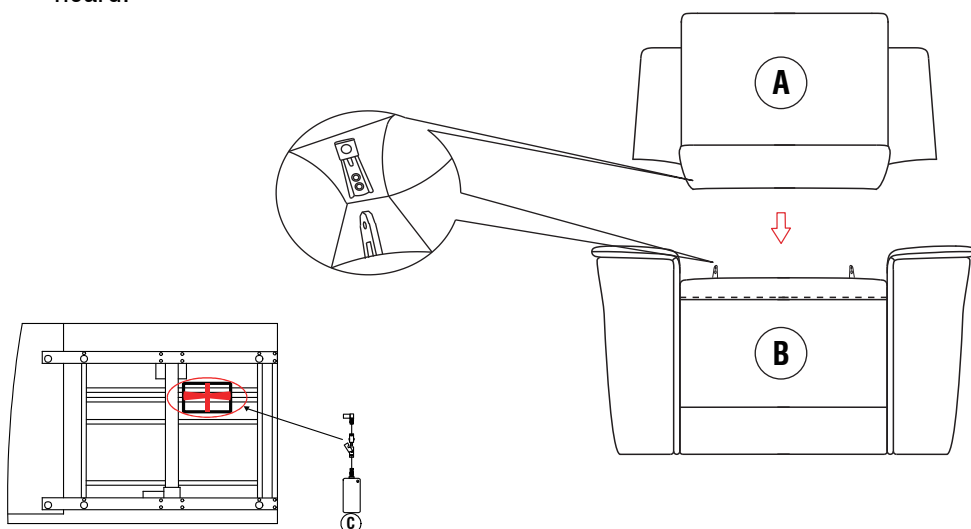

STEP:2

Lift velcroed flap located at the bottom back of the Latch male wire plug from backrest (headrest motor wire) to female wire receiver located in the back bottom of the recliner underneath the flap. This instruction is applicable to all power recliners.

 
Velcroed Flaps

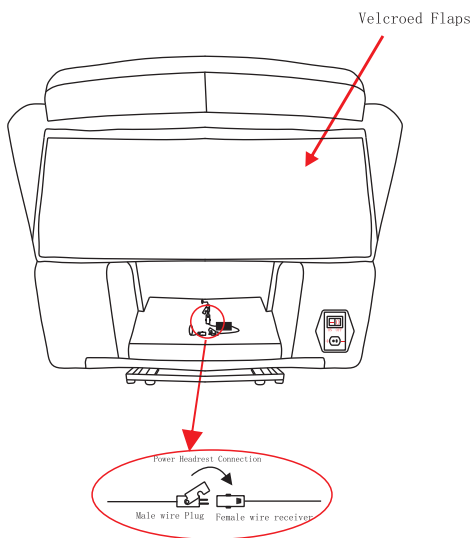



ASSEMBLY INSTRUCTION FOR POWER MOTION RECLINER U-5340-8682-105P

STEP:3

 Connect wall plug transformer to transformer switch.
wall plug transformer to Transformer
Power Switch

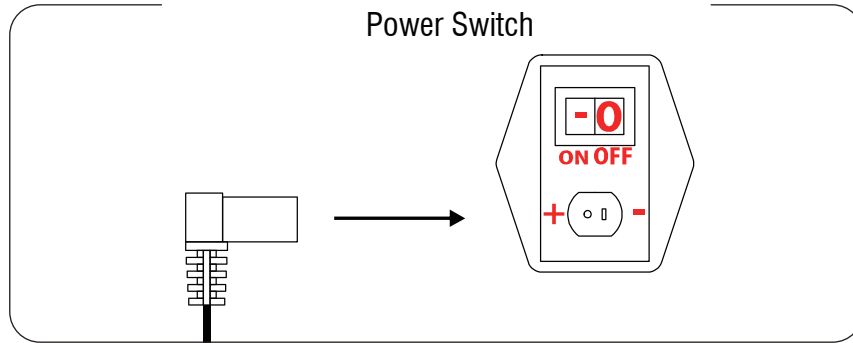

  Connect wall plug transformer from Left Arm Seat to outlet.
wall plug transformer to Electrical Outlet

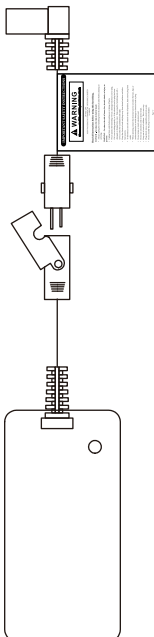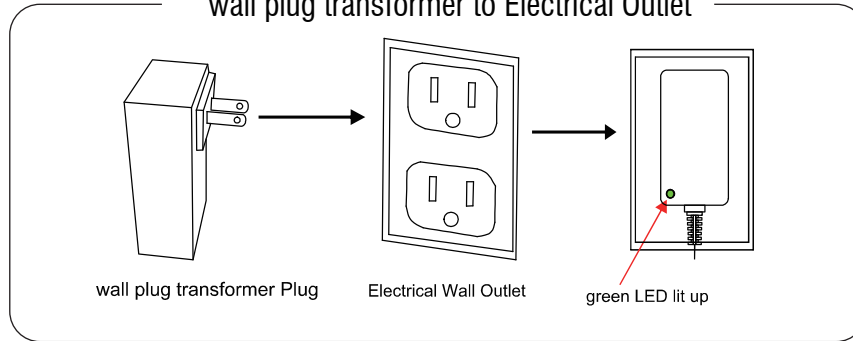

ENGLISH

IMPORTANT SAFETY INSTRUCTIONS

⚠ WARNING

Misuse can result in FIRE or DEATH by ELECTRICAL SHOCK

29 VDC/ 2.0A
MAN WAH (MACAO COMMERCIAL OFFSHORE) LIMITED
141609654

Read all instructions before using this furnishing.

DANGER - To reduce the risk of electric shock:

- Always unplug this furnishing from the electrical outlet before cleaning or servicing.

WARNING - To reduce the risk of burns, fire, electric shock, or injury to persons:

- Unplug from outlet before putting on or taking off parts.
- Never operate this furnishing if it has a damaged electrical cord or plug, if it is not working properly, or if the electrical cord or plug has been damaged or dropped into water. Stop using this furnishing and call a service center for examination and repair.
- Keep the electrical cord and plug away from heated surfaces and other heat sources.
- To disconnect, turn all controls to the off position, then remove plug from outlet.
- When operating, ensure that electrical cord is not under the base, legs, or motion mechanism to avoid damage to electrical cord or plug.
- Do not strain or stretch electrical cord.
- Do not use extension cords or power strips.
- Keep out of reach of children. This is not a toy.
- Plug directly into a compatible electrical socket.
- Do not modify the plug or use any adapters.

SPANISH

INSTRUCCIONES DE SEGURIDAD IMPORTANTES

⚠ WARNING

El mal uso puede provocar INCENDIO o MUERTE por DESCARGA ELÉCTRICA

29 VDC/ 2.0A
MAN WAH (MACAO COMMERCIAL OFFSHORE) LIMITED
141609654

Leer todas las instrucciones antes de usar este mobiliario.

PELIGRO - Para reducir el riesgo de descarga eléctrica:

 
- Siempre desenchufe este accesorio de la toma de corriente eléctrica antes de limpiarlo o repararlo.

ADVERTENCIA: para reducir el riesgo de quemaduras, incendios, descargas eléctricas o lesiones a personas:

- Desenchufe del tomacorriente antes de colocar o quitar partes.
- Nunca opere este accesorio si tiene un cable o enchufe eléctrico dañado, si no funciona correctamente, o si el cable o el enchufe eléctrico se ha dañado o se ha caído al agua. Deje de usar este equipamiento y llame a un centro de servicio para que lo examinen y lo reparen.
- Mantenga el cable eléctrico y el enchufe lejos de superficies calientes y otras fuentes de calor.
- Para desconectar, gire todos los controles a la posición de apagado, luego retire el enchufe del tomacorriente.
- Al operar, asegúrese de que el cable eléctrico no esté debajo de la base, las patas o el mecanismo de movimiento para evitar dañar el cable eléctrico o el enchufe.
- No fuerce ni estire el cable eléctrico.
- No utilice cables de extensión o tomas de corriente.
- Mantener fuera del alcance de los niños. Esto no es un juguete.
- Enchúfelo directamente a una toma de corriente compatible.
- No modifique el enchufe ni utilice adaptadores.


ASSEMBLY INSTRUCTION FOR POWER MOTION RECLINER U-5340-8682-105P

STEP:4

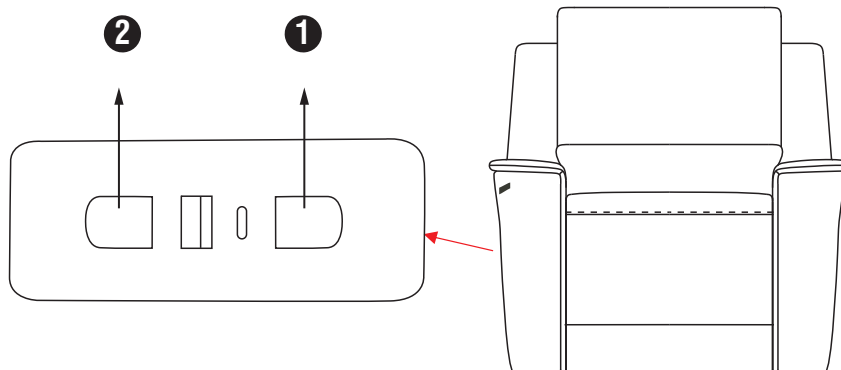

1. Press button **1** to recline the chair to desired position.
2. Press button **2** to raise the chair to the upright position.

 
*Clearance to the wall 30 cm

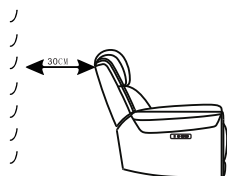

*Avoid placing unit in areas where unit can be exposed to direct sunlight other powerful light source"

*Keep unit at least 24" from all heat sources.

 as fading or discoloration may occur.

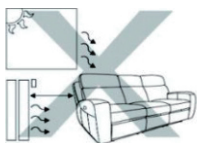

*Do not reach under seat when mechanism is operating or serious injury may occur.

*Reclining mechanism should only be operated while seated properly.



Do not sit on arms or backrest Do not jump or roughhouse on furniture



COMPLETED