

Better living means making fabrics last with thoughtful technology to experience laundry in a new way.

A Quick Guide to Getting Started



Before you begin

- Check that your washer is level with all four corners firmly resting on the floor.
- Check that all shipping materials are removed, and that new hoses are used for water connections.
- Following these tips will help prevent leaks and excessive vibration during wash cycles. Refer to the installation instructions section of your Use & Care Manual for more details.

Care and cleaning

- Detergent and fabric softener may build up in the dispenser drawer. Clean the drawer by removing and rinsing under hot tap water.
- Run the clean washer cycle with bleach or PureAdvantage™ Probiotic Washer Cleaner once a month to clean and freshen the washer. See your Use & Care Manual for additional cleaning instructions.



We Recommend:

Running the clean washer cycle and cleaning the dispenser drawer 1-2x per month.

FAQs

• How do I use my detergent dispenser?


This model is equipped with an Adaptive Dispenser™ with marked compartments for different laundry cleaning products. Add liquid bleach, fabric softener, and stain additives to the labeled compartments as needed. Do not fill any compartments in your dispenser beyond the maximum line, or use more than 2 detergent packs in the compartment.

• Is it normal for my washer to make sounds or noises?

Some sounds are part of your washer's normal operations. You may hear the drain hose, water valves or pumps moving water through the cycle. Check your Use & Care Manual to learn more.

• Can I open the washer door during a cycle?

If you need to add a forgotten item, press PAUSE and wait for the door to unlock. Add your item, close the door and press START to resume the cycle.

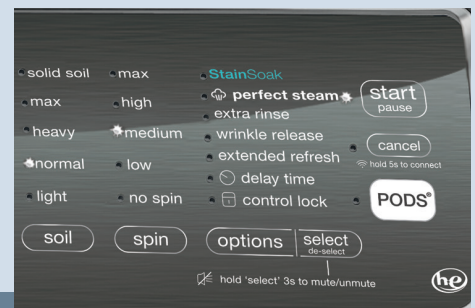

Remember to select PODS® on the display options when using detergent packs. This option will stay selected until you press to deactivate.



▶ Getting Started



▶ Turn on your washer

Press the power button to turn on your unit.

▶ Select a cycle

HEAVY DUTY
Select for heavily soiled, durable garments.

WHITEST WHITES
Select for white and lightly colored fabrics.

NORMAL
Select to wash cotton, linen, towels, sheets, denim and mixed loads.

ACTIVEWEAR
Select for lightweight synthetic apparel.

COLORS
Select for lightly soiled dark or dyed fabrics susceptible to dye loss.

15 MINUTE FAST WASH
Washes a small, lightly soiled load in 15 minutes.

DELICATES
Select for lightly soiled knits and delicates.

RINSE & SPIN
Select for loads needing a cold rinse or to add fabric softener missed in a regular cycle.

CLEAN WASHER
Select to clean the washer tub.

▶ Select cycle settings

WASH WATER TEMPERATURE
The wash water temperature is indicated by the chosen cycle. Press the temp button to change the temperature setting. Not all temperatures are available with every cycle.

SPIN SPEED
Increasing the spin speed will extract more water, decrease drying time, and conserve energy.

SOIL LEVEL
Adjusts the wash time based on the soil level of the load.

▶ Select cycle options

SELECTING OPTIONS
Press the option button to scroll through the options until the indicator light for the desired option flashes, then press select. See your Use & Care Manual for more information.

PODS®
Select the PODS option when using the detergent pack compartment. This option will remain active until you press PODS again to deselect it.

▶ Start load

Close the door and press the start/pause button.

▶ Learn More

We recommend familiarizing yourself with product features and terminology in your Use & Care Manual.



Peace of Mind & Protection
Look for the photo icon on your registration card to text and register, or visit us online. Get 2 additional years of product warranty with product registration through the Electrolux App.

electroluxappliances.com
(877) 435-3287
10200 David Taylor Drive
Charlotte, NC 28262

electroluxappliances.ca
(800) 265-8352
5855 Terry Fox Way
Mississauga, ON L5V 3E4