

UTTERMOST

ASSEMBLY INSTRUCTIONS

21410

WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF WHILE POWER BEFORE INSTALLING OR SERVICING THIS FIXTURE.

We suggest a licensed professional electrician for installation

Installation Steps

1. Turn power off at fuse or circuit box before starting installation process.
2. Carefully unpack your new fixture and lay out all the parts on a clear surface.
3. Choose desired hanging length for the light fixture. Adjust the Chain & wire to the desired length remove extra links and extra wire as needed. Thread wire through chain. Connect one end of the Chain to the Fixture loop with one Quick Link. Place the Canopy lock ring, the Round iron plate and the Canopy over the Chain. Connect the other end of the Chain to the Canopy chain loop with the remaining Quick Link.
4. Thread the Ground screw into the hole of the Crossbar. Secure the Crossbar assembly to the outlet box with the Outlet box screws.
5. Make Wire connections with Wire Connector:
 - The Smooth side of Wire from Fixture to Black Wire from power source.
 - The Ribbed side of Wire from Fixture to White Wire from power source.
 - Attach the Ground Wire and house ground wire to the Crossbar with the green Ground screw.
6. Carefully tuck wires back into the Outlet Box.
7. Attach the Canopy and Round iron plate over the Canopy chain loop. Secure with Canopy lock ring.
8. Attach one end of the Tie rod onto the fixture hooks on the side of the Fixture loop. Attach the other end of the Tie rod onto the hooks inside of the Ring.
9. Install the light bulbs (Not Supplied) in accordance with the fixture's specifications. **DO NOT EXCEED THE MAXIMUM WATTAGE RATING!**
10. Align the slots on the Shade to the studs on the cap on the fixture body and twist the Shade until it is secure.

