 




Furniture of America®

FM80001GG-1
FM80001GG-2
FM80001GG-T

FM80001BB-1
FM80001BB-2
FM80001BB-T

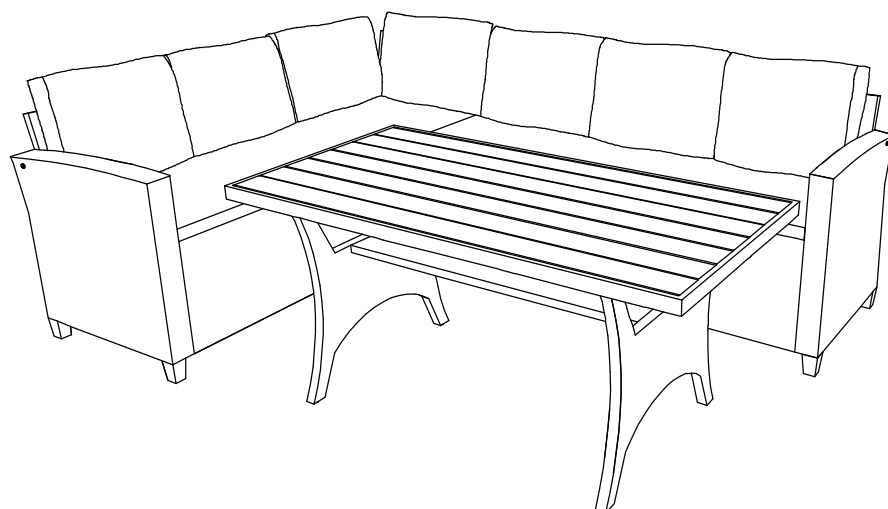


ASSEMBLY INSTRUCTIONS

OUTDOOR DINING TABLE TOP

OUTDOOR DINING SECT SOFA

OUTDOOR DINING 1 ARM SOFA

 
MODEL 1

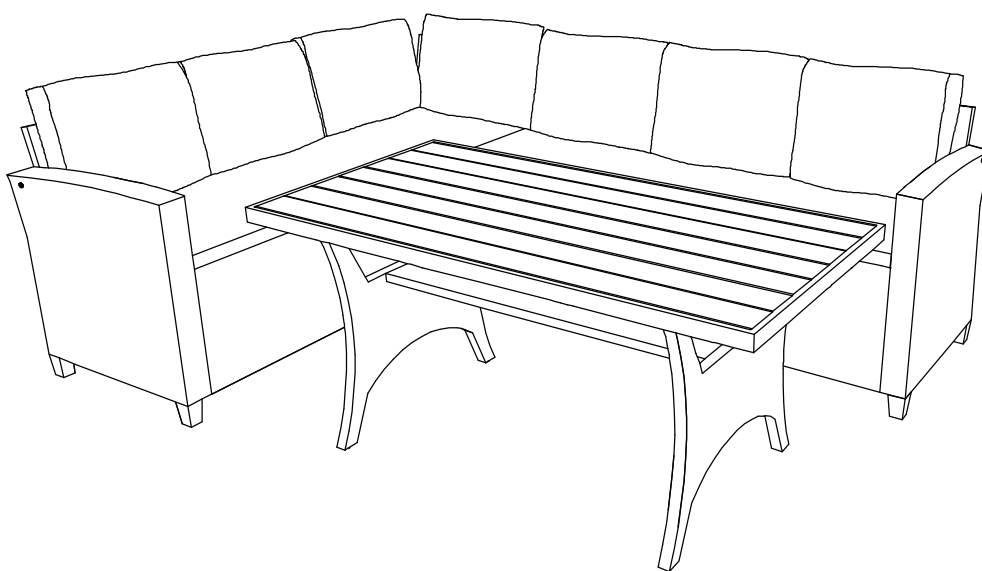

PARTS


Check that you've received
all parts listed below.

 BOX 1/3

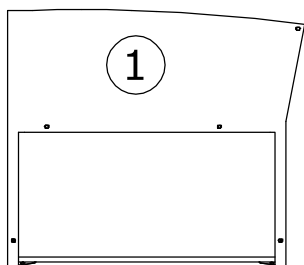


1

 (1 pc)

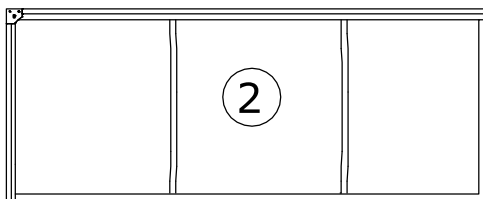


2

 (1 pc)

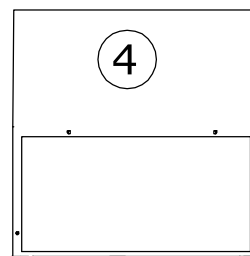


4

 (1 pc)

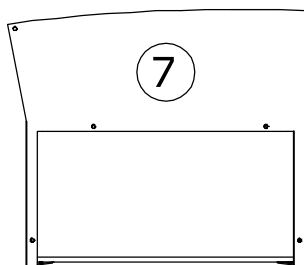


7

 (1 pc)

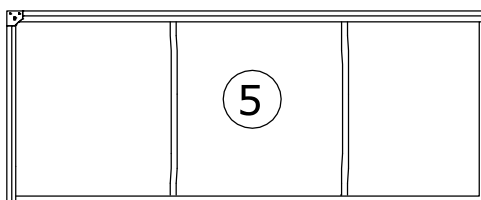


5

 (1 pc)

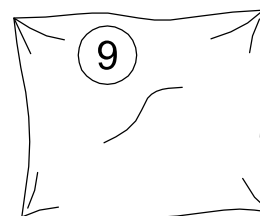


9

 (7 pcs)

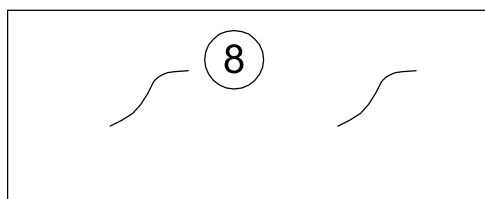

8

 (2 pcs)



12

(1 pc)

 
Hardware




PARTS

Check that you've received
all parts listed below.


BOX 2/3

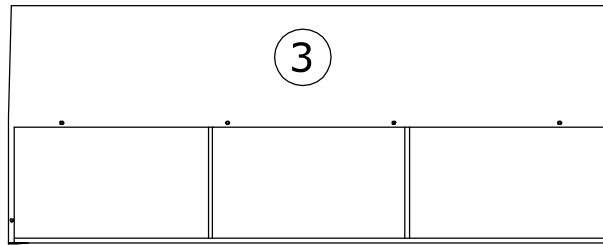

(1 pc)

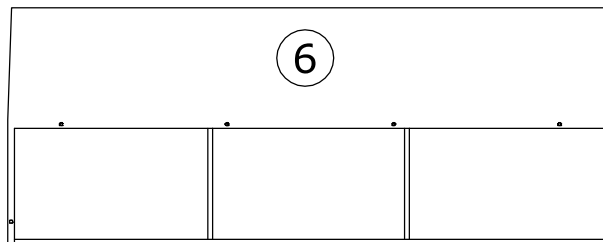 

(1 pc)

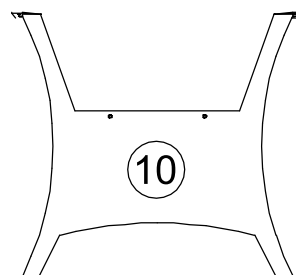 

(2 pcs)

PARTS


Check that you've received
all parts listed below.

BOX 3/3

11

(1 pc)

 MODEL 1

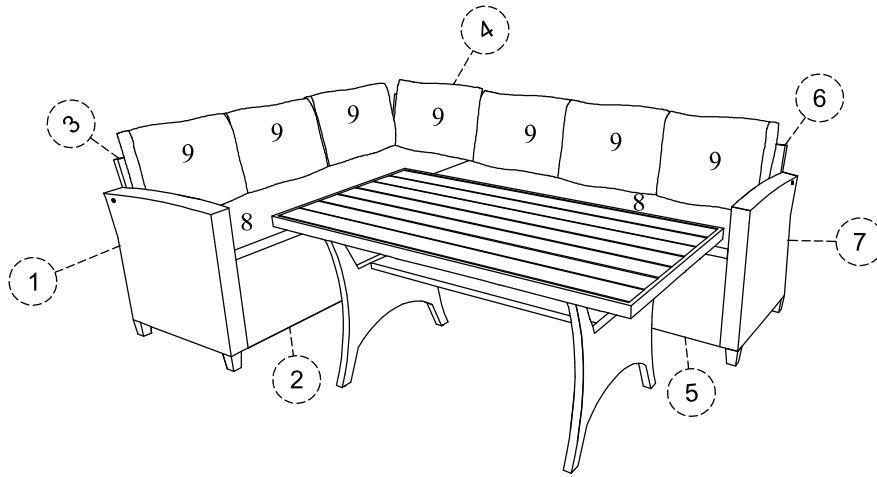

1	2	3	4	5	6
1 pc	1 pc	1 pc	1 pc	1 pc	1 pc

7	8	9	10	11	12
1 pc	2 pcs	7 pcs	2 pcs	1 pc	1 pc

HARDWARE

 
Check that you've received
all hardware listed below.

Ⓐ




M6x40 mm
25 pcs

Ⓑ

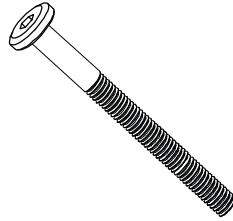


M6x110 mm
2 pcs

 Ⓒ

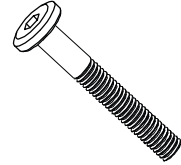


M6x55 mm
8 pcs

 Ⓓ




Ø16X1 mm
36 pcs

 Ⓔ

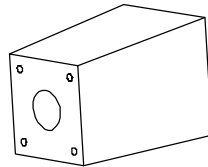

8 pcs

 Ⓕ

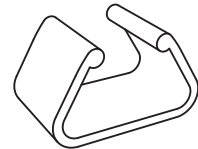


2 pcs

Ⓖ




3 pcs

 Ⓗ

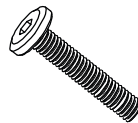

M6x30 mm
1 pc

 Ⓘ

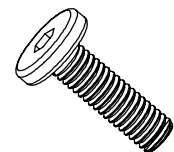

M6x15 mm
8 pcs





PARTS



Check that you've received
all parts listed below.

ASSEMBLY INSTRUCTIONS

FM80001GG-1 - OUTDOOR DINING SECT SOFA

FM80001BB-1 - OUTDOOR DINING SECT SOFA

1	2	3	4
			
1 pc	1 pc	1 pc	1 pc

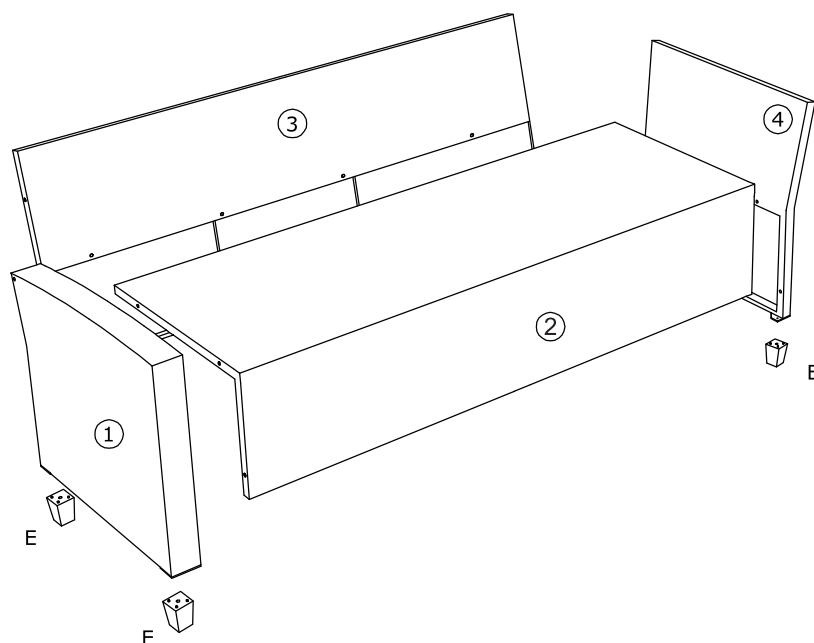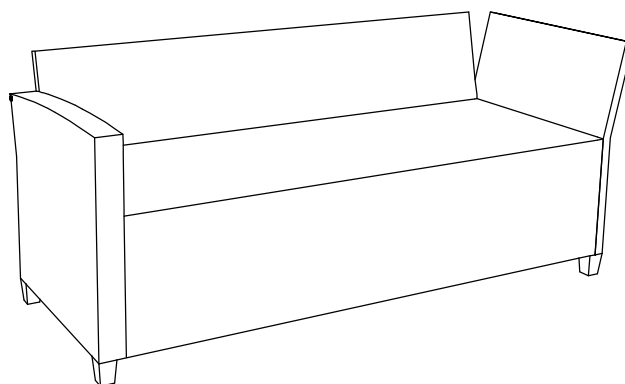  


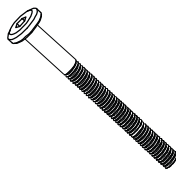 


HARDWARE

 


Check that you've received
all hardware listed below.

ASSEMBLY INSTRUCTIONS




FM80001GG-1 - OUTDOOR DINING SECT SOFA

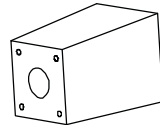
FM80001BB-1 - OUTDOOR DINING SECT SOFA

A	B	C	D
			
M6x40 mm	M6x110 mm	M6x55 mm	Ø16X1 mm
12 pcs	1 pc	4 pcs	14 pcs




E	G	H
		
		M6x30 mm
4 pcs	1 pc	1 pc

 
STEP 1

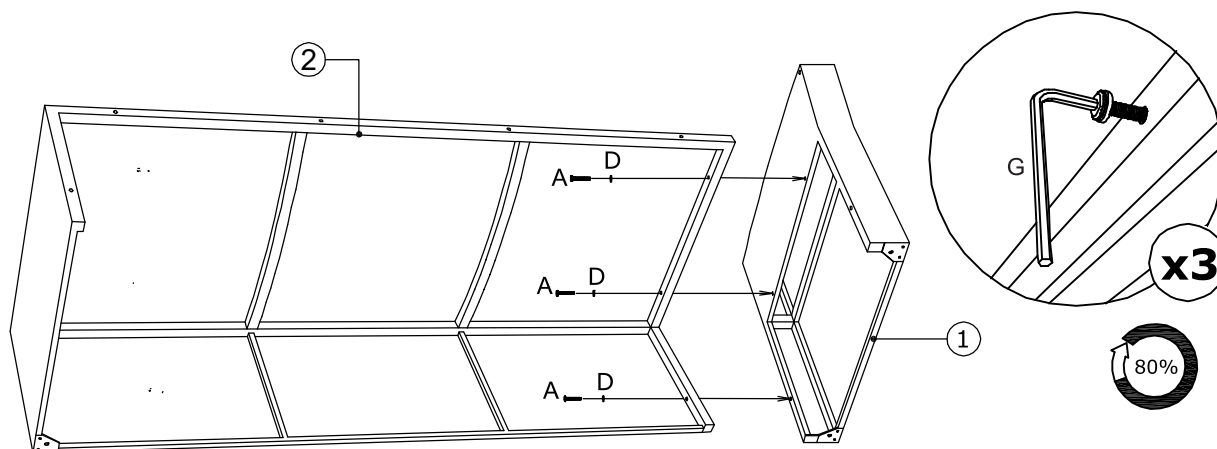A x 3  M6x40 mm	D x 3  Ø16X1 mm	G x 1  4 mm	
--	--	--	--





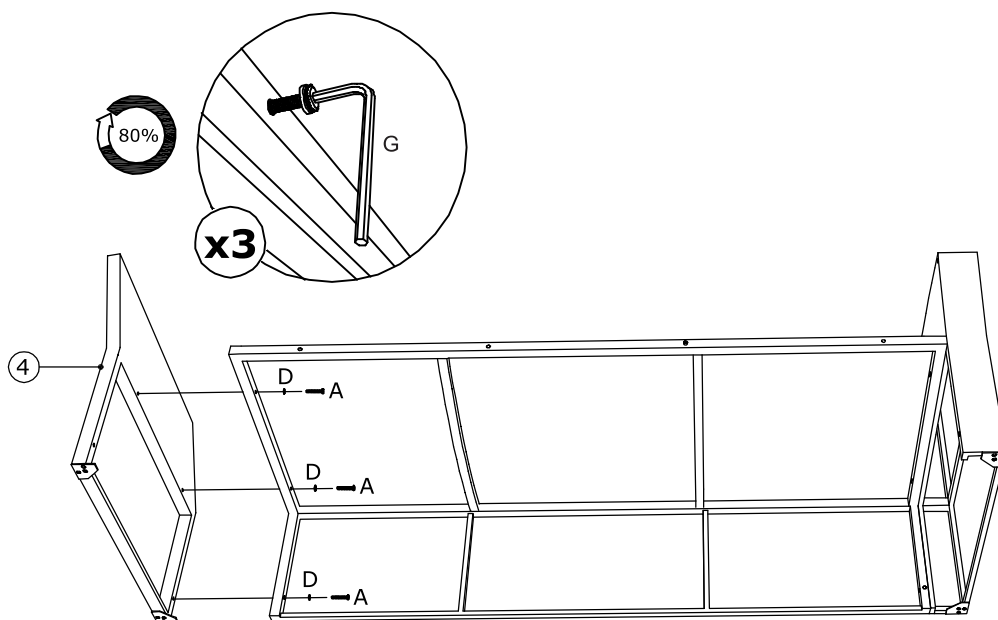 


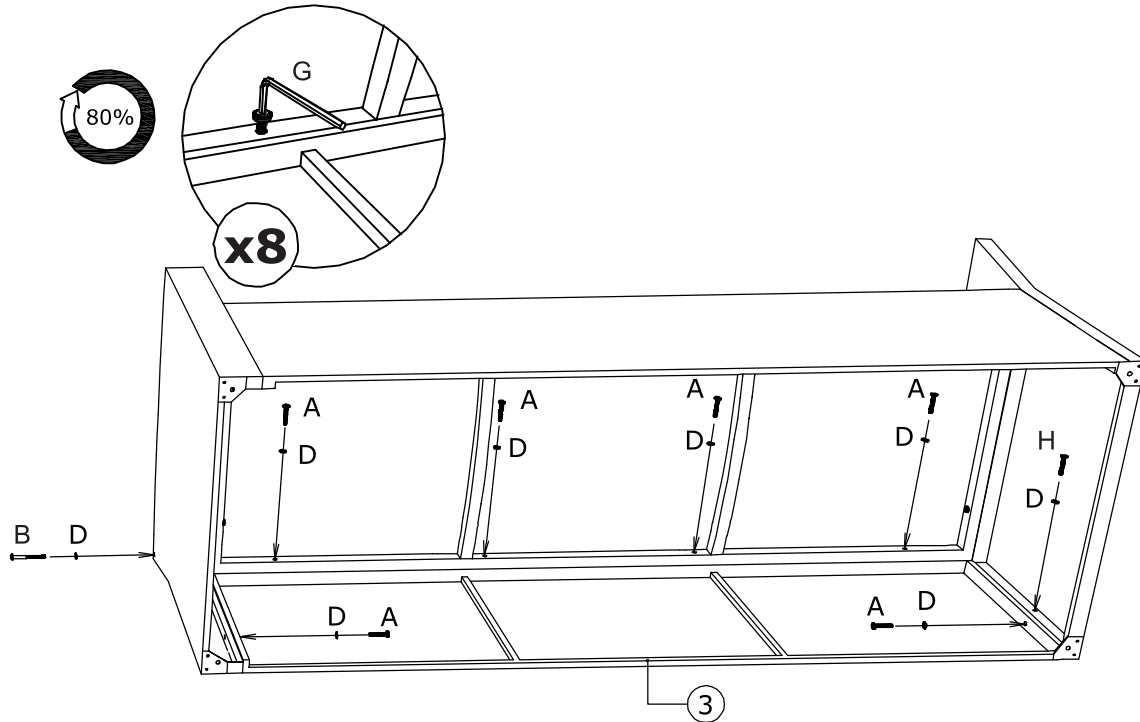 
STEP 2

A x 3  M6x40 mm	D x 3  Ø16X1 mm	G x 1  4 mm	
--	--	--	--






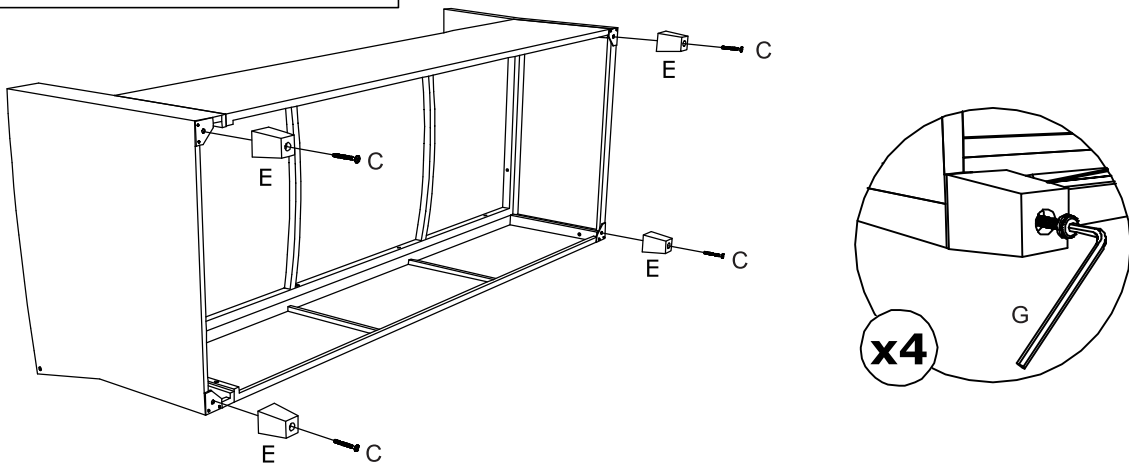 
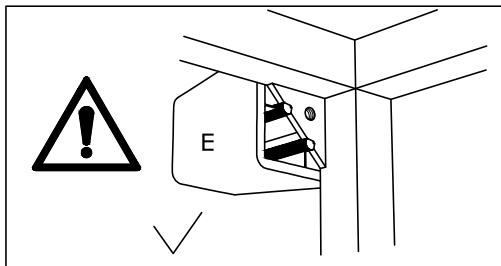 
STEP 3

A x 6  M6x40 mm	H x 1  M6 x 30 mm	B x 1  M6x110 mm	D x 8  Ø16X1 mm	G x 1  4 mm
--	--	---	--	--






STEP 4


C x 4  M6x55 mm	E x 4  45x45x65 mm	G x 1  4 mm	
--	---	--	--



   STEP 5

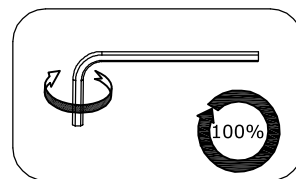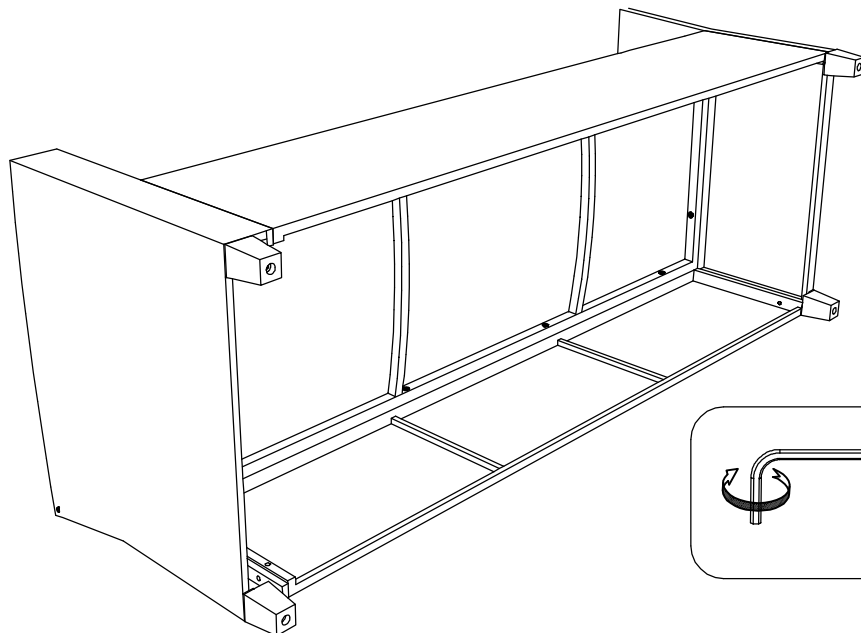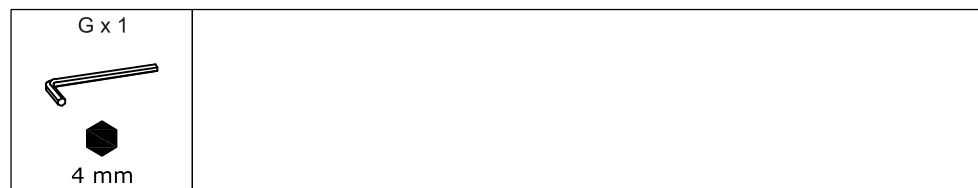

 STEP 6

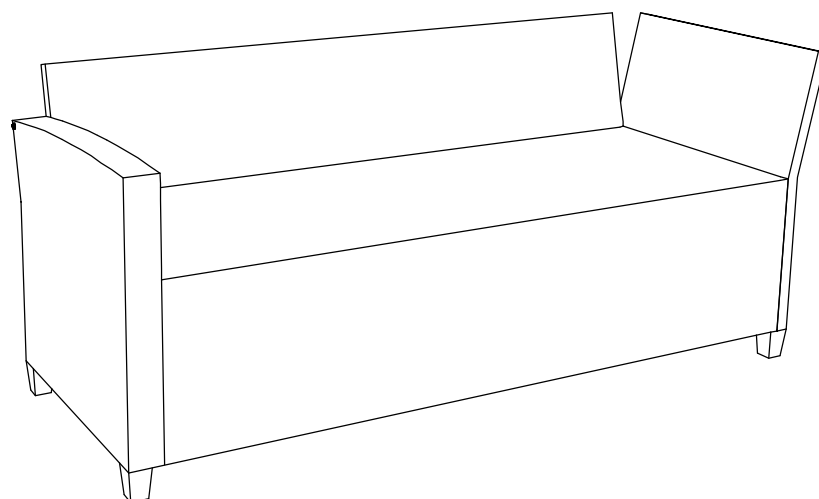




PARTS



Check that you've received
all parts listed below.

ASSEMBLY INSTRUCTIONS

FM80001GG-2 - OUTDOOR DINING 1 ARM SOFA

FM80001BB-2 - OUTDOOR DINING 1 ARM SOFA

5	6	7
		
1 pc	1 pc	1 pc

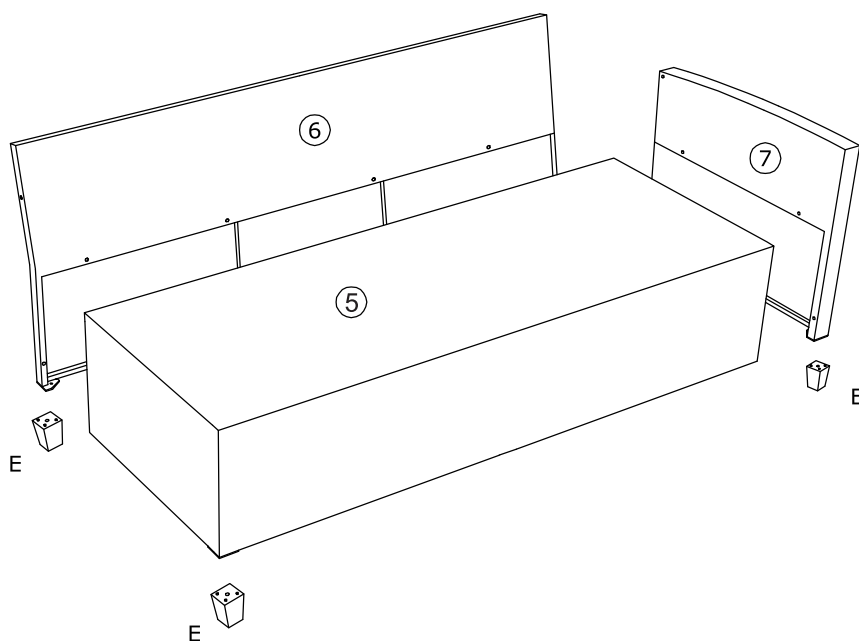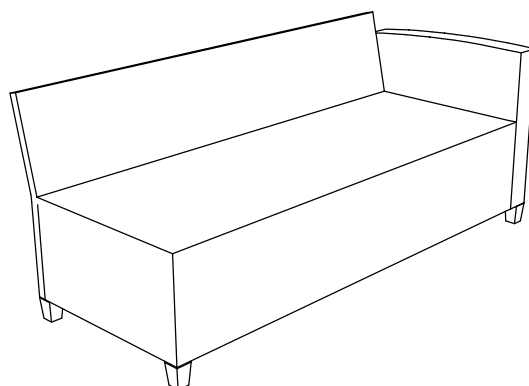  




 
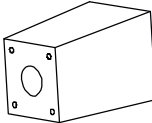 

HARDWARE

Check that you've received
all hardware listed below.




ASSEMBLY INSTRUCTIONS


FM80001GG-2 - OUTDOOR DINING SECT SOFA

FM80001BB-2 - OUTDOOR DINING SECT SOFA





A	B	C	D	E	G
					
M6x40 mm	M6x110 mm	M6x55 mm	Ø16X1 mm		
9 pcs	1 pc	4 pcs	10 pcs	4 pcs	1 pc

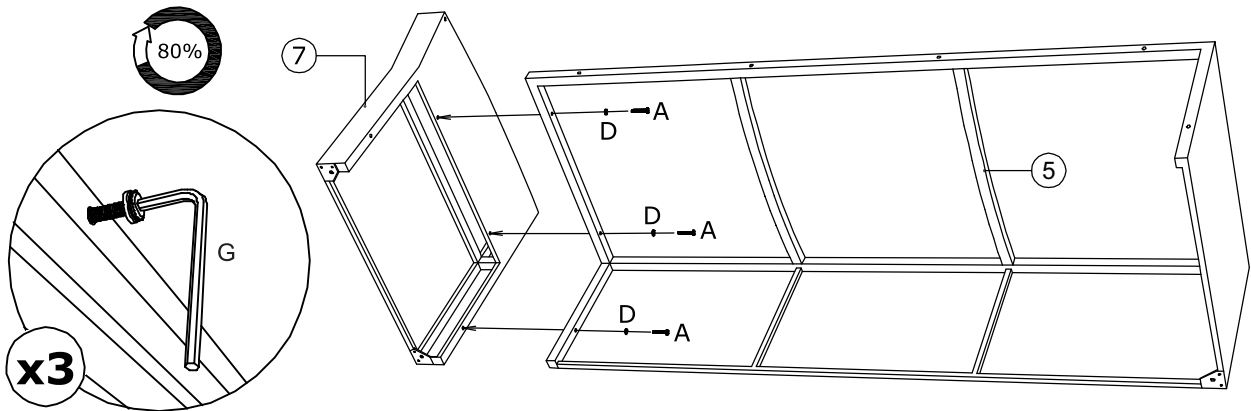 
STEP 7

A x 3  M6x40 mm	D x 3  Ø16x1 mm	G x 1  4 mm	
--	--	--	--

 
 



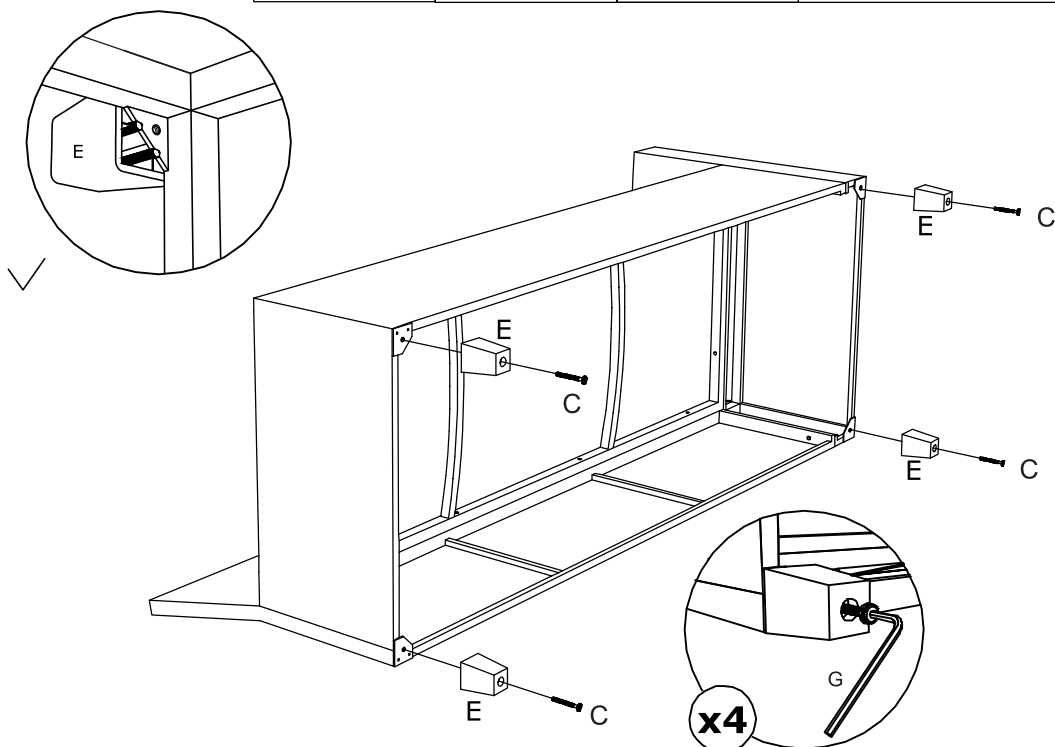 
STEP 8

A x 6  M6x40 mm	B x 1  M6x110 mm	D x 7  Ø16x1 mm	G x 1  4 mm	
--	---	--	--	--

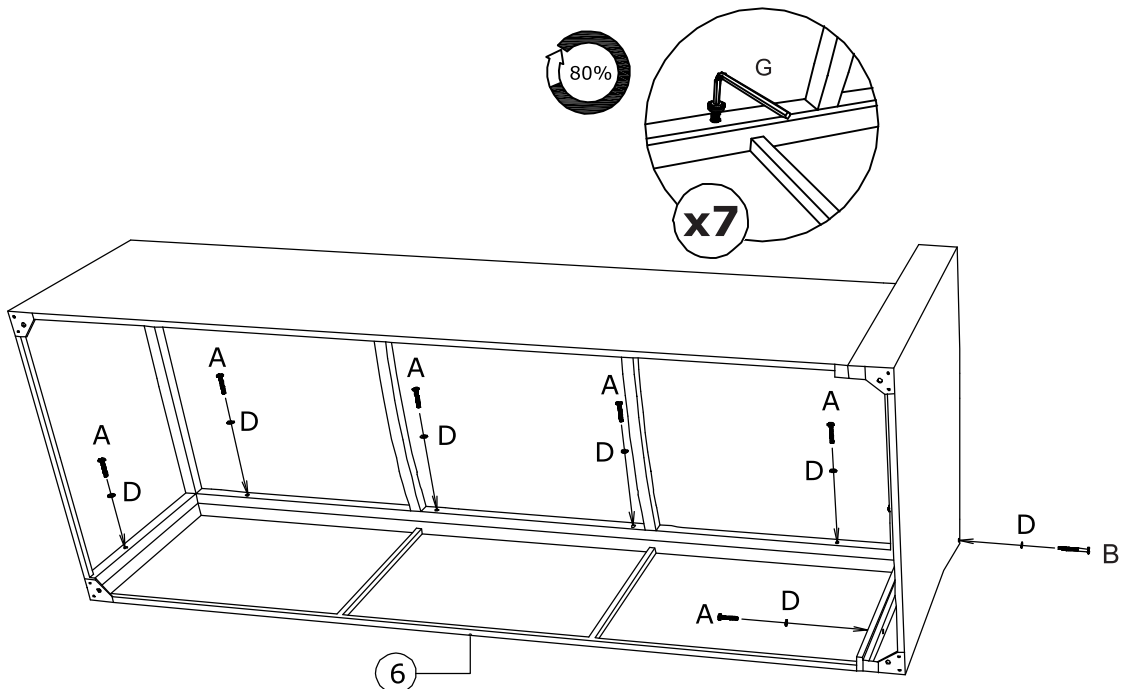



STEP 9

C x 4  M6x55 mm	E x 4 	G x 1  4 mm	
--	--	---	--





STEP 10



G x 1  4 mm	
--	--

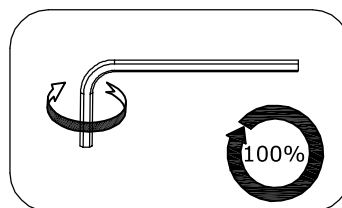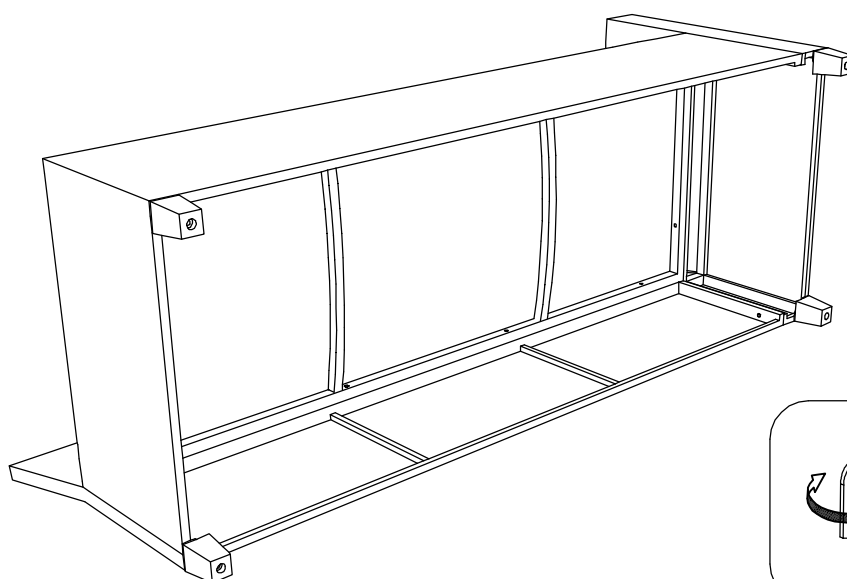  

    STEP 11

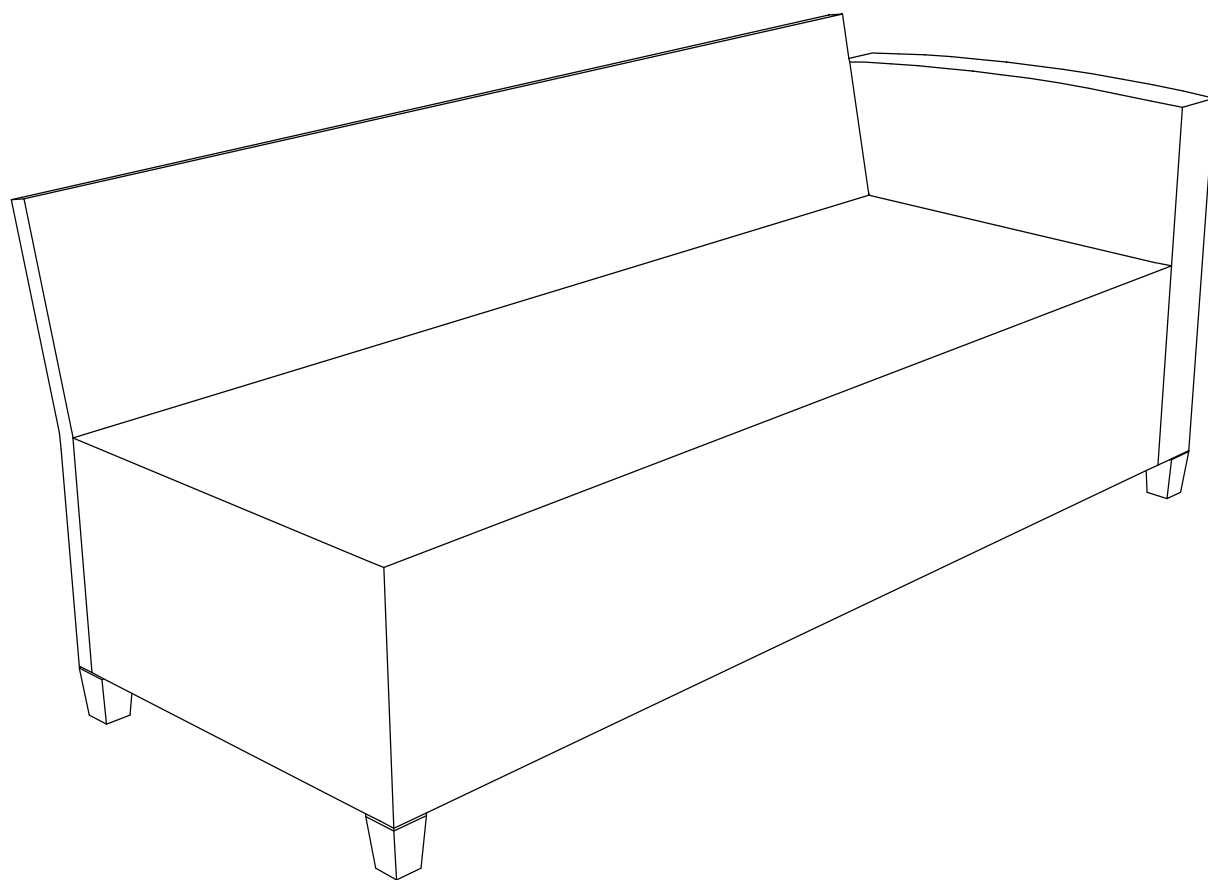 


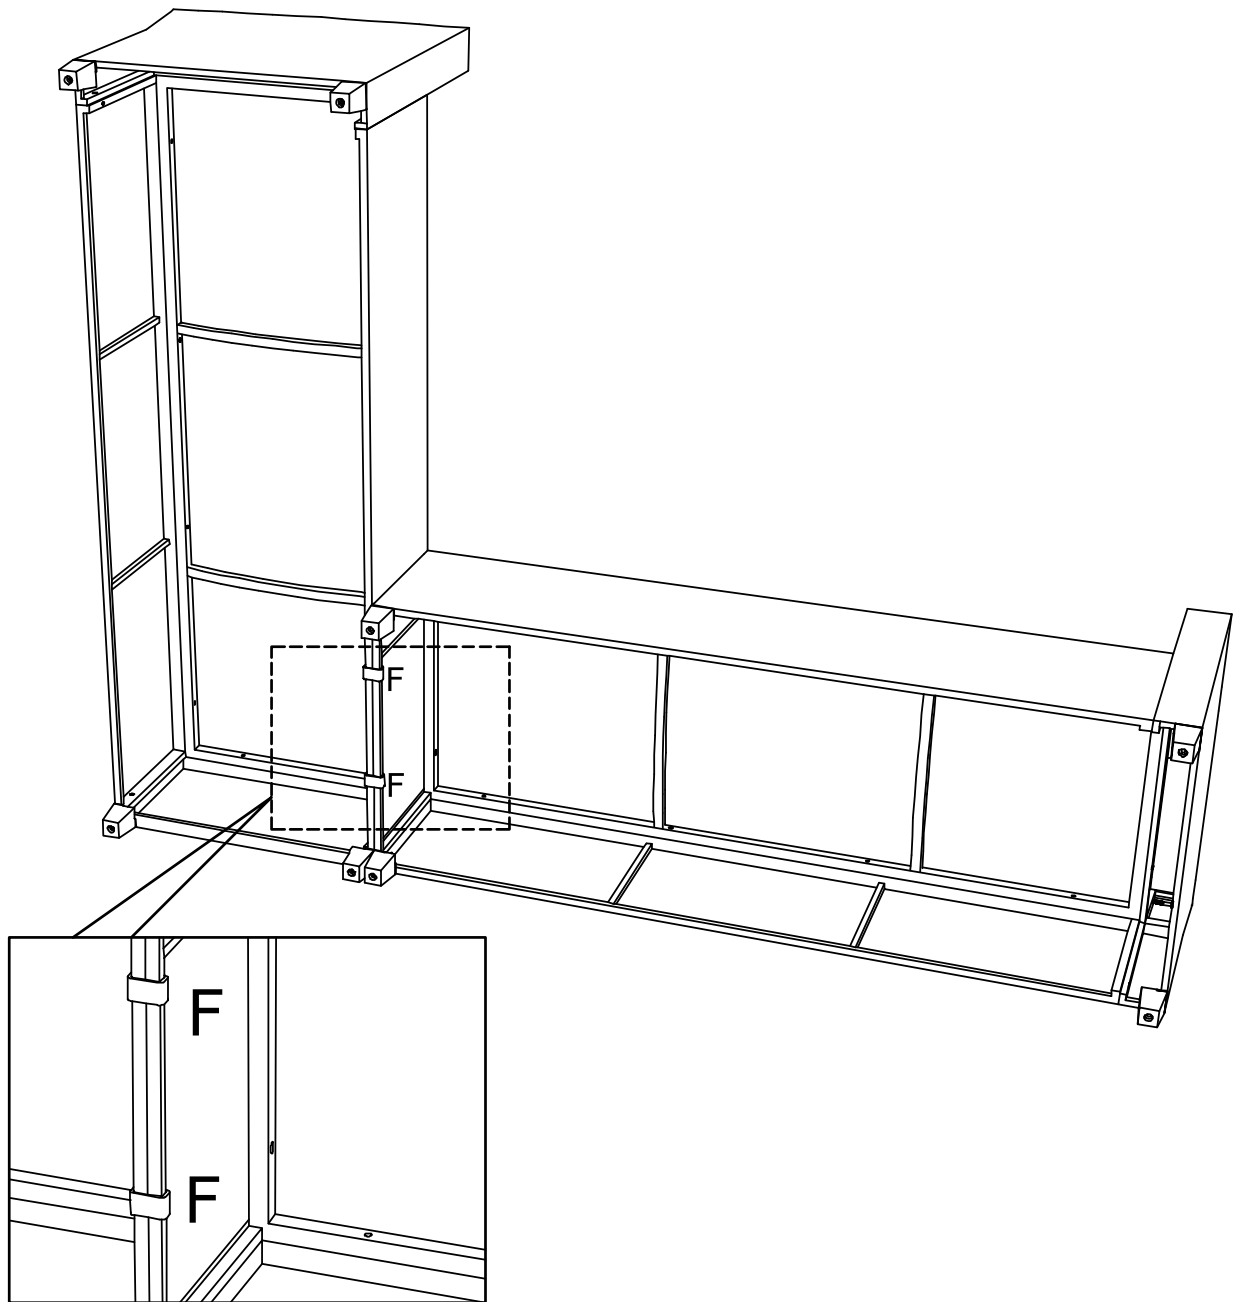

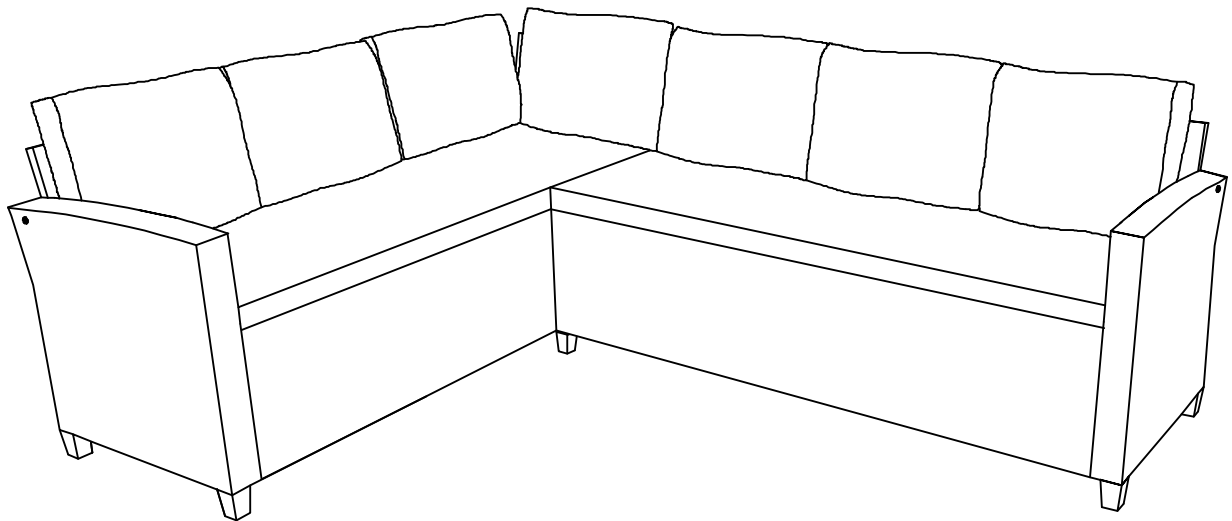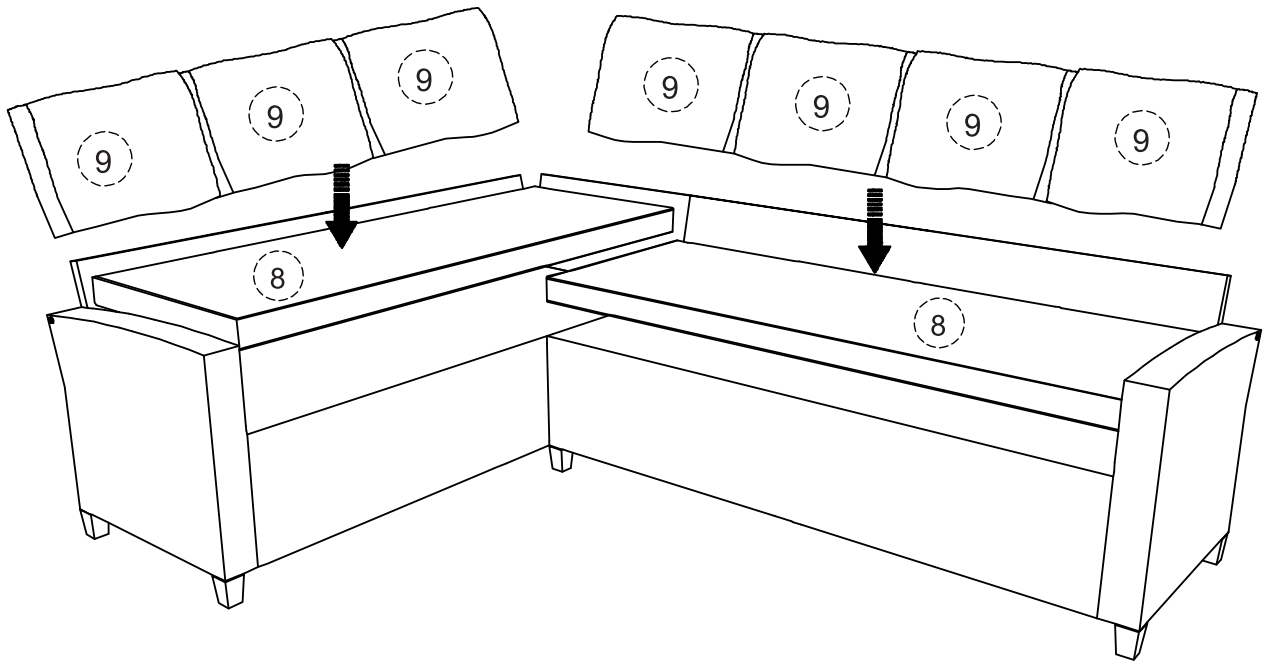 



 




Finish

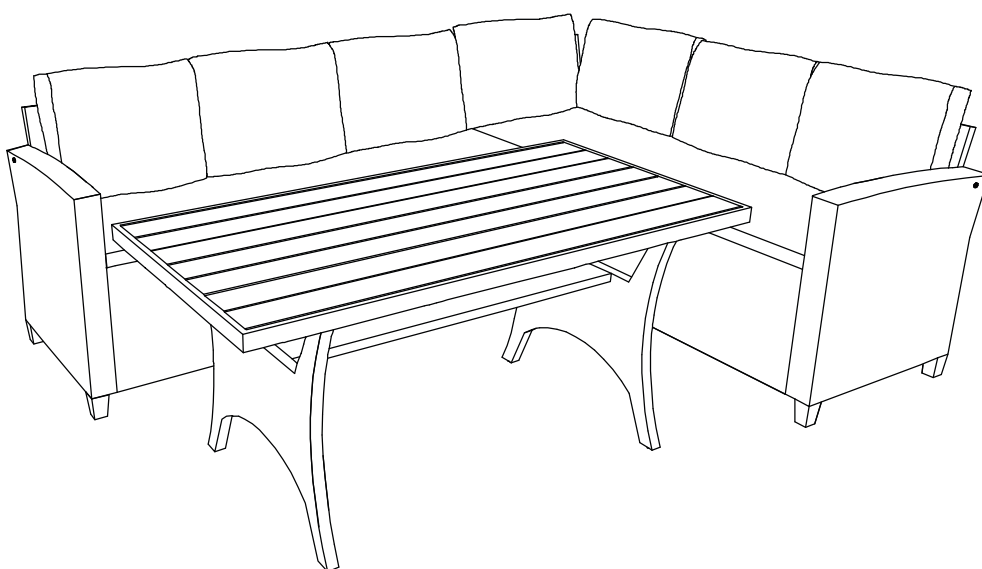

 
 
 

MODEL 2

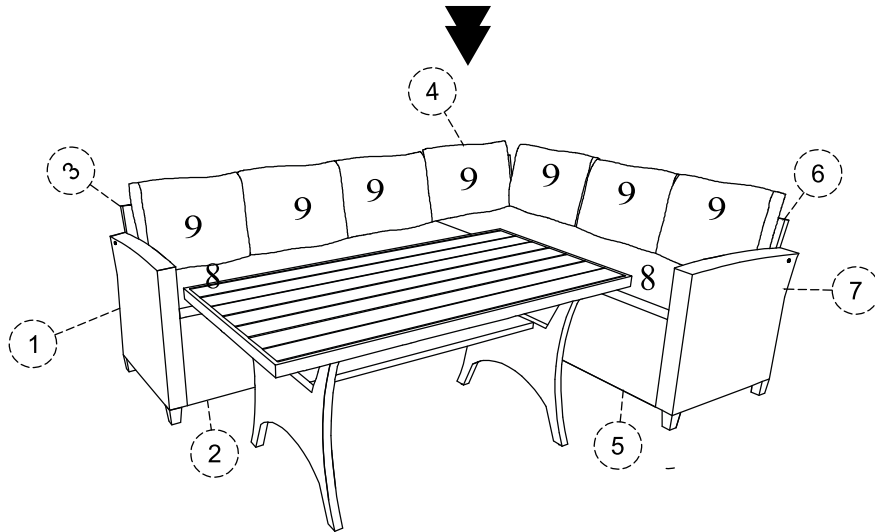

MODEL 2




1	2	3	4	5	6
					
1 pc	1 pc	1 pc	1 pc	1 pc	1 pc

7	8	9	10	11	12
					
1 pc	2 pcs	7 pcs	2 pcs	1 pc	1 pc

HARDWARE


Check that you've received
all hardware listed below.

 Ⓐ

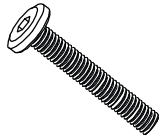

M6x40 mm
25 pcs

 Ⓑ

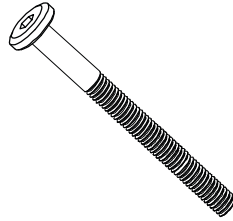


M6x110 mm
2 pcs

Ⓒ




M6x55 mm
8 pcs

 Ⓓ




Ø16X1 mm
36 pcs

 Ⓔ

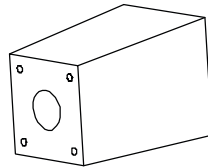

8 pcs

 Ⓕ

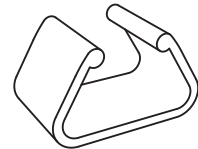

2 pcs

Ⓖ



 
3 pcs

Ⓗ



M6x30 mm
1 pc

Ⓘ

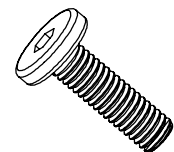

M6x15 mm
8 pcs





PARTS



Check that you've received
all parts listed below.

ASSEMBLY INSTRUCTIONS

FM80001GG-1 - OUTDOOR DINING SECT SOFA

FM80001BB-1 - OUTDOOR DINING SECT SOFA

4	5	6	7
			
1 pc	1 pc	1 pc	1 pc

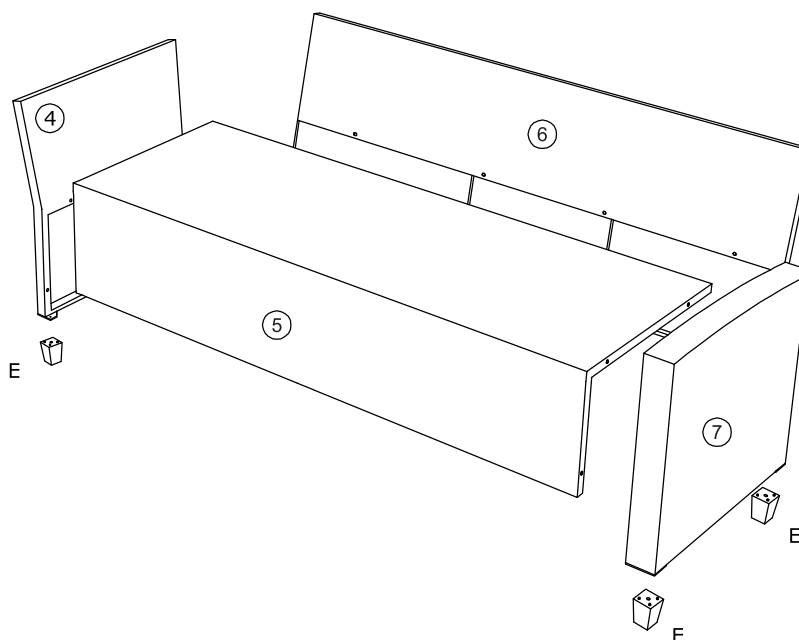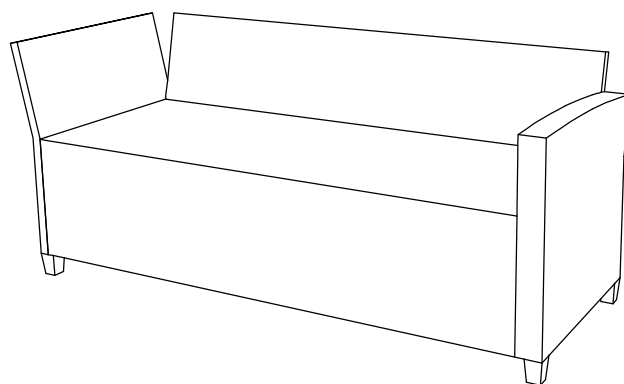  


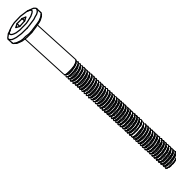 


HARDWARE

 


Check that you've received
all hardware listed below.

ASSEMBLY INSTRUCTIONS




FM80001GG-1 - OUTDOOR DINING SECT SOFA

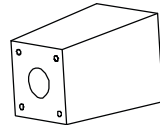
FM80001BB-1 - OUTDOOR DINING SECT SOFA

A	B	C	D
			
M6x40 mm	M6x110 mm	M6x55 mm	Ø16X1 mm
12 pcs	1 pc	4 pcs	14 pcs




E	G	H
		
		M6x30 mm
4 pcs	1 pc	1 pc

 
STEP 1

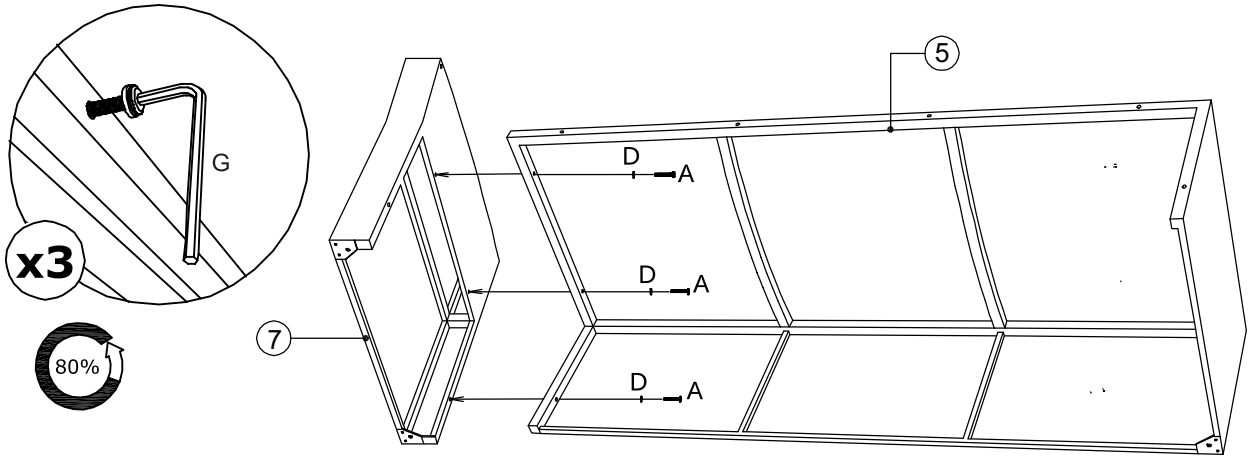A x 3  M6x40 mm	D x 3  Ø16X1 mm	G x 1  4 mm	
--	--	--	--





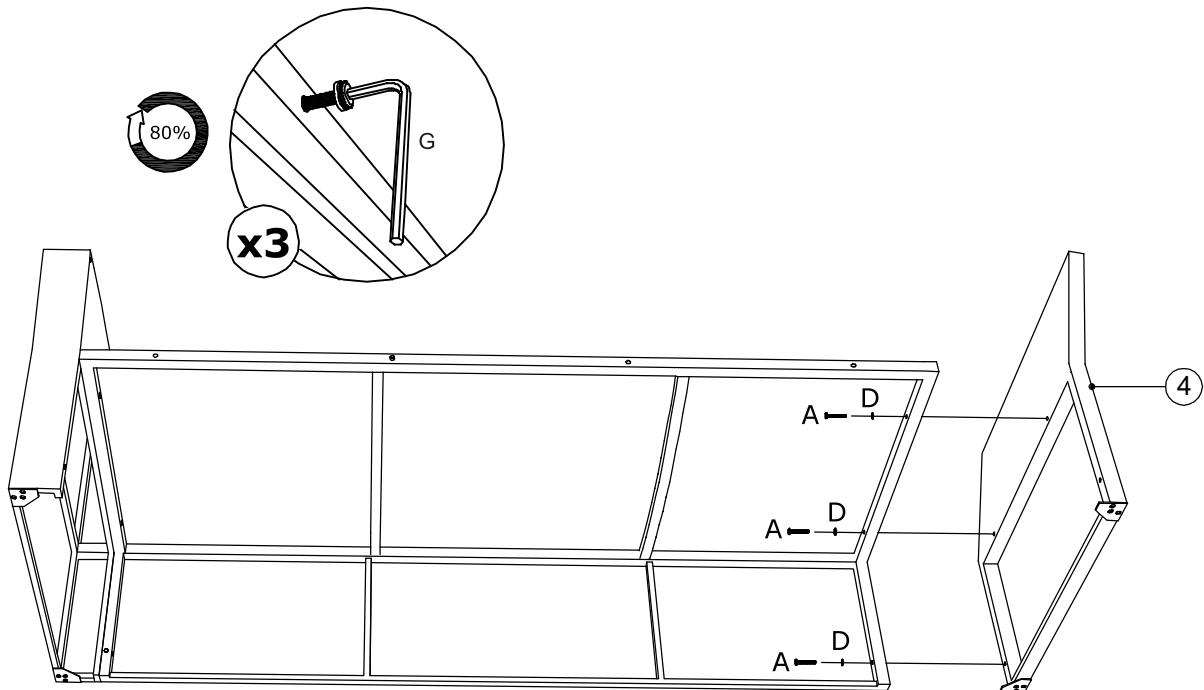 


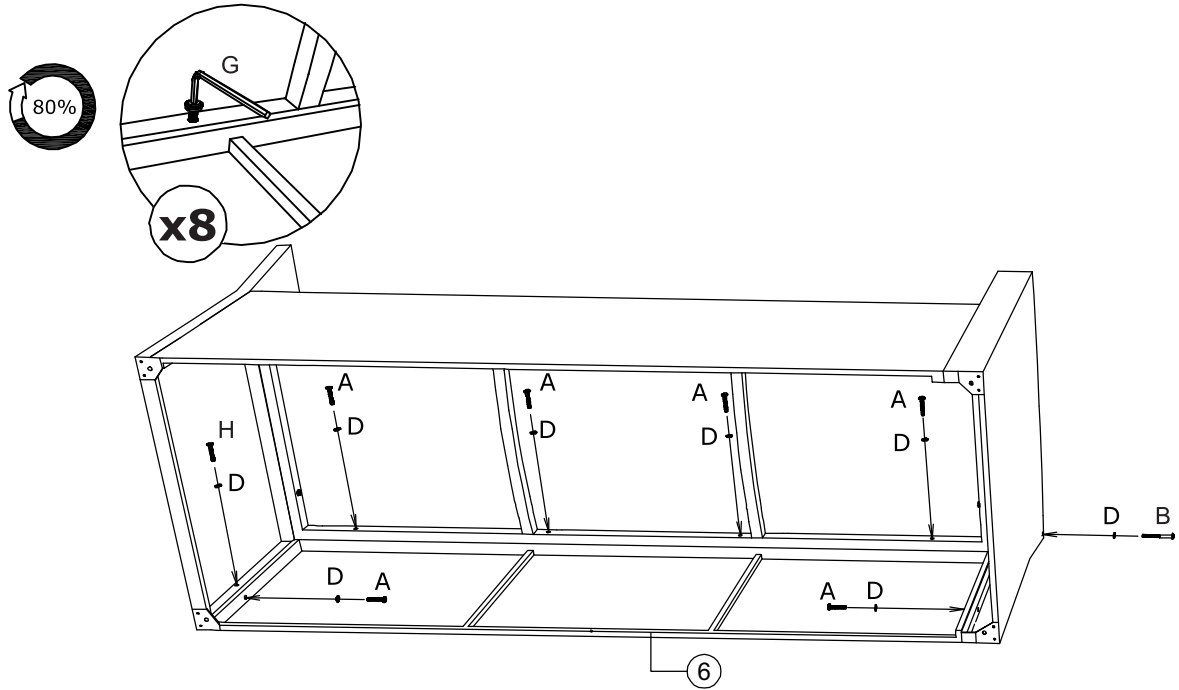 
STEP 2

A x 3  M6x40 mm	D x 3  Ø16X1 mm	G x 1  4 mm	
--	--	--	--


 



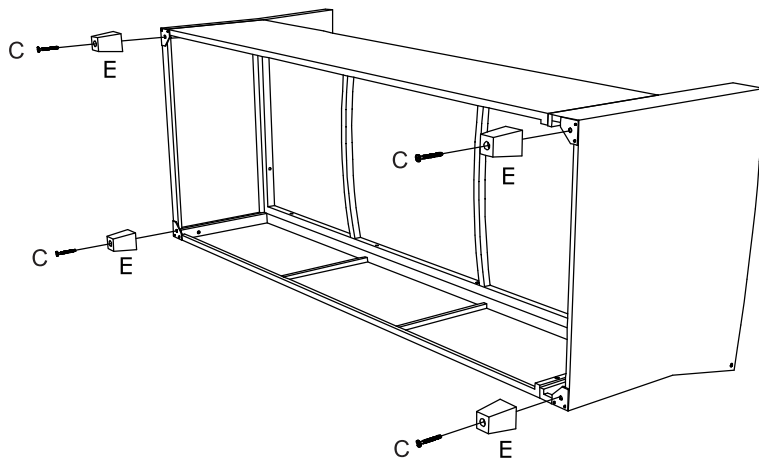 
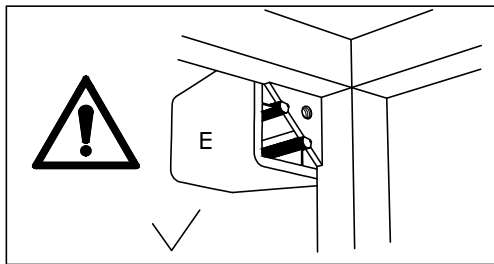 
STEP 3

A x 6  M6x40 mm	H x 1  M6 x 30 mm	B x 1  M6x110 mm	D x 8  Ø16X1 mm	G x 1  4 mm
--	--	---	--	--





STEP 4


C x 4  M6x55 mm	E x 4  45x45x65 mm	G x 1  4 mm	
--	---	--	--



  STEP 5

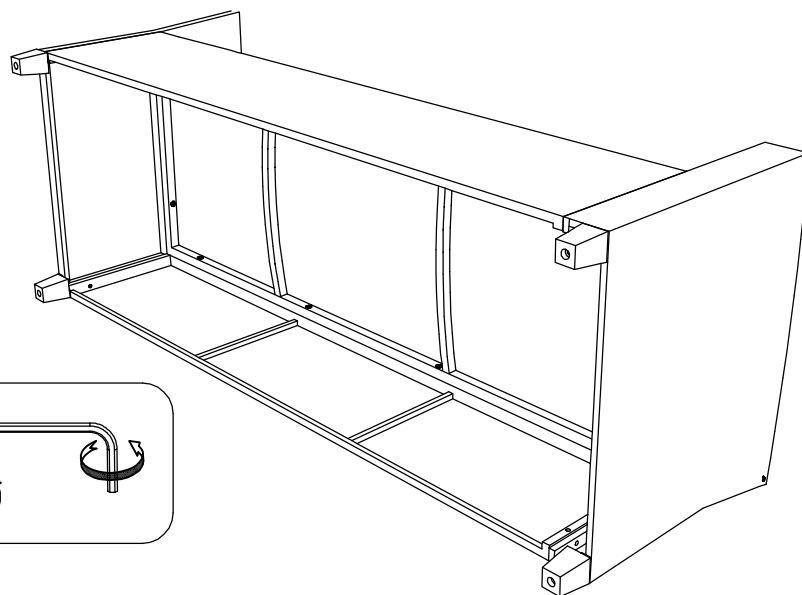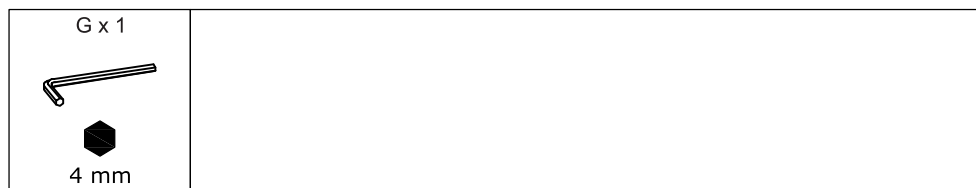

 STEP 6

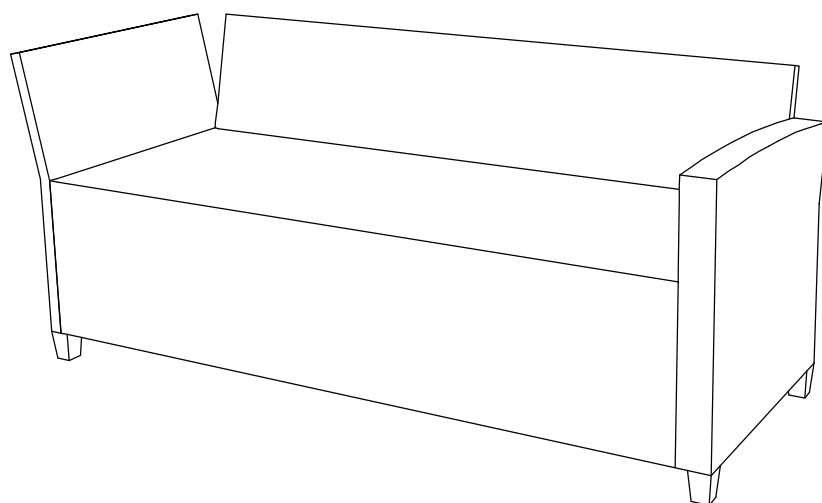




PARTS



Check that you've received
all parts listed below.

ASSEMBLY INSTRUCTIONS

FM80001GG-2 - OUTDOOR DINING 1 ARM SOFA

FM80001BB-2 - OUTDOOR DINING 1 ARM SOFA

1	2	3
		
1 pc	1 pc	1 pc

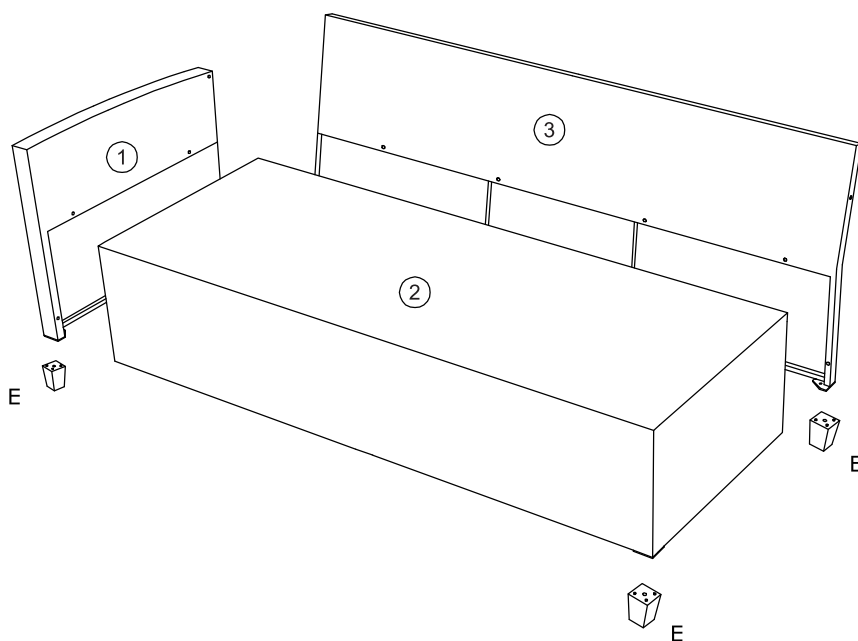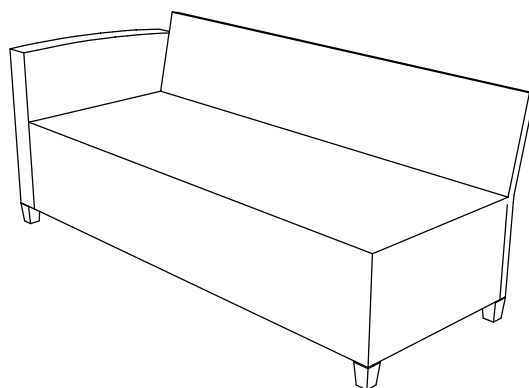  




 
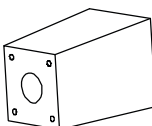 

HARDWARE

Check that you've received
all hardware listed below.




ASSEMBLY INSTRUCTIONS


FM80001GG-2 - OUTDOOR DINING SECT SOFA

FM80001BB-2 - OUTDOOR DINING SECT SOFA





A	B	C	D	E	G
					
M6x40 mm	M6x110 mm	M6x55 mm	Ø16X1 mm		
9 pcs	1 pc	4 pcs	10 pcs	4 pcs	1 pc


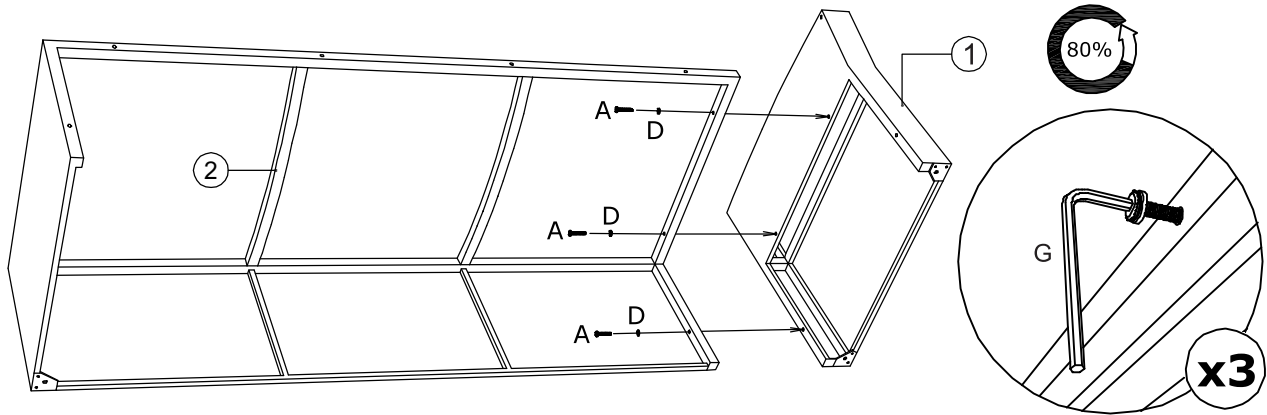 
STEP 7

A x 3  M6x40 mm	D x 3  Ø16x1 mm	G x 1  4 mm	
--	--	--	--

  
 



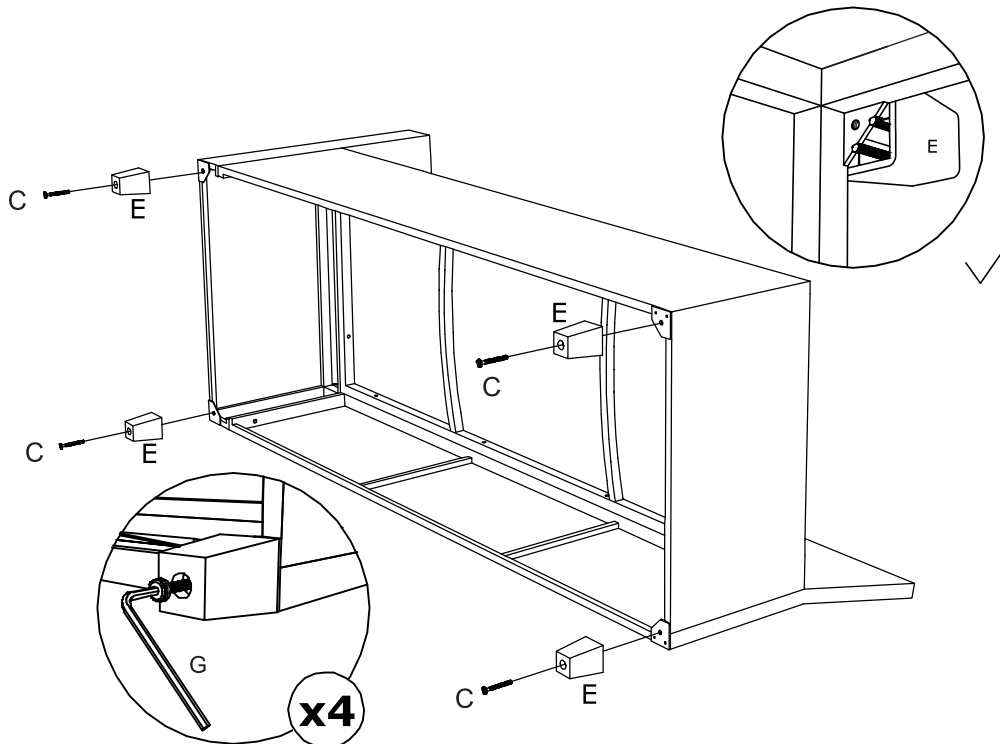 
STEP 8

A x 6  M6x40 mm	B x 1  M6x110 mm	D x 7  Ø16x1 mm	G x 1  4 mm	
--	---	--	--	--

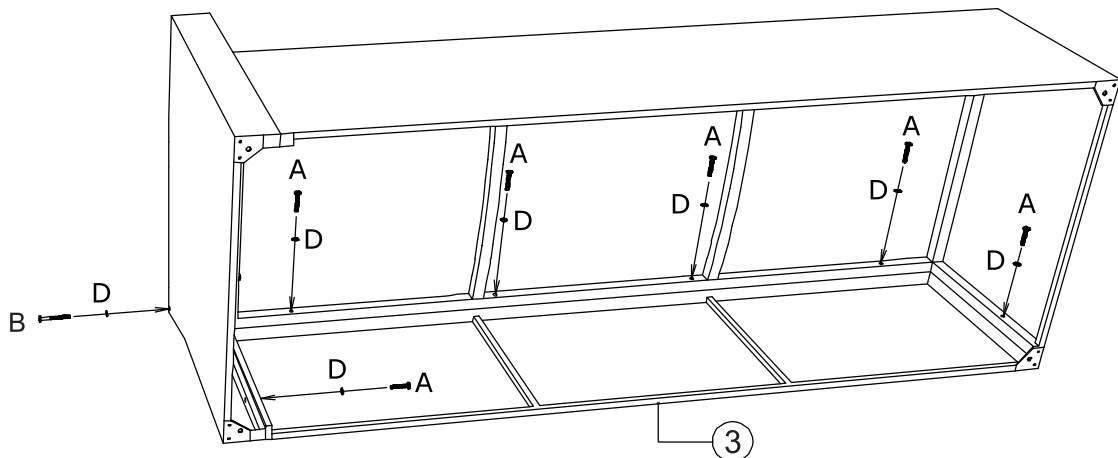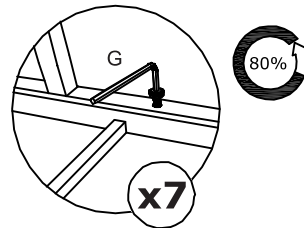


STEP 9

C x 4  M6x55 mm	E x 4 	G x 1  4 mm	
--	--	---	--






STEP 10



G x 1  4 mm	
--	--

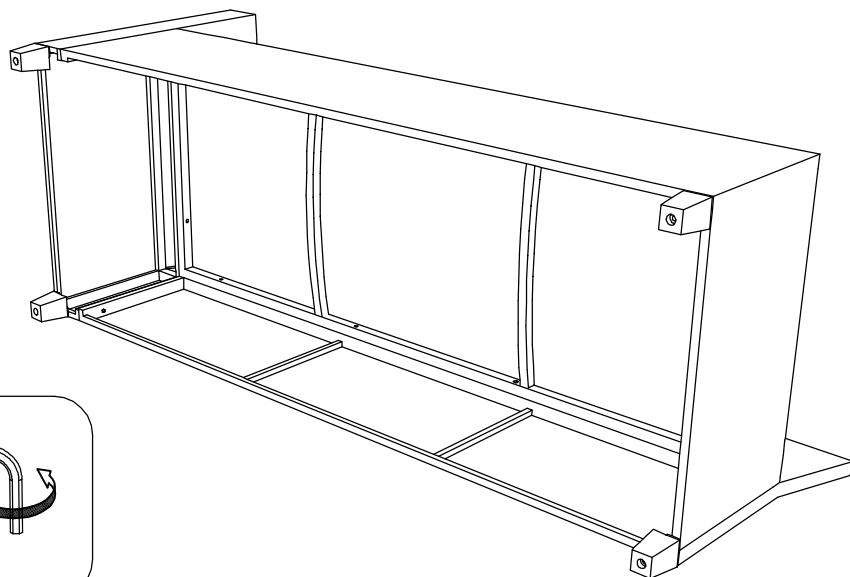 

     STEP 11

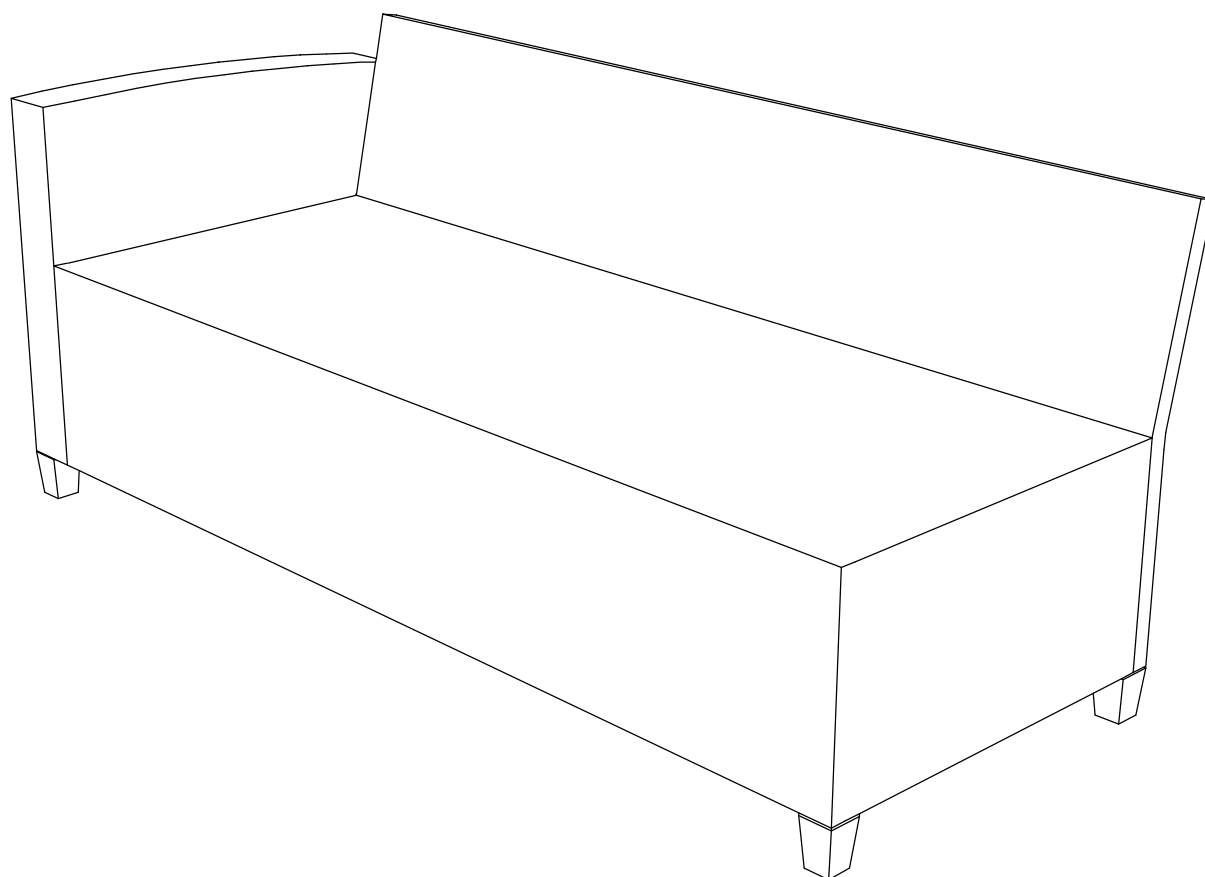

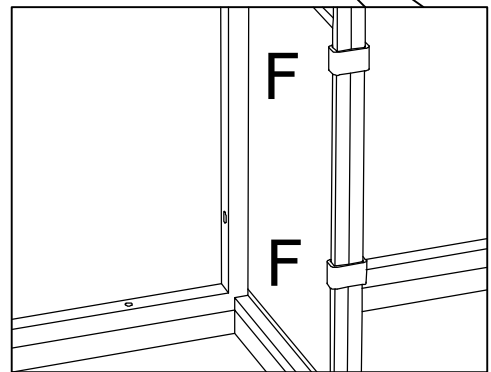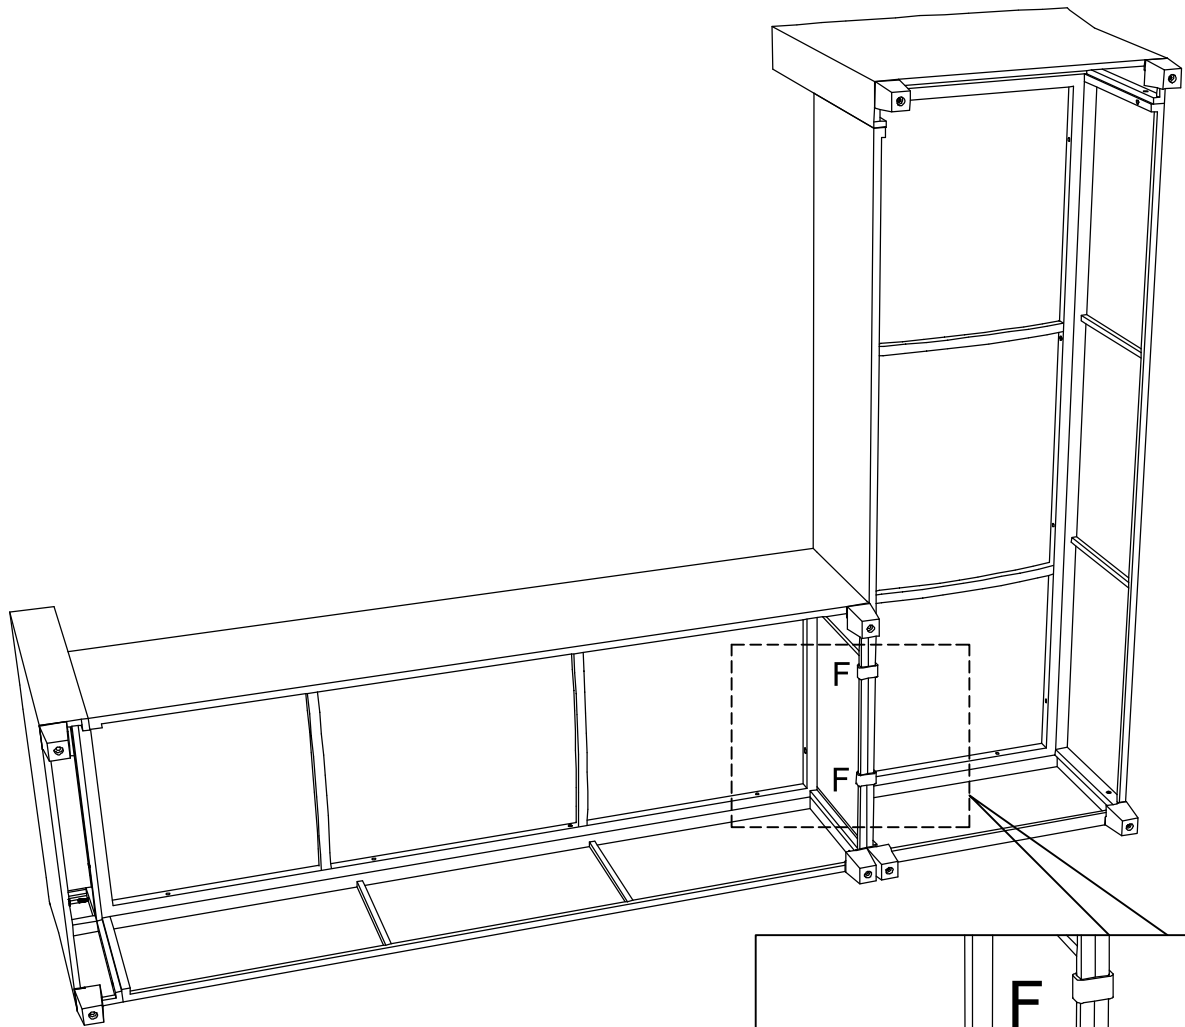

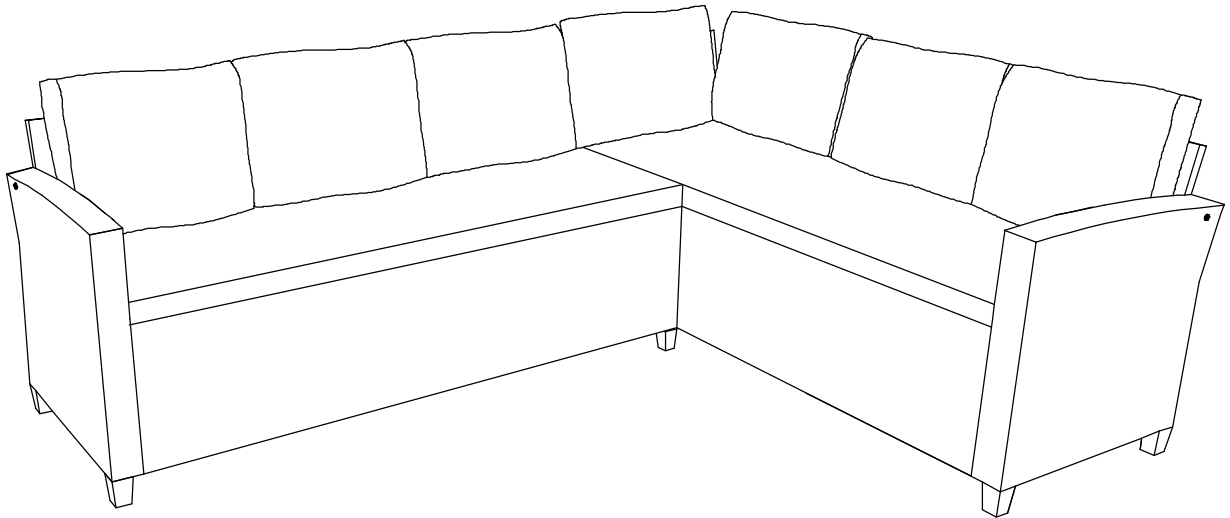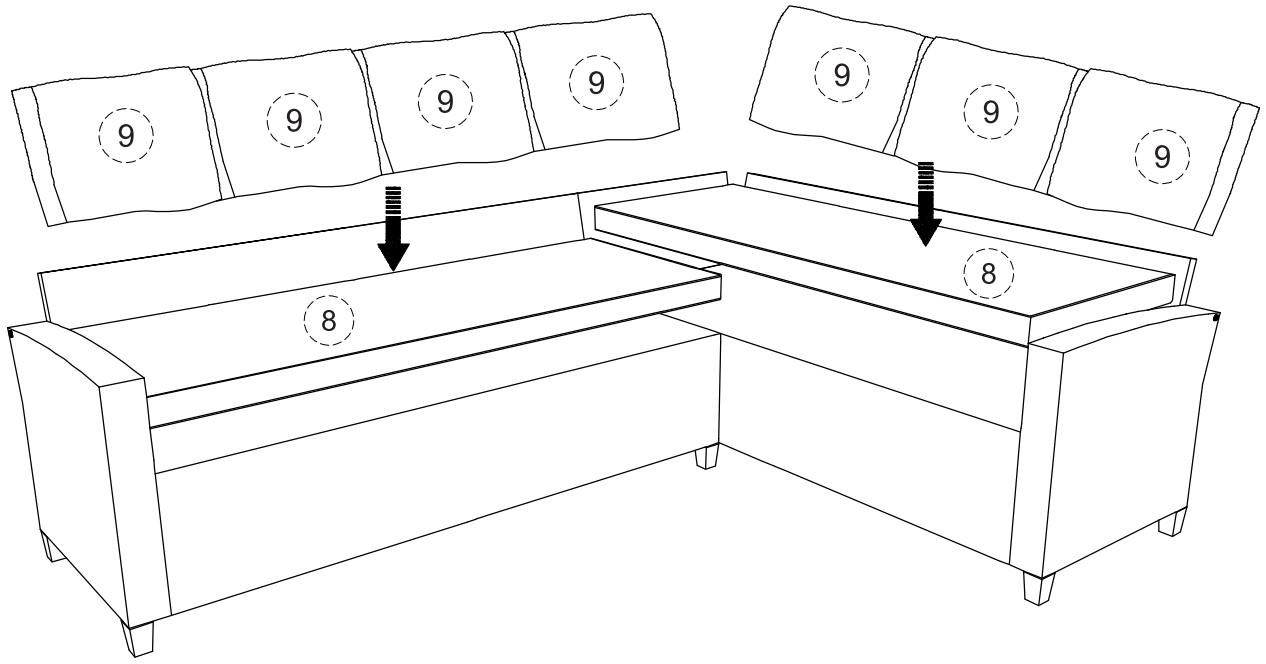

Finish




PARTS


Check that you've received
all parts listed below.

ASSEMBLY INSTRUCTIONS

FM80001GG-T - OUTDOOR DINING TABLE TOP

FM80001BB-T - OUTDOOR DINING TABLE TOP

10	11	12
		
2 pcs	1 pc	1 pc

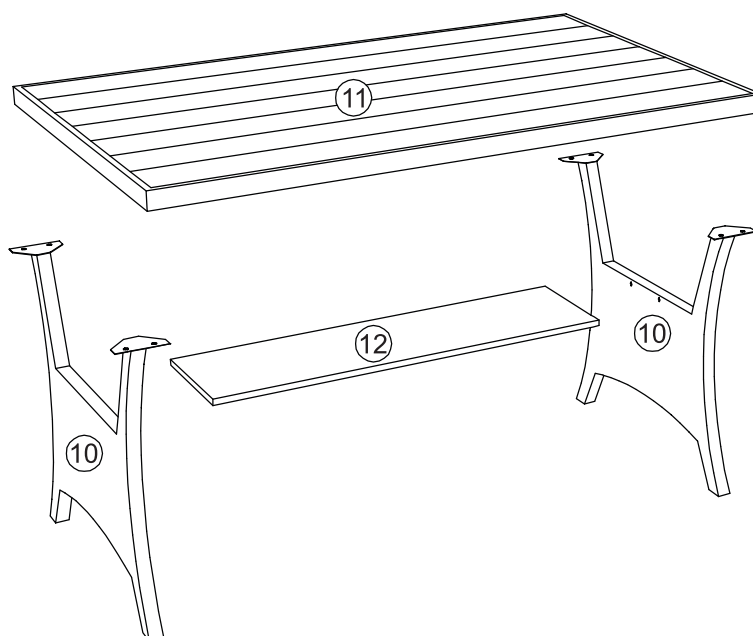 





HARDWARE

Check that you've received
all hardware listed below.




ASSEMBLY INSTRUCTIONS


FM80001GG-T - OUTDOOR DINING TABLE TOP

FM80001BB-T - OUTDOOR DINING TABLE TOP




A	D	G	I
			
M6x40 mm	Ø16x1 mm		M6x15 mm
4 pcs	12 pcs	1 pc	8 pcs

 
STEP 12

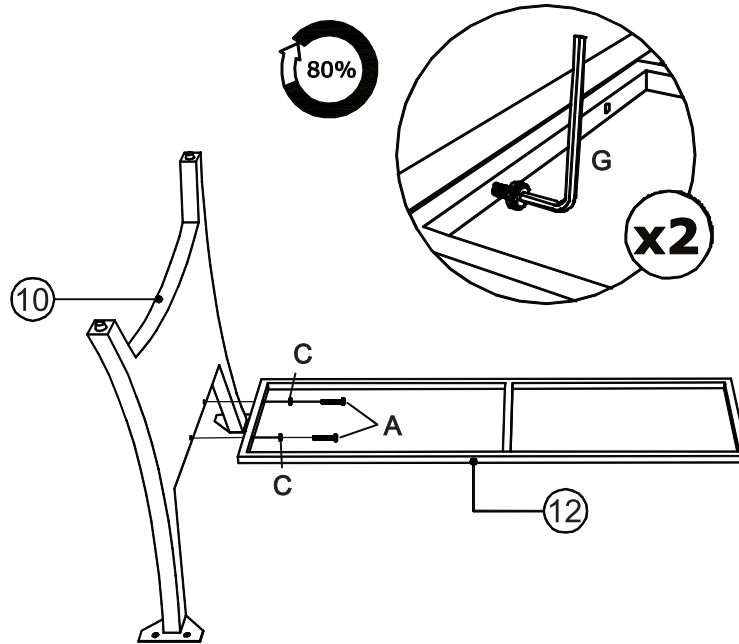A x 2  M6x40 mm	C x 2  Ø16x1 mm	G x 1  4 mm	
--	--	---	--





 
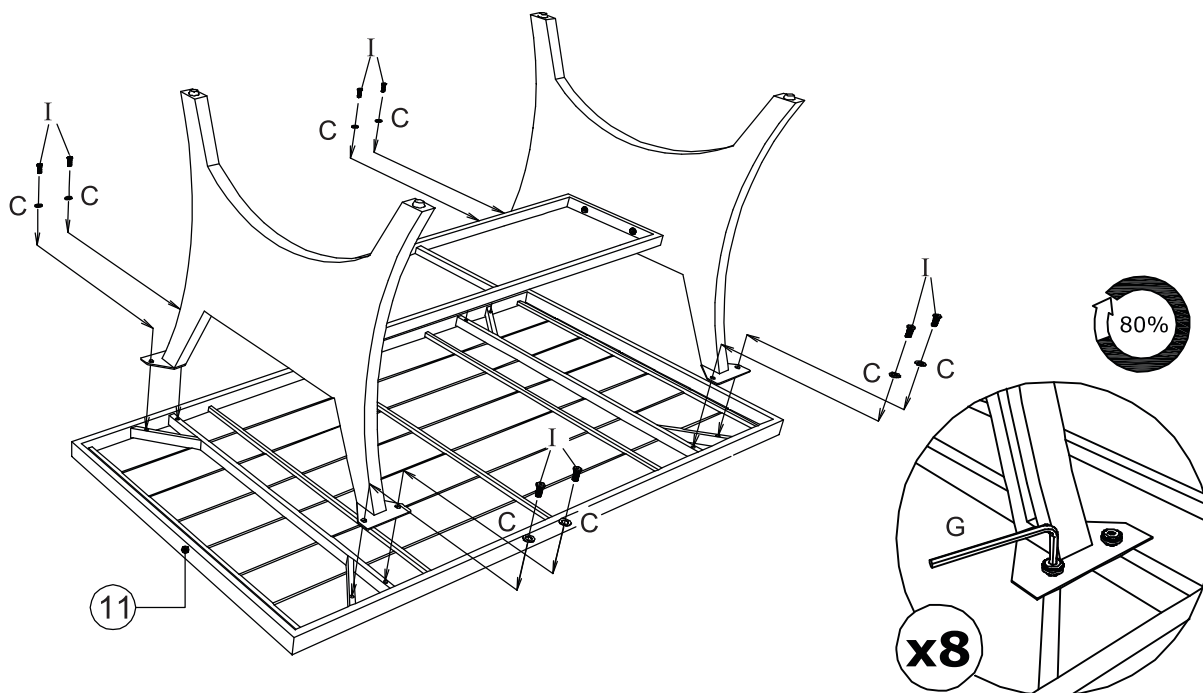 
STEP 13

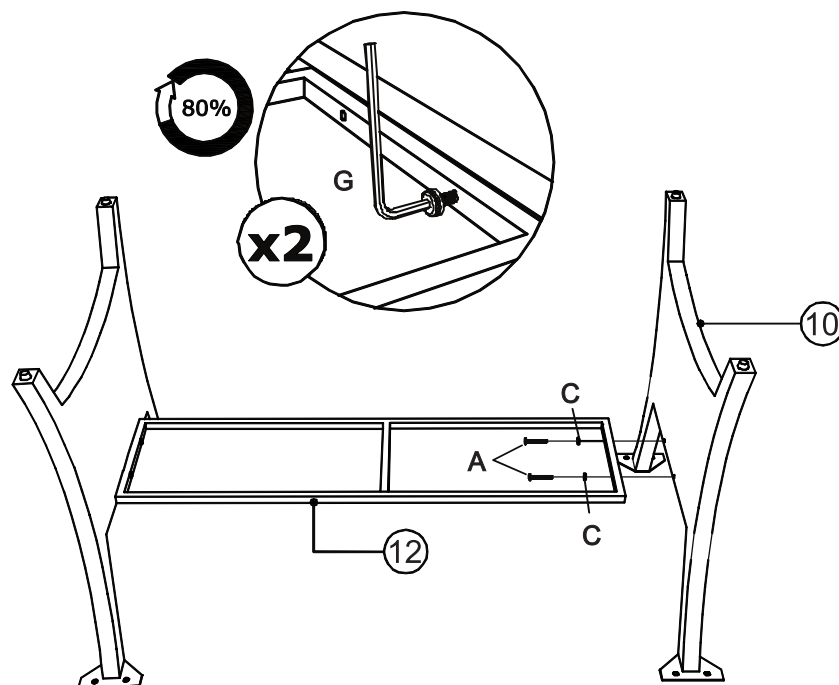A x 2  M6x40 mm	C x 2  Ø16x1 mm	G x 1  4 mm	
--	--	---	--




STEP 14

I x 8  M6x15 mm	C x 2  Ø16x1 mm	G x 1  4 mm	
--	--	---	--




STEP 15

G x 1  4 mm	
--	--

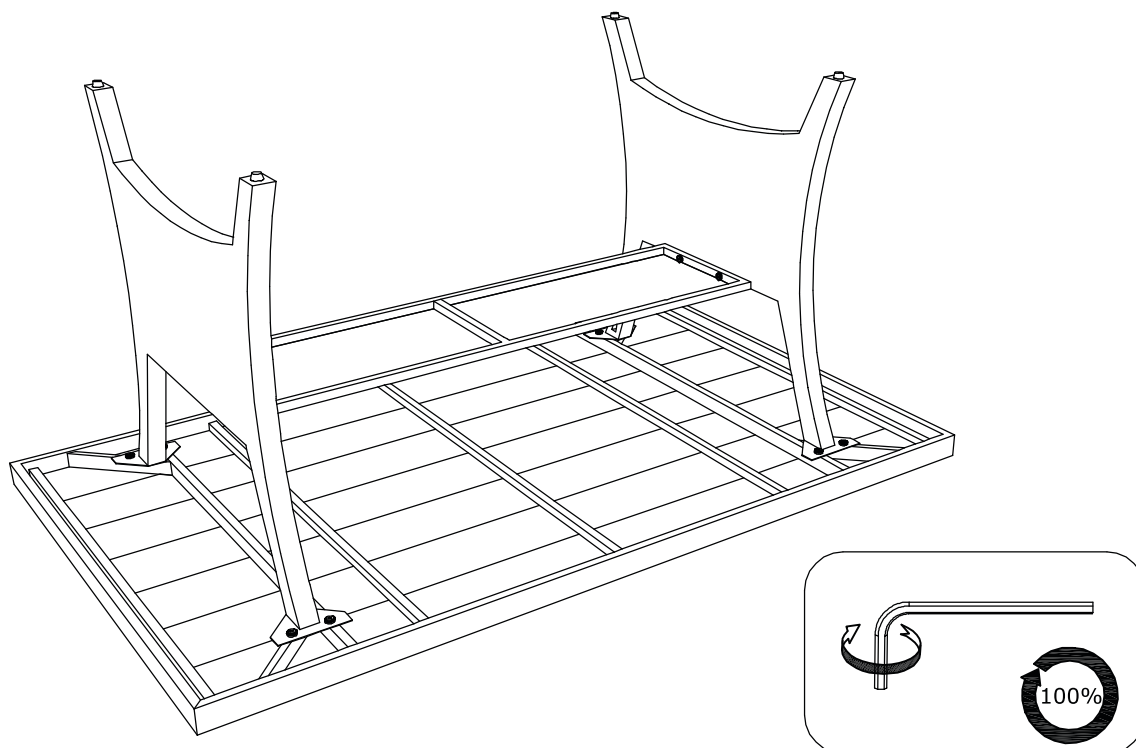 

 STEP 16



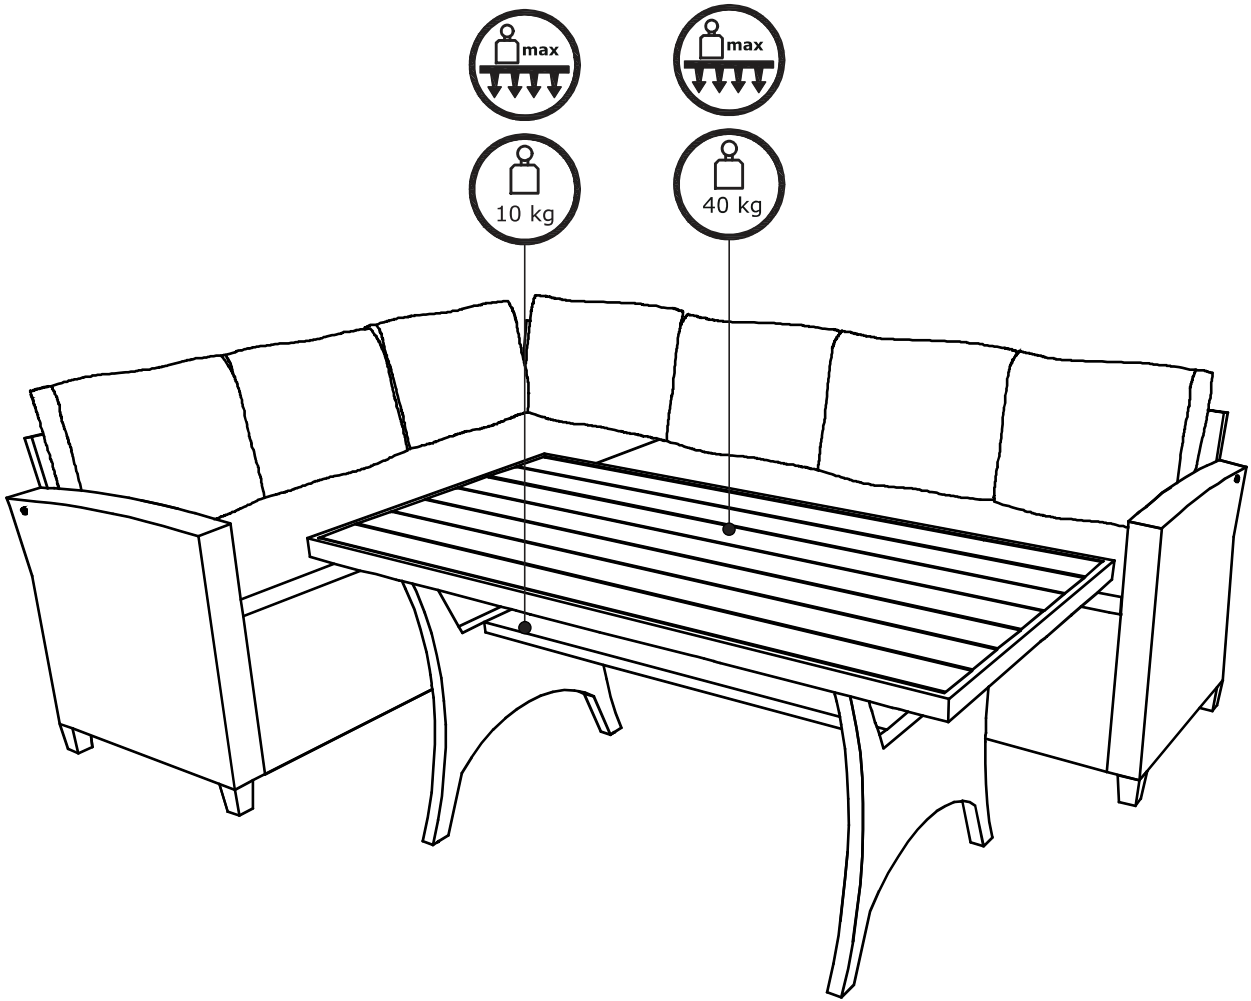

Need some help?



1-888-980-5122



@foagroup



cs.ec@foagroup.com



CARE INSTRUCTIONS

Outdoor furniture naturally weathers and shows color variation over time. We recommend the following care for the best results:

- Wipe with a soft cloth.
- Wash with mild soap and water as needed; do not use abrasive cleaners.
- Cover furniture with an outdoor cover (not included) when not in use.
- Store in a dry, covered area during inclement weather or winter season.



After assembly is completed, save these instructions and any included tools for future maintenance or re-assembly.