















Rechargeable Battery: Your 2WR5R-SF is equipped with a rechargeable battery. Use the included FT-USB CHARGER to charge your remote. We recommend charging your remote before first use. Charge time is approximately 2 hours.

Register online at www.compuSTAR.com within 10 days of purchase to activate your new remote's warranty.




 





QUICK START

BUTTON	FUNCTION DESCRIPTION
 4 seconds	Hold this button for 4 seconds to power up the remote.
 Tap	Tap button 1 time to lock and/or arm your system.
 x 2	Double tap button to unlock and/or disarm your system.
 2.5 sec	Hold button for 2.5 seconds to activate OR cancel the remote start sequence.

LED QUICK START

LED ICON	DESCRIPTION
	Will flash when transmitting to indicating the lock/arm command has been sent. Will flash + chirp confirming the system has been locked/armed.
	Will flash when transmitting to indicating the unlock/disarm command has been sent. Will flash + chirp confirming the system has been unlocked/disarmed.
	Will flash indicates the remote start command has been sent. Will flash + chirp confirming the system has been remote started/stopped.
	Will flash + chirp will sound when the remote receives an alarm trigger alert.
   	All 4 icons will flash during remote start to act as a runtime count down timer. Each icon represents 25% of the runtime and will stop flashing as timer counts down starting with the lock LED. The remote will beep 3 times when 1 minute of runtime left. During the last minute of runtime the remote will beep 1 time/2 seconds.

REMOTE USER FEATURES

 + 5	1 quick TAP THEN HOLD for 5 seconds to ENTER the remote user option. Once a selection is made it will automatically exit the user option.
FEATURE	FUNCTION/DESCRIPTION
Proximity Unlock	Enter remote user option as shown above: Tap  1 time to enable/disable the proximity unlock feature. Flashing  icon indicate ON Flashing  icon indicates OFF.
Silent mode	Enter remote user option as shown above: Double Tap  button to enable/disable remote beep. Flashing  icon and beep indicate ON Flashing  icon indicates OFF.
Power down	Enter remote user option as shown above: Hold  button for approximately 5 seconds to power down the remote. NOTE: HOLD  button for 4 seconds to power up.

To reprogram your remote, cycle the key in the ignition 5 times within 7 seconds. Parking lights will flash. Then tap the Lock button on your remote. Repeat for any additional remotes. All remotes must be programmed during one sequence. If you receive two parking light flashes, your Compustar has exited remote programming mode and you must retry.

Questions/comments? Contact us at 888-820-3690 from 8 AM to 5 PM PST. Also please visit www.compustar.com for a complete user's manual.