

## CONTENTS

1	Handle
2	Standoff
2	Washer, star
2	Screw, #10-24 x 2"


**IMPORTANT NOTE:** Depending on the model, additional components may be included with this kit but not utilized.

### ⚠ CAUTION

The door glass orientation is critical. Take note of the glass orientation during disassembly to ensure proper placement after the door handle is installed.


## REMOVE THE DOOR

- 1 Open the door.
- 2 Rotate the hinge retainer clip on each hinge forward until the hinge retainer clip stops.
- 3 On each hinge, pull the hinge retainer clip forward and down into the door until it stops.

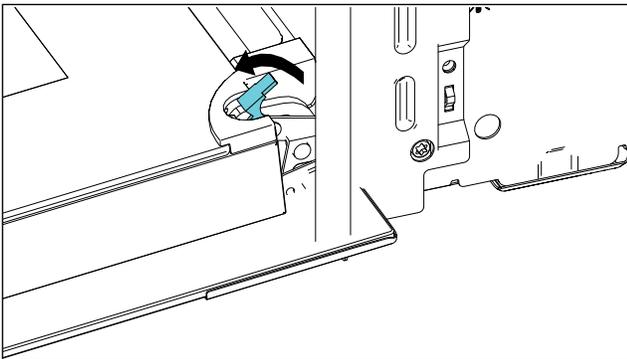


- 4 Close the door until the door stops against the hinge retainer clips.
- 5 Hold the door toward the top on each side.
- 6 Push the top of the door toward the closed position, while rotating the bottom of the door away from the unit.
- 7 Pull the door upward, removing it from the hinges.

- 8 Remove the door from the unit.

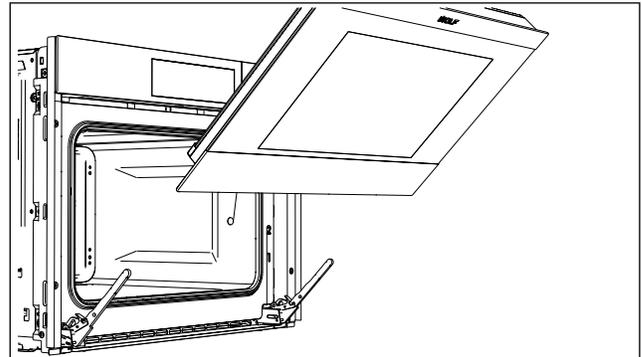


## REMOVE THE INNER DOOR GLASS

- 1 Place the door, handle-side down, on a padded surface.
- 2 Use a scribe to push the safety pin, on each side into the door.
- 3 Push the inner door glass up toward the top of the door to compress the springs.
- 4 Lift the bottom of the inner door glass up.
- 5 Remove the inner door glass from the door.

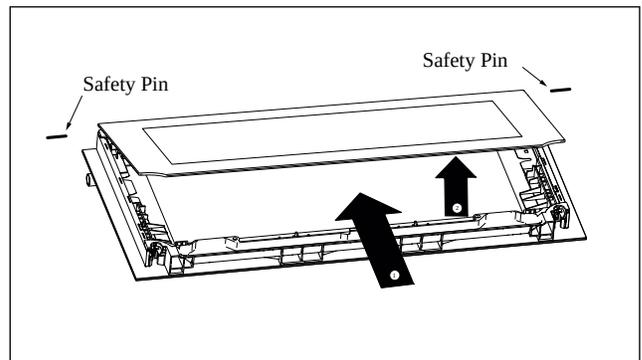


## REMOVE THE DOOR GLASS GASKET

- 1 Remove the gasket from the intermediate door glass - inside, or the intermediate door glass.

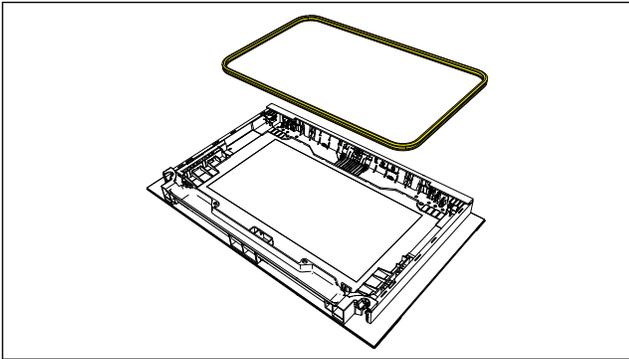


## REMOVE THE INTERMEDIATE DOOR GLASS TWO

- 1 Push the intermediate door glass two up toward the top of the door to compress the springs.
- 2 Lift the bottom of the intermediate door glass two up.
- 3 Remove the intermediate door glass two from the door.

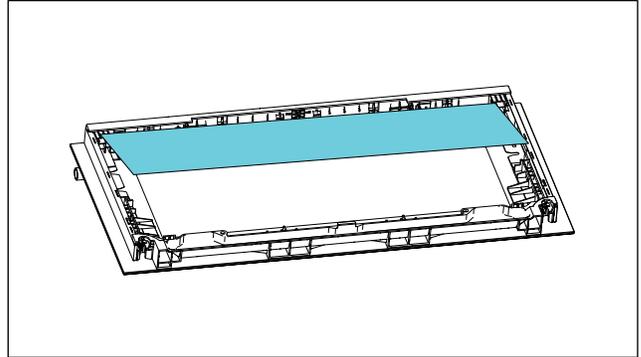


## REMOVE THE INTERMEDIATE DOOR GLASS ONE

- 1 Push the intermediate door glass one up toward the top of the door to compress the springs.
- 2 Lift the bottom of the intermediate door glass one up.
- 3 Remove the intermediate door glass one from the door.

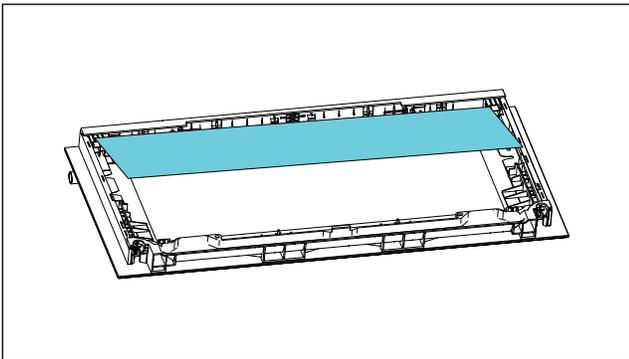

## REMOVE THE DOOR HANDLE

- 1 Use a T-25 Torx bit to remove the handle mounting screws.
- 2 Remove the handle and handle standoffs from the door front.

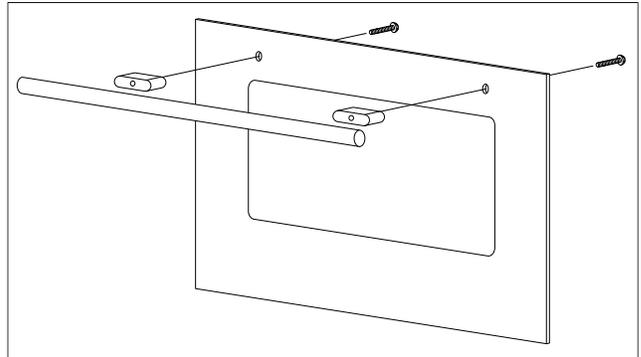

## INSTALL THE DOOR HANDLE

- 1 Place the door handle and handle standoffs onto the door front.
- 2 Use a T-25 Torx bit to install the handle mounting screws.