

DENON[®]

RCD-M40

CD RECEIVER

ENGLISH

FRANÇAIS

ESPAÑOL

Quick Start Guide

Guide de configuration rapide / Guía de configuración rápida

Read Me First....

Lisez-moi en premier.... / Lea esto primero....

Please do not return this unit to the store – call for assistance.

If you need help... :

If you need additional help in solving problems, contact Denon customer service in your area.

1-855-MY.Denon

1-855-693-3666

Call for Assistance: Monday – Friday 10:00AM to 10:00PM E.S.T, Saturday 12:00PM to 8:00PM E.S.T

For frequently asked questions please visit www.usa.denon.com/FAQ

 
 
For US and Canada only

Welcome


Thank you for choosing a Denon CD receiver. This guide provides step-by-step instructions for setting up your CD receiver.

Before You Begin

What's In the Box

Quick Start Guide		Power cord	
Owner's Manual		FM indoor antenna	
Safety Instructions		AM loop antenna	
Warranty (for North America model only)		Remote control unit	
CD receiver		R03/AAA batteries	

 What's In the Box (SC-M40)


 Speaker SC-M40	 Speaker cables
---	---



These drawings are for illustrative purposes only and may not represent the actual product(s).

1 Connection


- 1 Connect the left and right speakers to the RCD-M40

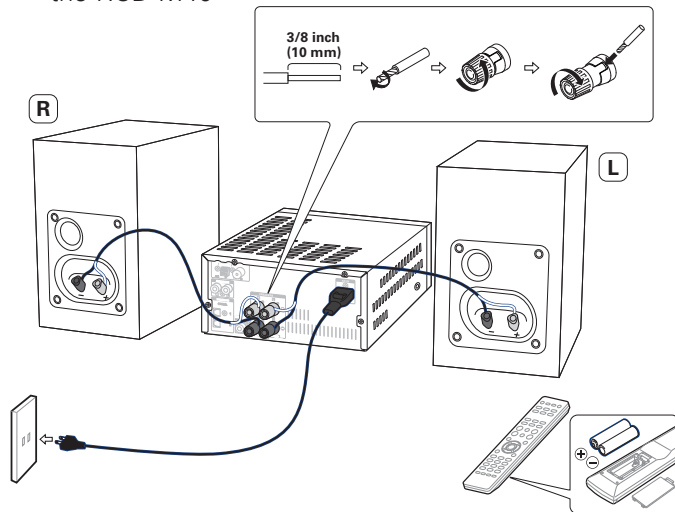

- 2 Connect the power cord from the RCD-M40 to a power outlet

- 3 Insert the batteries into the remote



Connecting a FM/AM antenna

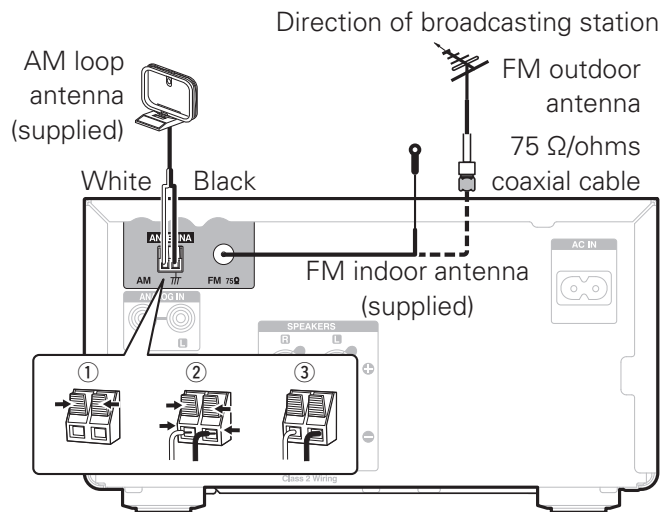

See “AM loop antenna assembly” on the next page for instructions on how to assemble the AM loop antenna.

❑ AM loop antenna assembly

- 1 Put the stand section through the bottom of the loop antenna from the rear and bend it forward.
- 2 Insert the projecting part into the square hole in the stand.

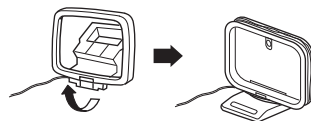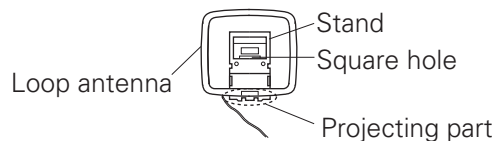

2 Enjoying your music!

❑ Play a CD

- 1 Press **CD** to switch the input source to “DISC”.
- 2 Insert a disc.
Playback starts.
 - Press ▲ on the main unit to open/close the disc tray.



You can set whether to automatically play CDs.
For details, see the included Owner's Manual.

❑ Listening to FM/AM broadcasts

1 Press **TUNER** to select the reception band.

- FM AUTO: When listening to an FM broadcast.
- FM MONO: If the signal is weak and stable stereo reception is not possible, select "FM MONO" to receive in monaural.
- AM: When listening to an AM broadcast.

2 Use **TUNE +** or **TUNE –** to select the station you want listen to.

❑ Listening to preset FM stations (Auto Preset)

This unit can be preset with a total of 40 FM broadcast stations.

1 Press **SETUP** during FM reception. "SETUP" menu appears on the display.

2 Use **Δ**/**∇** and **ENTER** to select "TUNER SETUP" - "FM AUTO PRESET", then press **ENTER**.

The unit starts to tune in to radio stations automatically and preset them.

3 Use **CHANNEL –** or **CHANNEL +** to select the preset number.

Owner's Manual


Please reference to the Owner's Manual for more details about the setup and operation of the CD receiver and its features.

Online Version

Enter the following URL into your web browser:
manuals.denon.com/RCDM40/NA/EN/



Online Manual

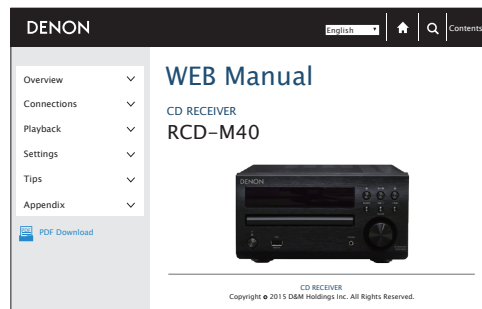


Printable Version

Access the print version of the owner's manual from the included CD-ROM or select the "PDF Download" link from the Online Version.

1

Insert the disc into your PC.

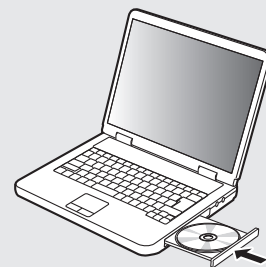

2

Follow the screen or double click on the PDF file.

DENON®
www.denon.com

Printed in China 5411 11270 00AD
Copyright © 2015 D&M Holdings Inc. All Rights Reserved.