



2900-51 in Fabric 323-02



Rocking Recliner
2900-51 in 145-01



2900-51 in Fabric 323-02

FLEXSTEEL®

© Flexsteel Industries, Inc. | Last Updated 10/26/2023

53	FEATURES	
51M		
51H		
51		
50M		
50H		
50		
		Flexsteel Spring Unit
●		DualFlex
		Back Construction
●		Attached
		Seat Construction
●		Attached
		Seat Cushion(s)
●		High-Density (HC)
		Tailoring
○		Arm Covers

- Standard
- Optional

PRODUCT DIMENSIONS	OVERALL			SEAT			Arm Height	Open Depth	Wall Clearance
	Height	Width	Depth	Height	Width	Depth			
Swivel Gliding Recliner -53	40"	34"	40"	19"	22"	21"	24"	65"	13"
Power Rocking Recliner -51M	40"	34"	40"	19"	22"	21"	24"	65"	13"
Power Rocking Recliner with Power Headrest -51H	40"	34"	40"	19"	22"	21"	24"	65"	13"
Rocking Recliner -51	40"	34"	40"	19"	22"	21"	24"	65"	13"
Power Recliner -50M	40"	34"	40"	19"	22"	21"	24"	65"	5"
Power Recliner with Power Headrest -50H	40"	34"	40"	19"	22"	21"	24"	65"	5"
Recliner -50	40"	34"	40"	19"	22"	21"	24"	65"	5"

NOTES

A clean, transitional design
Padded, soft sloped track arms
Gently rocks when not reclined and has safety locks to prevent rocking when reclined
Adjust from an upright to a fully reclined position by pulling back on the side handle in the arm
Sustainably sourced wood frame delivers exceptional durability
Contoured, high-density foam seat cushion provides lasting, everyday comfort and support
Upholstered in your choice of more than 250 select fabrics, including those with performance and sustainability characteristics
Handcrafted in North America
Swivels a full 360 degrees and allows you to glide or recline from any swivel position
Gently glides when not reclined and has safety locks to prevent gliding when reclined
Adjust from an upright to a fully reclined position with the touch of a button
Charge electronic devices with the dual USB-A port located in the power button
Adjust the recline and headrest positions with the touch of a button
Charge electronic devices with the single USB-A port located in the power button
Lower the footrest by applying pressure to it in a downward motion. Lowering the footrest with the handle can damage the recliner.
Power allows you to smoothly recline to any position.
A single USB port is included on each power button control on styles with arms.
The power control allows you to independently adjust the recline and headrest.
A separate home button returns the headrest and footrest to their original positions with one touch.
A USB port is included on the power control for powering electronics.
Zero draw technology only uses power when the USB port is in use.



Power Recline
& Headrest