 




ASSEMBLY INSTRUCTIONS

COASTER FINE FURNITURE

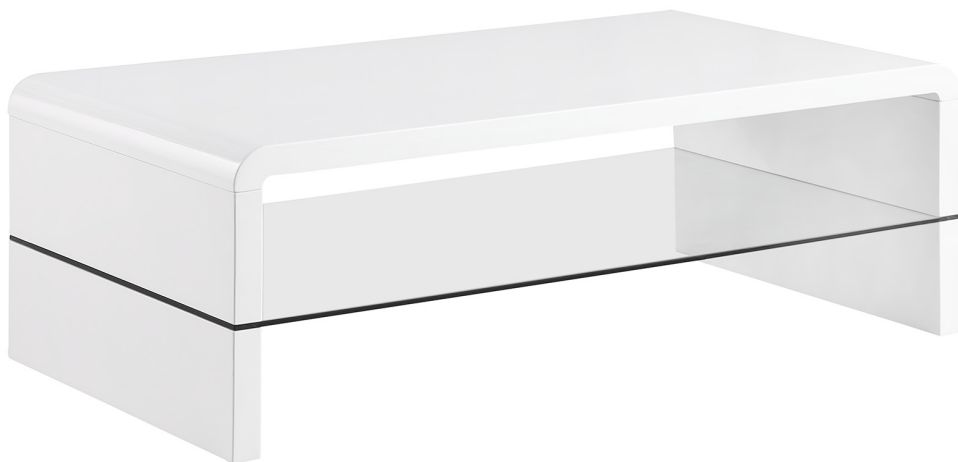

Fine Furniture for every stage of life

703798
Coffee Table

REVISED 1: 12/22 /2021

PAGE 1 OF 5

COASTERFURNITURE.COM

ITEM: 703798



ASSEMBLY INSTRUCTIONS

 
ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

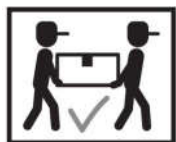


ASSEMBLY TIME

15 MINUTES

PARTS IDENTIFICATION


A TOP PANEL

 1PC

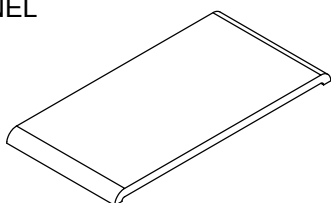


B UPPER SIDE PANEL

 2PCS

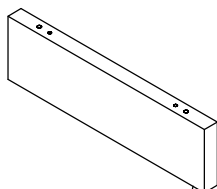


C LOWER SIDE PANEL

 2PCS

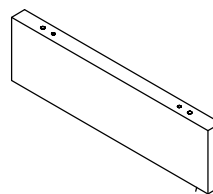

D TEMPERED GLASS

 
1PC

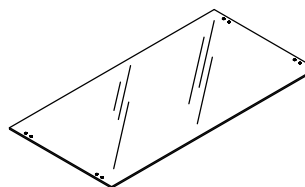

Z HARDWARE IDENTIFICATION

1 ROD

 4PCS



2 WOOD DOWEL

8PCS



 
3 SPRING WASHER

4PCS



4 WASHER

4PCS



5 SCREW

4PCS



6 SOCKET WRENCH

 
1PC




ITEM: 703798
ASSEMBLY INSTRUCTIONS



STEP 1

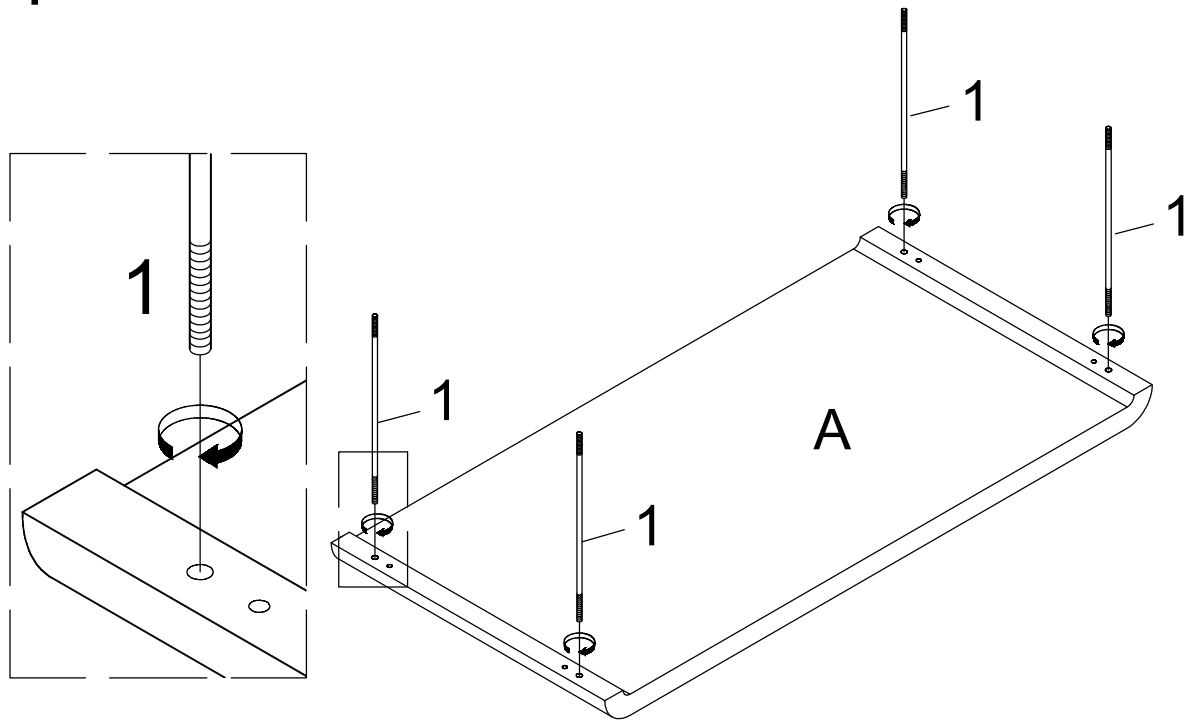

 
STEP 2

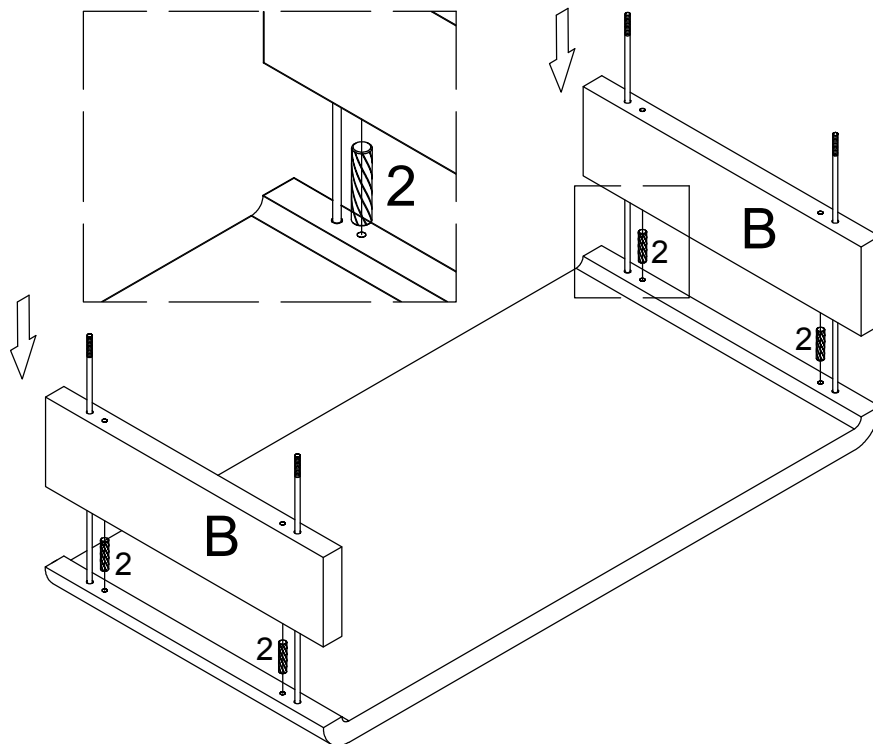


ITEM: 703798
ASSEMBLY INSTRUCTIONS



 
STEP 3

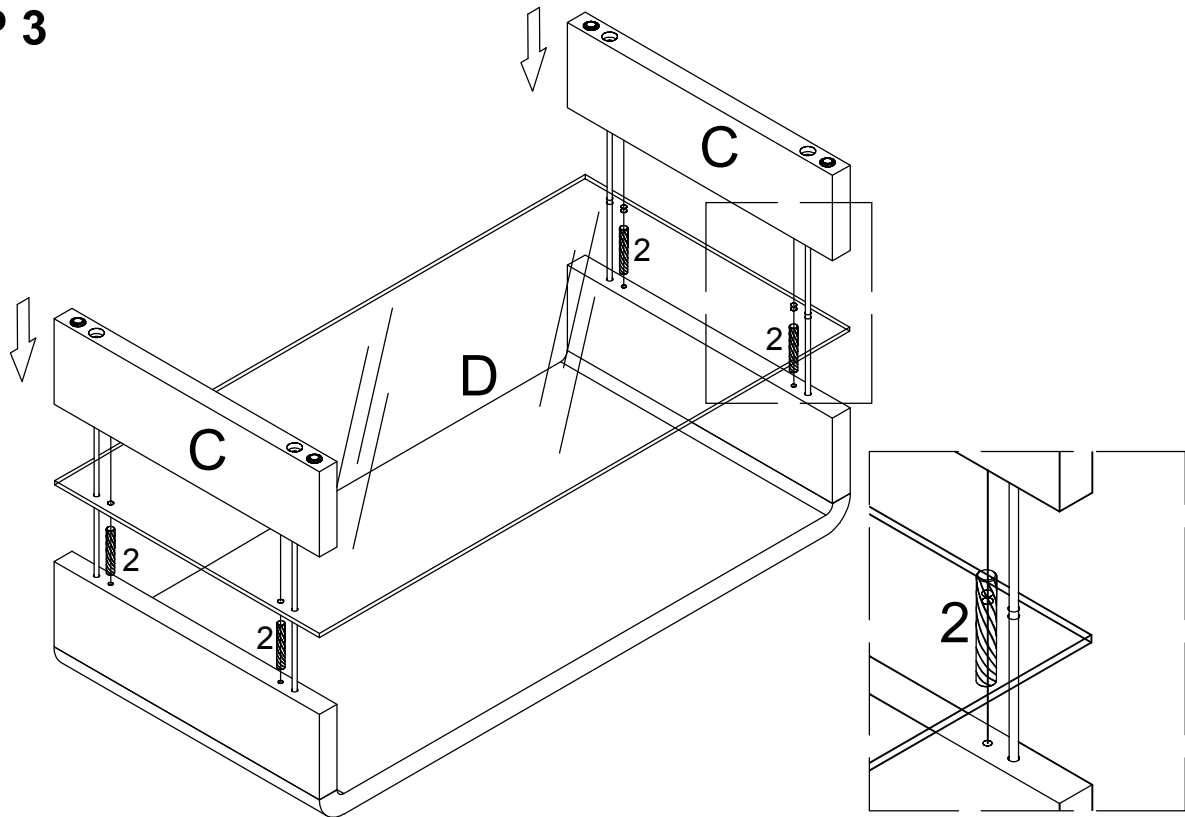

 STEP 4

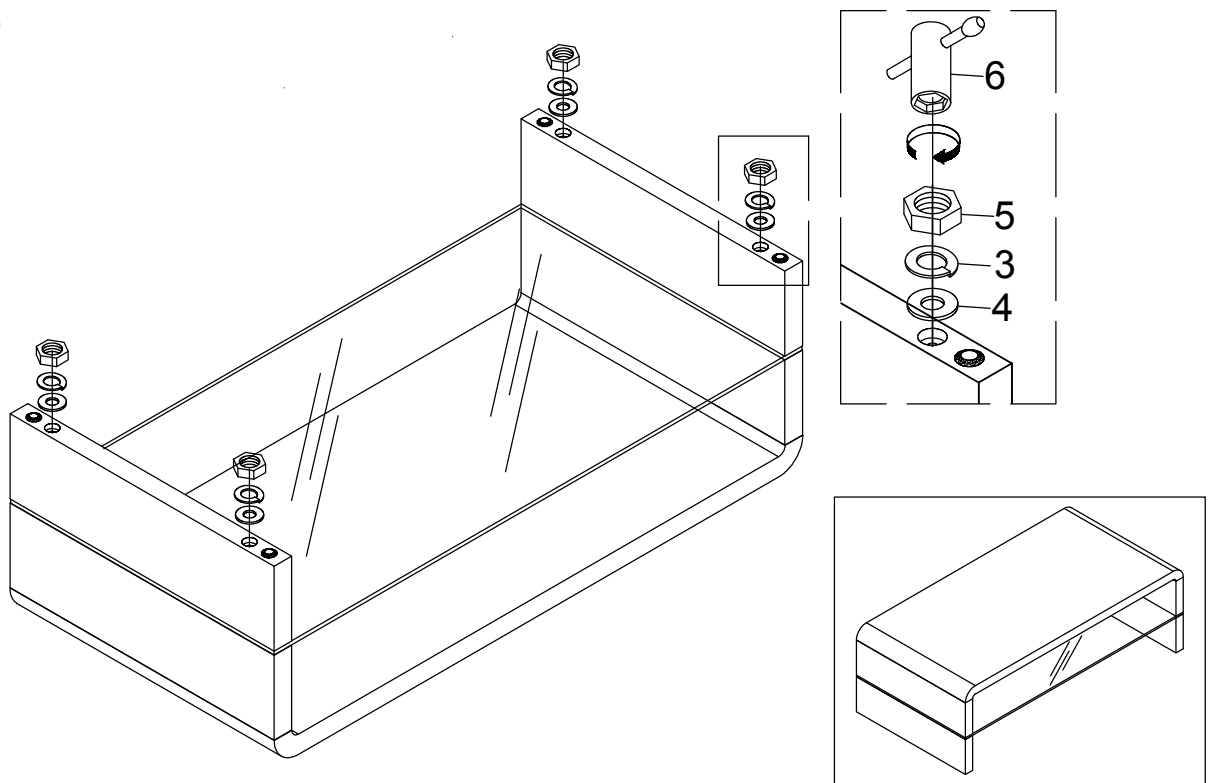

ITEM: 703798
ASSEMBLY INSTRUCTIONS

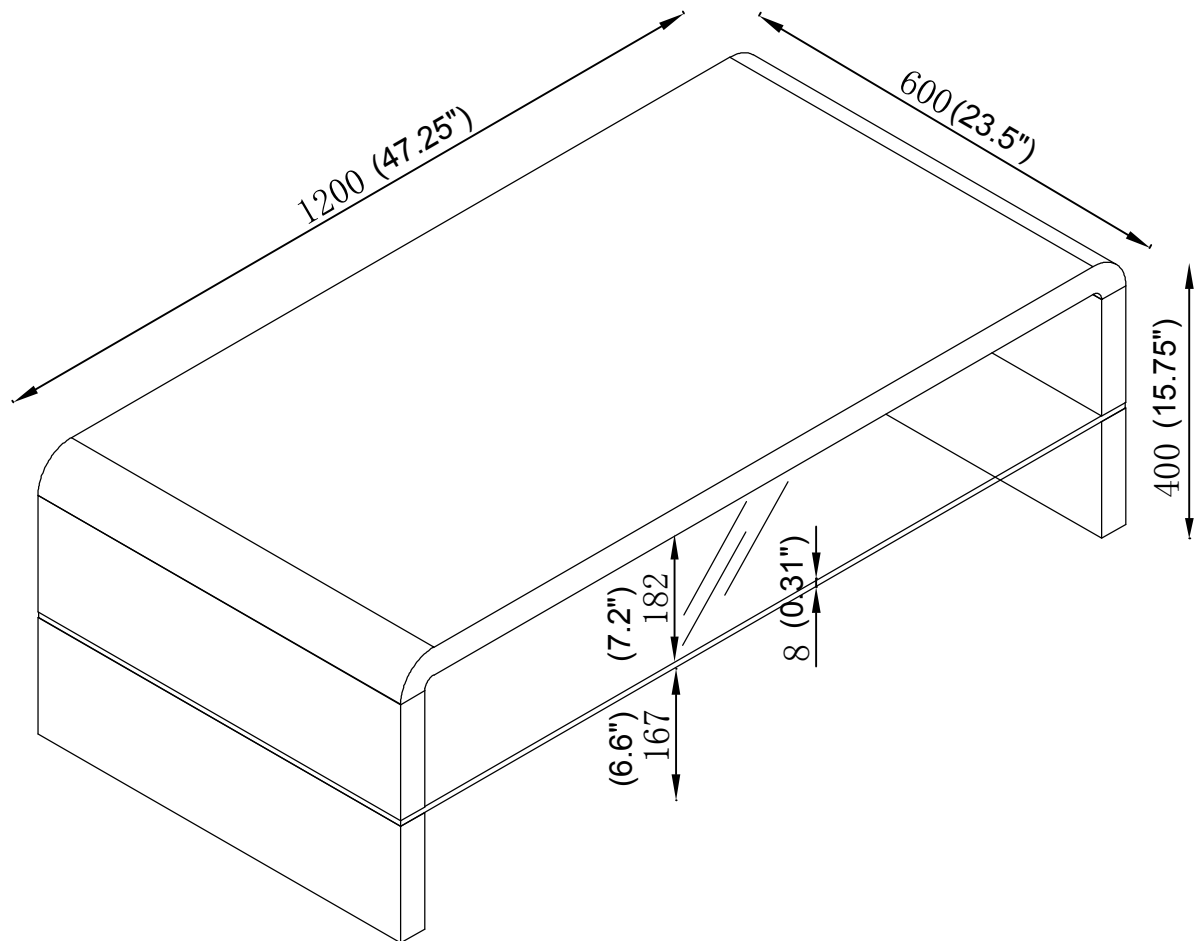 

Note: Dimension tolerance $\pm 5\%$