

2902-51H in fabric 296-40



Power Rocking Recliner with Power Headrest 2902-51H in 296-40

2902-51H in 123-42

FLEXSTEEL®

© Flexsteel Industries, Inc. | Last Updated 05/02/2022

## Davis | 2902

53 51M 51H 51 50M 50H 50	FEATURES							
	Flexsteel Spring Unit							
•	DualFlex							
	Back Construction							
•	Attached							
	Seat Construction							
•	Attached							
	Seat Cushion(s)							
•	High-Density (HC)							
	Tailoring							
0	Arm Covers							
	Aim Covers							

## Standard

o Optional

PRODUCT DIMENSIONS	OVERALL			SEAT					
	Height	Width	Depth	Height	Width	Depth	Arm Height	Open Depth	Wall Clearance
Swivel Gliding Recliner -53	41″	37″	40″	20″	22″	22″	25″	67″	15″
Power Rocking Recliner -51M	41″	37″	40″	20″	22″	22″	25″	67″	15″
Power Rocking Recliner with Power Headrest -51H	41″	37″	40″	20″	22″	22″	25″	67″	15″
Rocking Recliner -51	41″	37″	40″	20″	22″	22″	25″	67″	15″
Power Recliner -50M	41″	37″	40″	20″	22″	22″	25″	67″	5″
Power Recliner with Power Headrest -50H	41″	37″	40″	20″	22″	22″	25″	67″	5″
Recliner -50	41″	37″	40″	20″	22″	22″	25″	67″	5″

## **NOTES**

Available in more than 250 fabric options

Also available in Performance fabrics - Revolution and LiveSmart

Safety locks prevent furniture from rocking while reclining.

Removable backs allow for easy lifting and maneuvering through doorways.

Swivels a full 360 degrees.

Glides or reclines from any swivel position.

Swivels in all directions while reclined.

Safety locks prevent the recliner from gliding while reclining.

Power mechanism allows you to smoothly recline to any position.

Single USB port is included on the power button control.

Safety locks prevent the recliner from rocking while reclining.

Safety locks prevent the furniture from rocking while reclining.

The power control allows you to independently adjust the recline and headrest.

A separate home button returns the headrest and footrest to their original positions with

A USB port is included on the power control for powering electronics.

Zero draw technology only uses power when the USB port is in use.

Lower the footrest by applying pressure to it in a downward motion. Lowering the footrest with the handle can damage the recliner.

Power allows you to smoothly recline to any position.

A single USB port is included on each power button control on styles with arms.



Power Recline & Headrest