
 



 





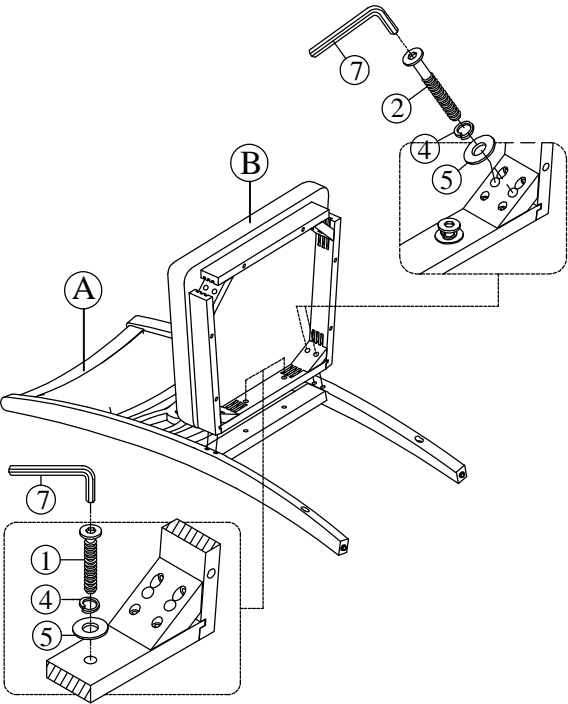
Assembly Instructions  
DINING SIDE CHAIR  
DAH300SC & DAH500SC & DAH700SC

- Caution: Please read instructions thoroughly before unpacking assembly parts. Sharp, exposed staple tips can cause injury, therefore, for your protection, please remove any exposed staples used in packing.
- 1. We recommend that you should assemble this product with the assistance of another person; this will make assembly easier, and will help to eliminate damage to the product or injury to persons during assembly.
  - 2. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.
  - 3. Please do not over tighten screws or bolts.
  - 4. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.


PART LIST FOR SIDE CHAIR				HARDWARE LIST PACKED INSIDE BOX			
No.	PART DESC	CODE.	Q'TY	No.	HARDWARE DESC	CODE.	Q'TY
A	Dining Side Chair - Upholstered Back Frame	PDAH300SCBFR PDAH500SCBFR PDAH700SCBFR	1	1	 ALLEN BOLT (Ø1/4"*1-5/8")	PDAH300SCHW PDAH500SCHW PDAH700SCHW	2
B	Dining Side Chair - Cushion w/ Seat Frame	PDAM300SCSEA PDAM500SCSEA PDAM700SCSEA	1	2	 ALLEN BOLT (Ø1/4"*3")		4
C	Dining Side Chair - Front L/R Legs (Set)	PDAH300SCLEG PDAH500SCLEG PDAH700SCLEG	2	3	 Nut (Ø5/16")		4
D	Dining Side Chair - Side Stretcher L/R (Set)	PDAH500SCSTR PDAH500SCSTR PDAH500SCSTR	2	4	 SPRING WASHER (Ø5/16")		10
				5	 FLAT WASHER (Ø5/16")		10
				6	 SCREWS/ VIS (#4*1-1/2")		4
				7	 ALLEN KEY (Ø1/8")		1
				8	 Wrench (Ø5/16")		1

 Only tighten all bolts when all bolts aligned with bolt inserts.

STEP:1



STEP:2

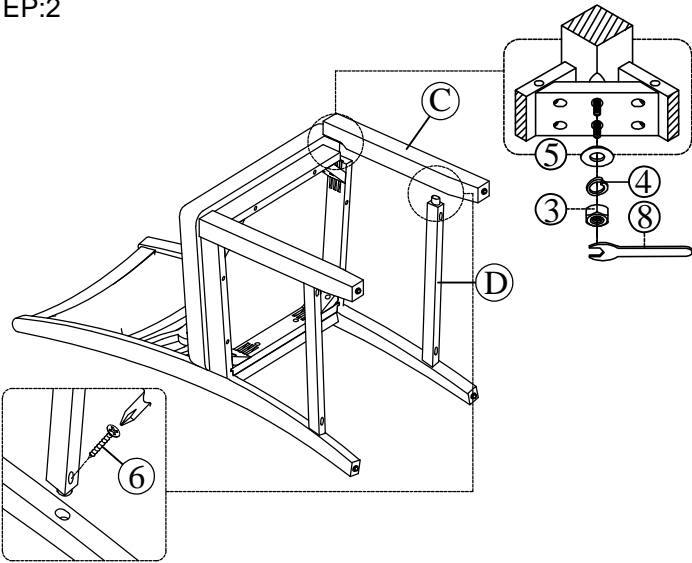

COMPLETED

