


ASSEMBLY INSTRUCTION

Model: U1818-LAF CRLS
U1818-RAF CHS W/PUSHBACK


Description :
- Left arm facing console reclining loveseat, multi-color led and immersive sound
- Right arm facing chaise with pushback, multi-color led and immersive sound

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment

Bluetooth Connection: Enable Bluetooth on your device and pair with [GFUSA] from the list of available devices.

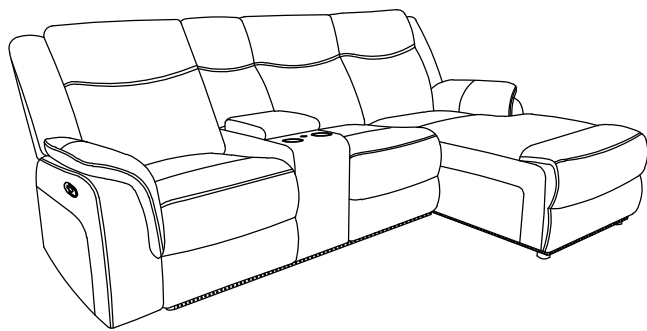

PARTS LIST:

 NO.	DESCRIPTION	SKETCH	Q'TY
A	Loveseat		1 PC
B	Left Backrest		1 PC
C-1	Console Backrest		1 PC
C-2	Console Backrest		1 PC
D	Right Backrest		1 PC
E	Left Wing		1 PC
F	Chaise		1 PC
G	Right Backrest		1 PC
H	Right wing		1 PC
I	Plug		1 PC



WARNING: To avoid serious personal injury:

- Carefully and strictly follow assembly instructions. Improper assembly of furniture can result in structural failure, instability of the product, or tip-over.
- Monitor and carefully control the assembly components. These include small parts and hardware that may present a choking hazard to small children. Bob's furniture should be assembled only by responsible adults and children should not be involved in the assembly process.
- Where provided, wall mounting hardware should always be used as prescribed in these instructions to anchor furniture to walls. Proper use of the wall mounting hardware can significantly reduce the potential for furniture tip-over and crushing injuries.

ASSEMBLY INSTRUCTION

Model: U1818-LAF CRLS
U1818-RAF CHS W/PUSHBACK


Description :

- Left arm facing console reclining loveseat, multi-color led and immersive sound
- Right arm facing chaise with pushback, multi-color led and immersive sound

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment


Step 1:

Take the Console Backrest (C1/C2) and Left Wing (E) out of the Seat Base part of the Seat (A).

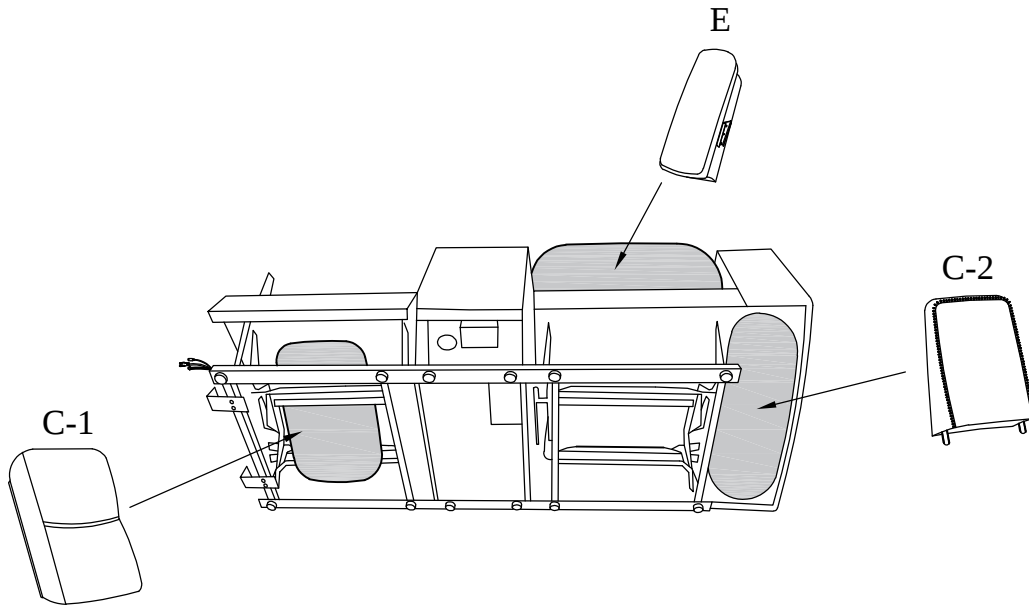

Step 2:

Attach the Console Backrest (C1/C2) by Close the zipper

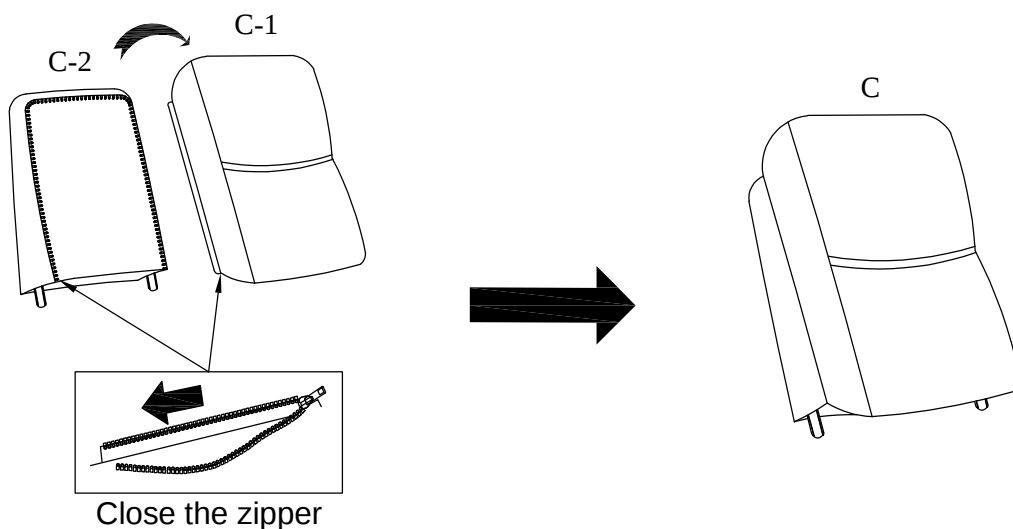

ASSEMBLY INSTRUCTION

Model: U1818-LAF CRLS
U1818-RAF CHS W/PUSHBACK


Description :

- Left arm facing console reclining loveseat, multi-color led and immersive sound
- Right arm facing chaise with pushback, multi-color led and immersive sound

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment


Step 3:

Attach the Backrest (B/C/D) to the Loveseat (A).

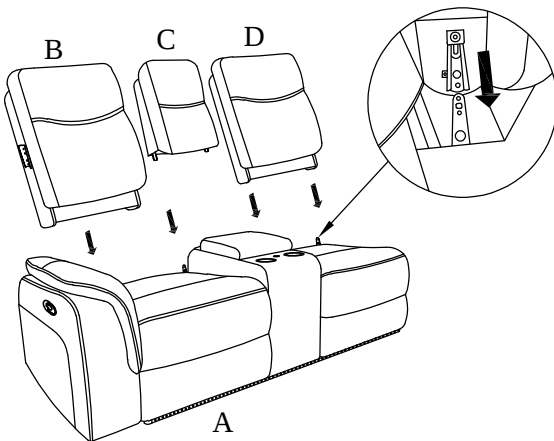


Step 4:

Attach the Left Wing (E) to the Left side of the Backrest (B).

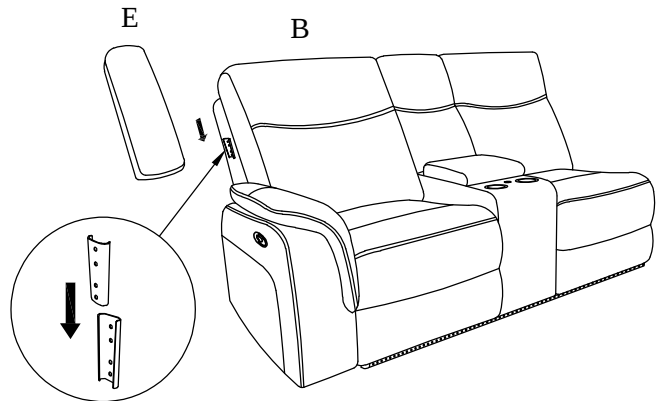


Step 5:

Attach the Backrest (G) to the Chaise (F).

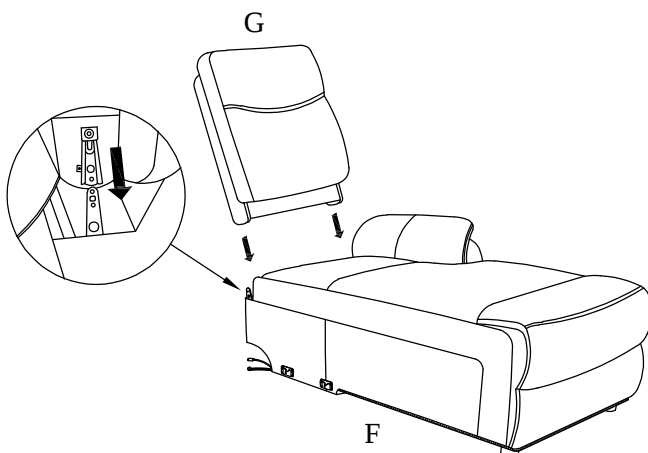

Step 6:

Attach the Right Wing (H) to the Left side of the Backrest (G).

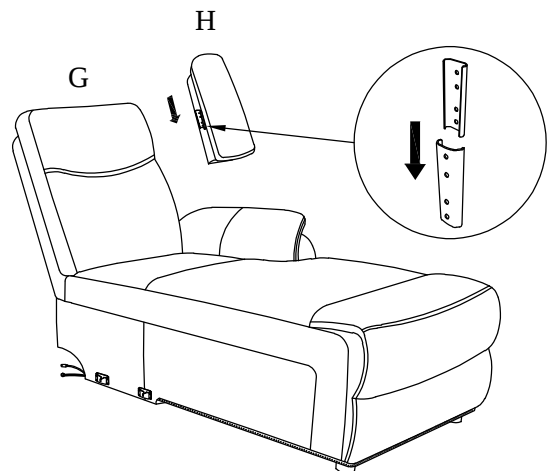

ASSEMBLY INSTRUCTION

Model: U1818-LAF CRLS
U1818-RAF CHS W/PUSHBACK


Description :

- Left arm facing console reclining loveseat, multi-color led and immersive sound
- Right arm facing chaise with pushback, multi-color led and immersive sound

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment


Step 7:

Connet the Loveseat and Chaise

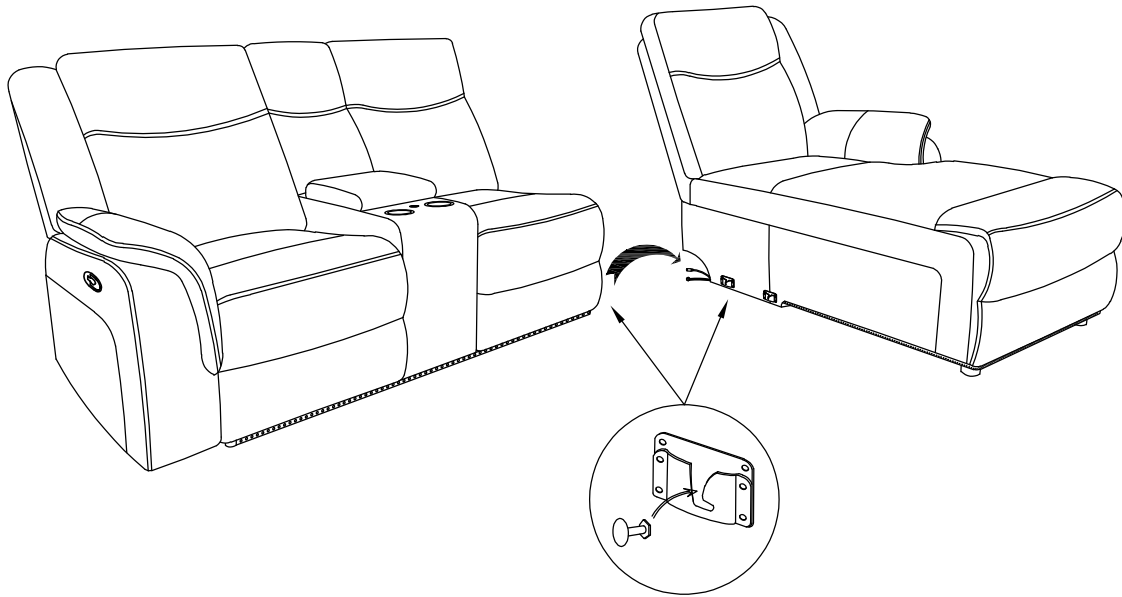

Step 8:

Connect the power wire under the Console to the power source through out The Plug (I/J).

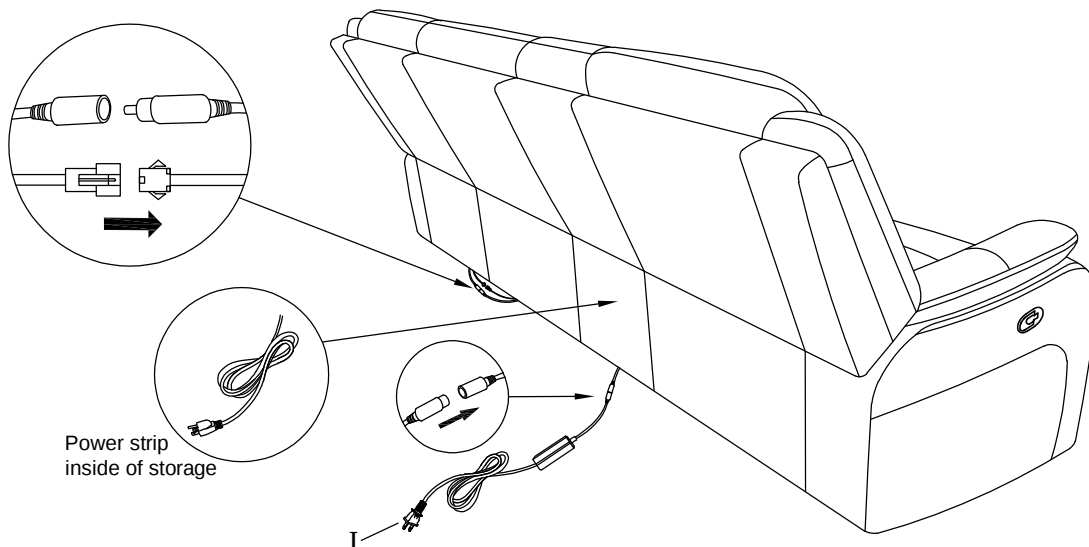

ASSEMBLY INSTRUCTION


Model: U1818-LAF CRLS
U1818-RAF CHS W/PUSHBACK

Description :

- Left arm facing console reclining loveseat, multi-color led and immersive sound
- Right arm facing chaise with pushback, multi-color led and immersive sound


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment

Step 9:

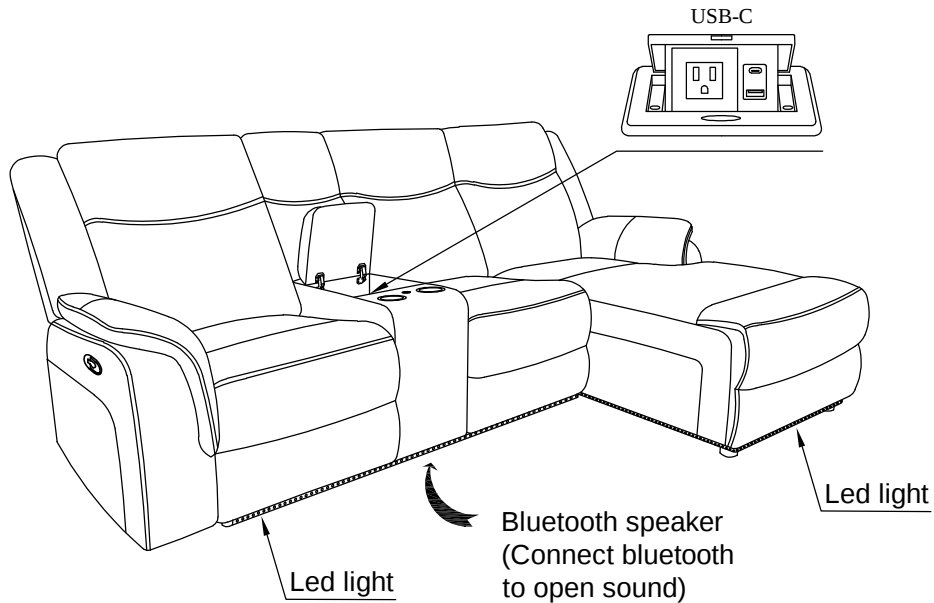

Step 10:

Open the footrest by pressing the power button on/off.

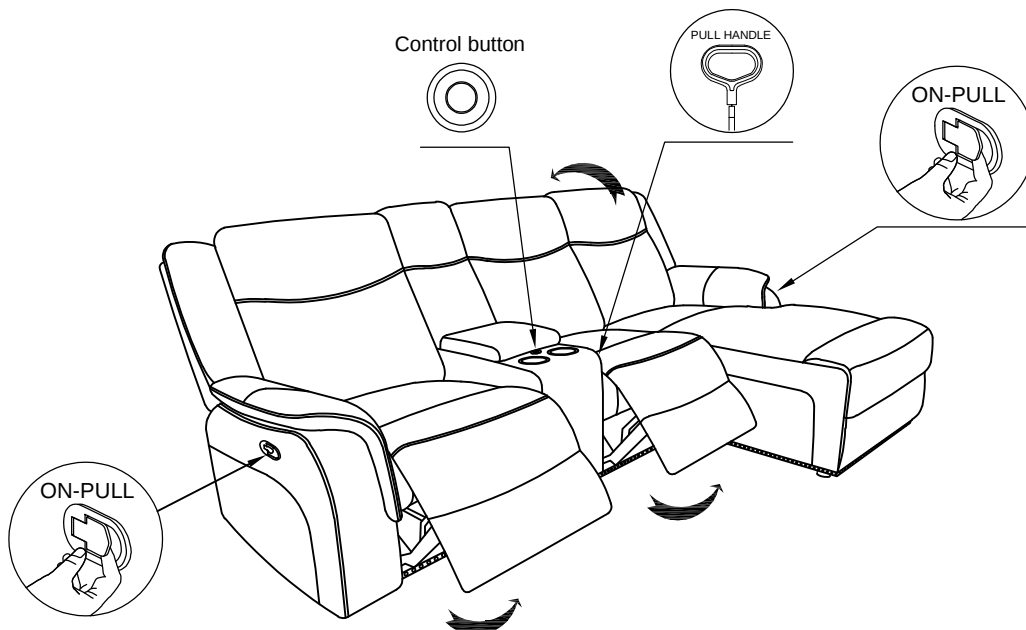


ASSEMBLY INSTRUCTION

Model: U1818-LAF CRLS
U1818-RAF CHS W/PUSHBACK

Description :

- Left arm facing console reclining loveseat, multi-color led and immersive sound
- Right arm facing chaise with pushback, multi-color led and immersive sound

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment

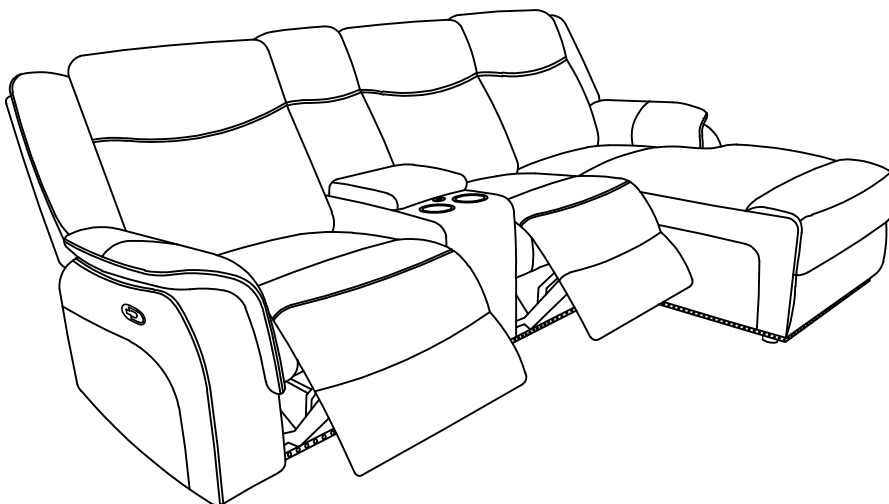

CAUTION: That changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

EMOMO AFTER-SALES SERVICE INFORMATION
Contact: DsB Global Inc
Tel: 001833-371-0225

E-mai: US-SERVICE@emomotech.com
Add: 218 Evitt Parkway Ringgold, GA
Zip code: 30736

Operation Instructions

1. Upon powering on, the product automatically starts. The light strip runs through a colorful cycle and then lights up blue.
2. The control button blinks blue, and a voice prompt says "Power On." At this point, the product enters Bluetooth pairing mode, and the voice prompt says "Wait for Preparing."
3. If Bluetooth fails to connect, the control button blinks blue rapidly, and the product automatically enters broadcast search mode. The Bluetooth search lasts for 10 seconds, followed by 5 seconds of broadcast search, and continues to cycle.
4. Open the Bluetooth function on your phone, search for the Bluetooth name "E309T_PRO," and pair it. Once paired successfully, the voice prompt says "Bluetooth Connected," and the control button blinks blue rapidly, continuing the broadcast search.
5. Open the music player on your phone and start playing a song. The speaker will automatically respond and play the music. The light strip will default to the colorful cycle and will move with the rhythm of the music. The subwoofer will also vibrate in sync with the music's rhythm. When the music pauses, the light strip lights up blue, and the subwoofer stops vibrating.
6. You can control the music on your phone, including previous track, next track, pause/play, volume down, and volume up.
7. Press the control button briefly to turn off the device, and the voice prompt will say "Power Off." Press the control button again briefly to turn the device on.