
(BOX 1) - BOX OF DRESSER			
PARTS LIST			
NO.	DESCRIPTION	SKETCH	QTY
1	DRESSER		1
2	BUN FOOT	d	4
3	VERTICAL LEG	<u> </u>	1

IMPORTANT NOTE:

- * Place all wooden parts on a clean and smooth surface such as a rug
- or carpet to avoid the parts from being scratched.

 * Check to be sure that you have all parts and hardware.

 * Remove all wrapping materials, including staples & packing straps before you start to assemble.
- * Do not tighten all screws/bolts until all completely assembled.
 * Keep all hardware parts out of reach of children.

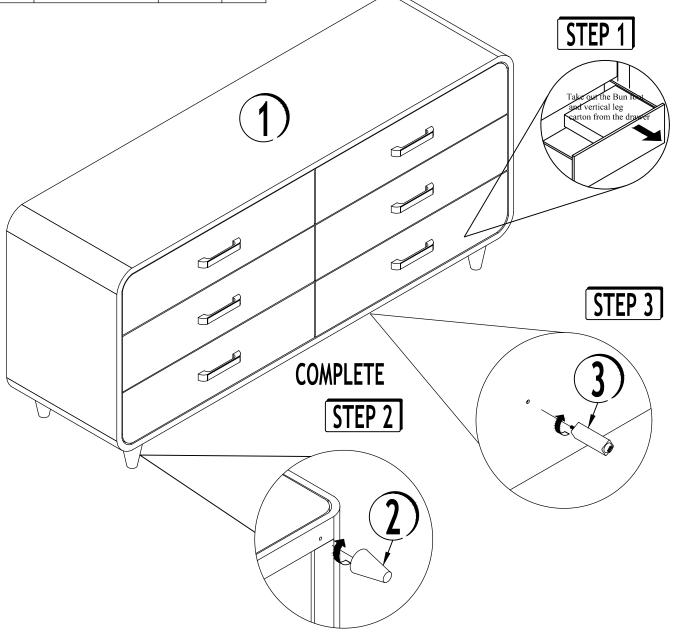

THE ANTI TIPPING HARDWARE IS LOCATED AT THE TOP RIGHT DRAWER OF DRESSER