


Furniture of **America**®

Assembly Instructions

CM-DK6276-3A

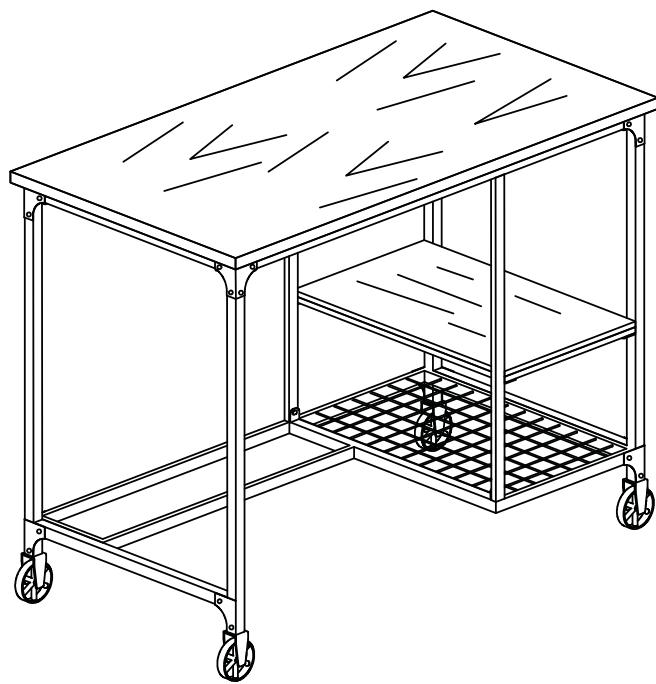

ASSEMBLY RATING

The Assembly Rating is a 5-point system that shows the degree of effort needed in assembling a specific product (with 1 being easy and 5 being difficult). For some products, two persons are recommended.

EASY  DIFFICULT 

Tools Required For Assembly:

Allen Wrench




2 PERSONS RECOMMENDED




ASSEMBLY & CARE ADVICE

FOR YOUR FURNITURE TO LAST, CORRECT ASSEMBLY AND PROPER MAINTENANCE ARE NECESSARY.
PLEASE FOLLOW THE INFORMATION PROVIDED BELOW TO FULLY ENJOY YOUR FURNITURE.

BASIC ASSEMBLY TECHNIQUES

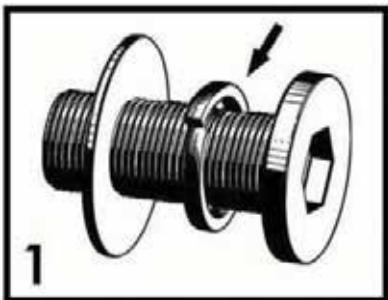


When lock or spring washer is used in an assembly, please make sure the lock or spring washer is placed between the larger flat washer and the head of the screw or bolt.

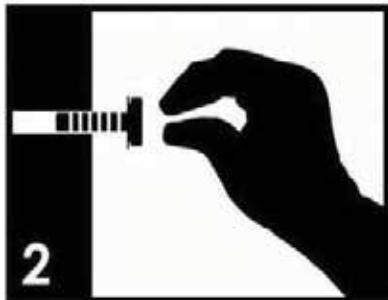


Position each part correctly and insert screws or bolts into their respective holes by hand tighten or using the proper hand tool. Only tighten when step is completed or when instructed to do so.




Use cardboard or carpet area when assembling furniture to prevent scratches. Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

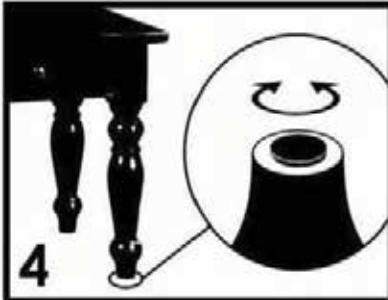

Some furniture comes with height adjustment knobs underneath each leg. To lower or to raise each leg, you need to turn clockwise or counterclockwise, respectively.

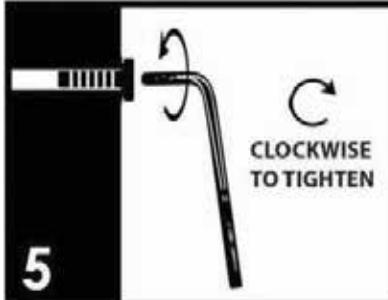


Make sure all parts are properly aligned, then use the appropriate hand tool to completely tighten the bolts or screws. Do not use power tools and do not overtighten.

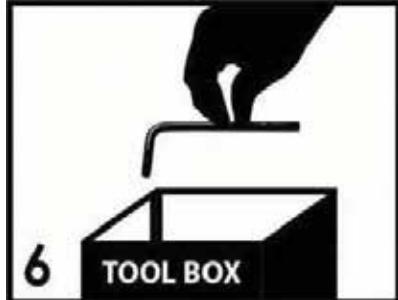

Save the instructions and store the Allen wrench or any supplied tool for later maintenance. After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.

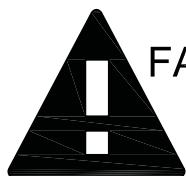


FAILURE TO FOLLOW THE GUIDELINES ABOVE MAY
RESULT IN INJURY AND/OR PROPERTY DAMAGE.




Before you begin, please read Page 2 of "Assembly and Care Advice".

And remember, do not tighten until each step is completed or instructed.


Parts List

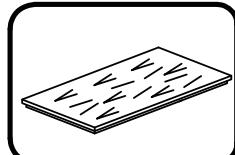


#1 x 1pc
Top Panel

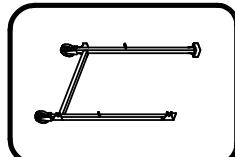


#2 x 1pc
Right Leg

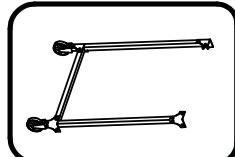


#3 x 1pc
Left Leg

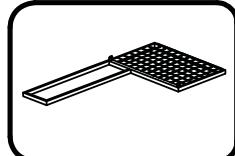


#4 x 1pc
Structure

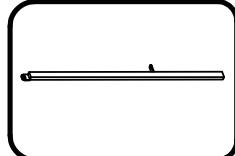

#5 x 1pc
Back Supporter

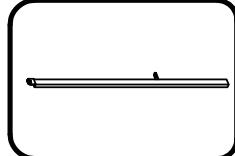

#6 x 1pc
Front Supporter

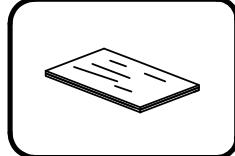

#7 x 1pc
Shelf

Hardware List



#A x 16pcs
Bolt 1/4"X5/8"



#B x 4pcs
Bolt 1/4"X1"



#C x 1pc
Allen Wrench




#A x 8pcs

1. Place the top panel (#1) face down onto a protected surface.

2. Align the top of the left and right legs (#2,3) to the corners along the top panel (#1).

3. Insert 8 bolts (#A) into the legs and secure using the Allen wrench (#C).

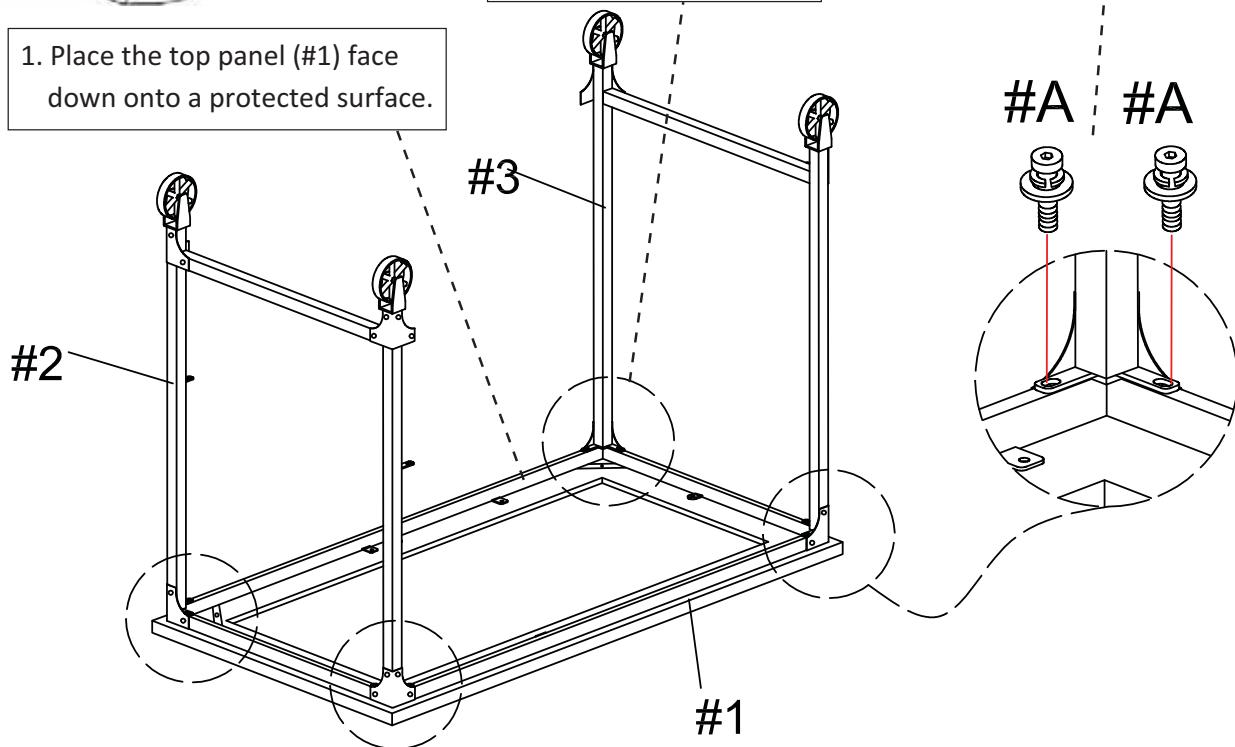


#B x 4pcs

2. Insert a total of 4 bolts (#B). Secure using the Allen wrench.


#B

#B

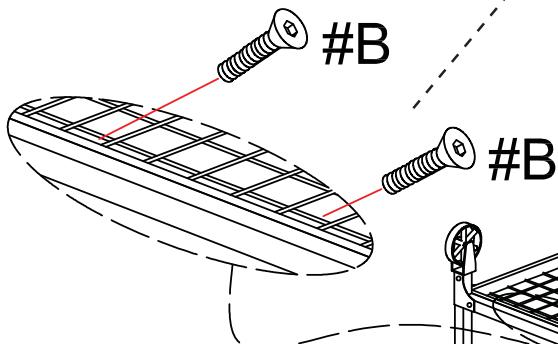


#4

1. Align the structure (#4) along the bottom of the legs (#2,3).

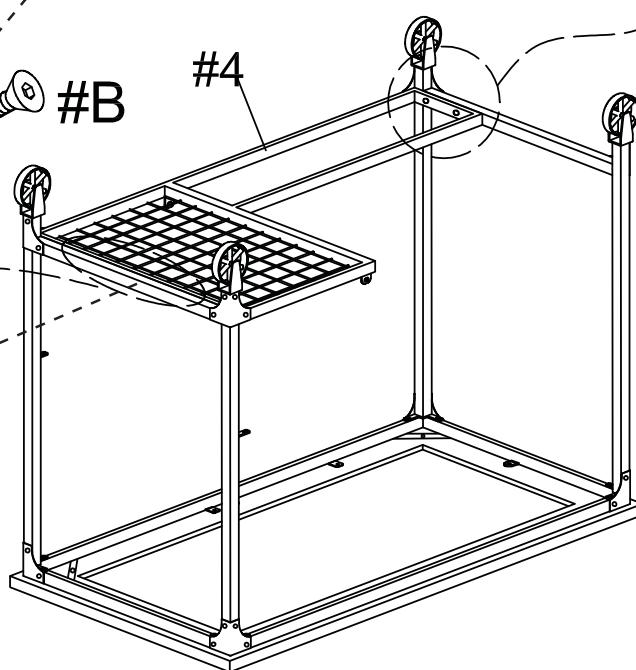




#A x 4pcs

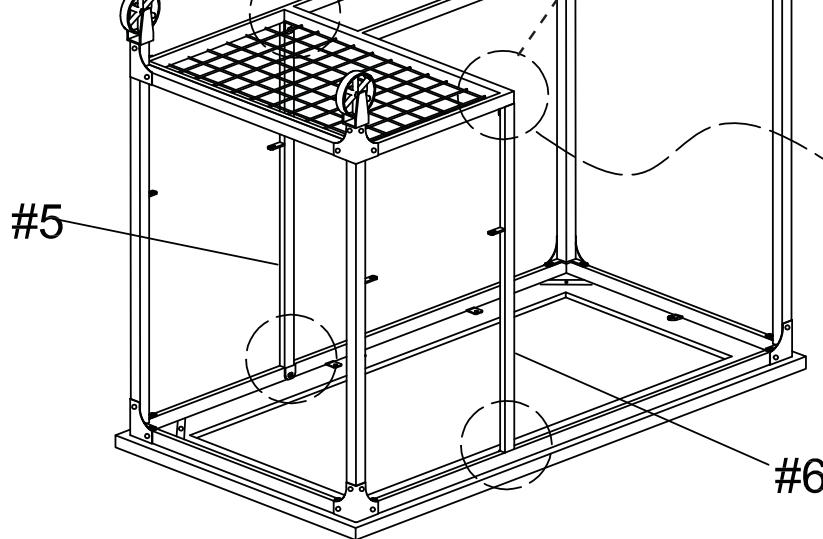

1. Align the back supporter (#5) and front supporter (#6) as shown below.

2. Insert a bolt (#A) into the top and bottom of the supporters. Secure using the Allen wrench.


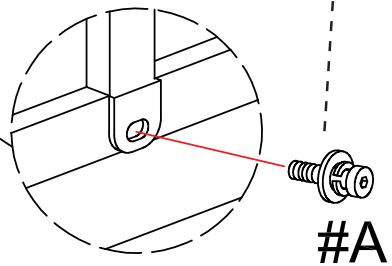


#A x 4pcs

1. Align the shelf (#7) facing down to the holes along the sides of the supporters and leg.

2. Insert a bolt (#A) into each corner and secure using the Allen wrench.

#A

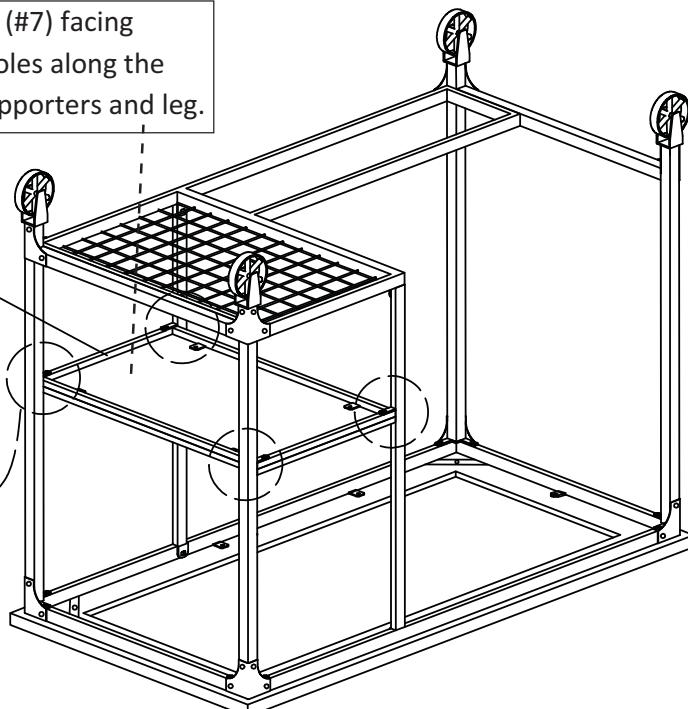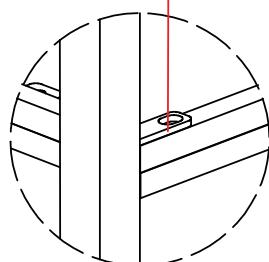

ASSEMBLY IS COMPLETED