

E-Commerce by Enitial Lab

# ASSEMBLY INSTRUCTIONS

MODEL #

## CM-GM367-T

#### **Questions?**

GIVE US CALL: 1-888-980-5122 MON-FRI 8:30AM - 5:30PM (PST)

### **TOOLS REQUIRED**



Allen Wrench



Wrench (Included)



2 - People Recommended

## ASSEMBLY RATING



The Assembly Rating is a 5-point system showing the level of effort needed to assemble a specific product.



#### VERSION # 20-02-24





Thank you for your purchase!

We hope you enjoy this new addition to your home for many years to come.

Our commitment to providing quality products does not simply end when you purchase our product. We fully stand behind our products from start to finish. Our customer service department is available Monday – Friday 8:30 AM – 5:30 PM Pacific and can help with assembly questions as well as, if necessary, replacing damaged or missing parts. To help expedite our service, please have these assembly instructions readily available, along with your order receipt.



# **PRE ASSEMBLY** INTRODUCTION

We understand building ready-to-assemble furniture can be a challenging experience for some. To help avoid confusion, we have provided some helpful tips that may speed up the process.

















Make sure you have enough space to move around during the

**Avoid Scratches** 

Use cardboard, blankets or a carpeted area while assembling furniture to prevent scratches.

#### **Flat Surface**

Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

Teamwork

Suitable Location

Assembling near the area of the intended location is highly recommended.

ALWAYS have at least two people to help with transporting and assembling the product to avoid potential injury and/or damage.

**Sufficient Space** 

assembly.



# ASSEMBLY AND CARE ADVICE



FAILURE TO FOLLOW THE GUIDELINES BELOW MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.



Position each part correctly and insert screws or bolts into their respective holes.



Use the appropriate hand tools or power tools for assembly. Select steps, such as tightening screws and/or bolts, may require hand tools to avoid causing damage during assembly.



Turn clockwise to tighten and only tighten when step is completed or when instructed to do so.



Save the instructions and store any supplied tools for later maintenance.

After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.

# GAME TABLE

### CM-GM367-T



 Check the quantity and irregularity of parts and hardware before you start.



PARTS **#1** 1pc )1pc 4)4pcs **)**1pc Left Panel **Right Panel** Table Top Leg **#5** 2pcs **#6** 1pc #7)2pcs Game Top Support Pedestal Crossbar

# GAME TABLE

### CM-GM367-T



# CM-GM367T Points 2 cartons

Carton	Designation		Part	Hardware
CM-GM367T-1	Left Panel	#1		#A ⊚ 28pcs #B ⊙ 28pcs #C � 8pcs
	Right Panel	#2		#D >> 1pc #E @ 20pcs #F => 1pc
	Table Top	#3		#G 💮 8pcs
	Leg	#4		
	Crossbar	#6		
	Game Top Support	#7		
CM-GM367T-2	Pedestal	#5		

Exploded view





Unscrew bolts (#C) to detach game top support (#7) from table top (#3).





Align the crossbar (#6) to the holes of the pedestals.





Prepare 8 bolts assembly by inserting lock washer (#B), then flat washer (#A) onto bolts(#C). Align the game top support (#7) to the holes of the table top (#3). Secure with bolts (#C).







10

