
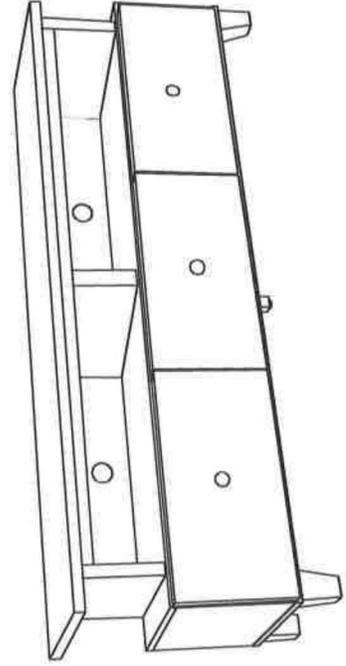


ASSEMBLY INSTRUCTIONS

STEP 1 : Open The door and take out the Bunfoot carton (B). Assemble the Bun Foot (B) with JCBC Bolt (1), Spring washer (2), Flatwasher (3) and securing with Allen Key (4) as shown.

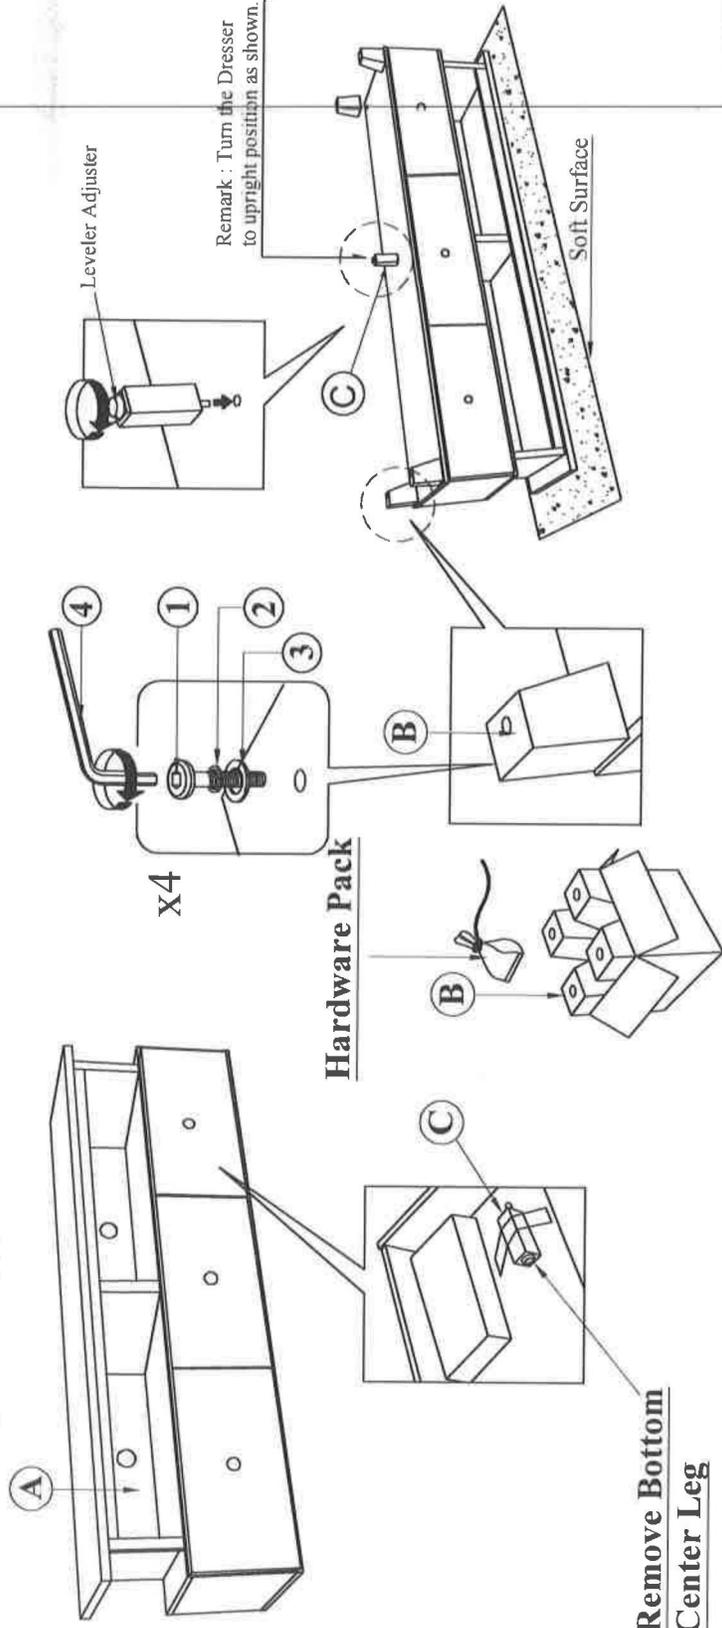

COMPLETED ASSEMBLY

CROWNMARK MODEL : 4811-9 TV STAND			
(BOX 1) BOX OF TV STAND			
NO	ITEM	QTY	
A	TV STAND 	1 pc	
B	BUN FOOT 	4 pcs	
C	BOTTOM CENTER LEG 	1 pc	

(BOX 1) HARDWARE LIST			
NO	ITEM	QTY	
1	JCBC Bolt max:50mm Blk 	4 pcs	
2	Spring Washer 1/4" Blk 	4 pcs	
3	Flat Washer 1/4"IDx13mmOD Blk 	4 pcs	
4	Allen Key max:110mm With Ball Blk 	1 pc	

NOTE : MUST TIGHTEN SCREWS PERIODICALLY WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.