

# UTTERMOST

## ASSEMBLY INSTRUCTIONS

THANK YOU FOR PURCHASING THIS FLOOR LAMP.  
PLEASE FOLLOW THE INSTRUCTIONS LISTED BELOW:


**MODEL NUMBER: 30477**

1. UNPACK ALL PARTS FROM CARTON CAREFULLY.
2. PLACE THE BODY ASSEMBLY (A) ONTO THE BASE (B) PROPERLY.
3. PLACE THE WASHER (C) AND NUT (D) UNDER THE BASE (B) PROPERLY AND TIGHTEN THEM WITH SPANNER (E)
4. PLACE THE SHADE (G) UNDER THE SOCKET (F) AND SECURE WITH RING (H).
5. THREAD THE BULB (NOT INCLUDED) INTO THE SOCKET (F).
6. THE ASSEMBLY IS COMPLETE.

### IMPORTANT SAFETY INSTRUCTION:

THIS PORTABLE LAMP HAS A POLARIZED PLUG (ONE BLADE IS WIDER THAN THE OTHER) AS A SAFETY FEATURE TO REDUCE RISK OF ELECTRIC SHOCK. THIS PLUG WILL FIT IN A POLARIZED OUTLET ONLY ONE WAY. IF IT DOES NOT FIT, REVERSE THE PLUG. IF IT STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN.

NEVER USE WITH AN EXTENSION CORD UNLESS PLUG CAN BE FULLY INSERTED.  
DO NOT ALTER THE PLUG.

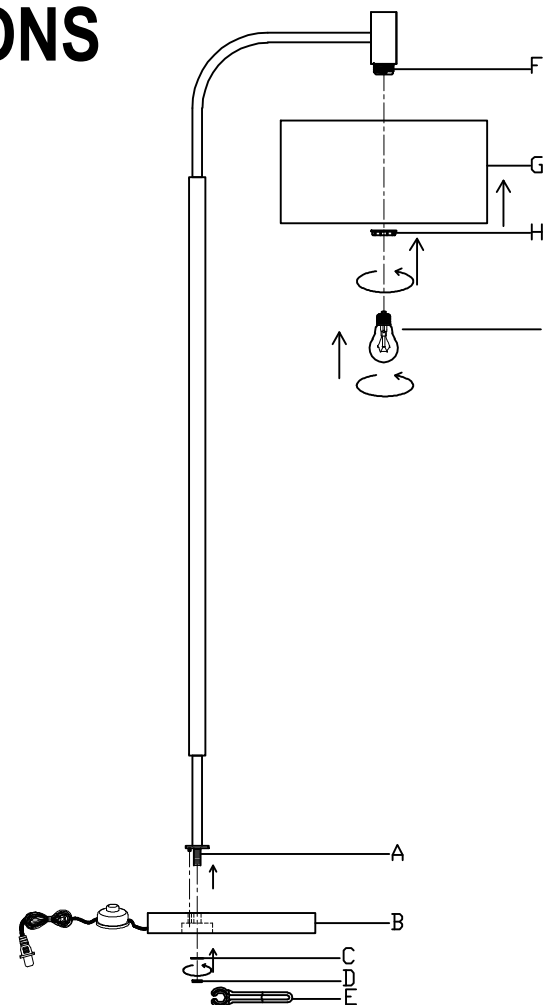

**P.O. Box 558 | 3325 Grassy Hill Road | Rocky Mount, VA | 24151**  
**[www.uttermost.com](http://www.uttermost.com)**