



ASSEMBLY INSTRUCTIONS

COASTER FINE FURNITURE



Fine Furniture for every stage of life

509971
Sofa

ITEM: **509971**

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

 


ASSEMBLY TIME

5 MINUTES


PARTS IDENTIFICATION

A SEAT




1PC

 B LEFT ARM




1PC

 C RIGHT ARM



1PC

 D BACK



1PC

E CROSSBAR



1PC

F LEG



4PCS

HARDWARE IDENTIFICATION

1 PAN HEAD SCREW
(#4" x 30mm - RBW)



2PCS

2 FLAT WASHER
(Ø1/4" x 16mm x 1.5mm - BLK)



2PCS

 
NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


ITEM: **509971**
ASSEMBLY INSTRUCTIONS




STEP 1

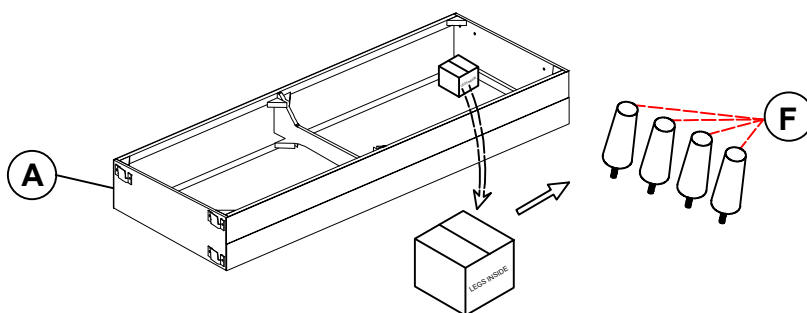


 
STEP 2

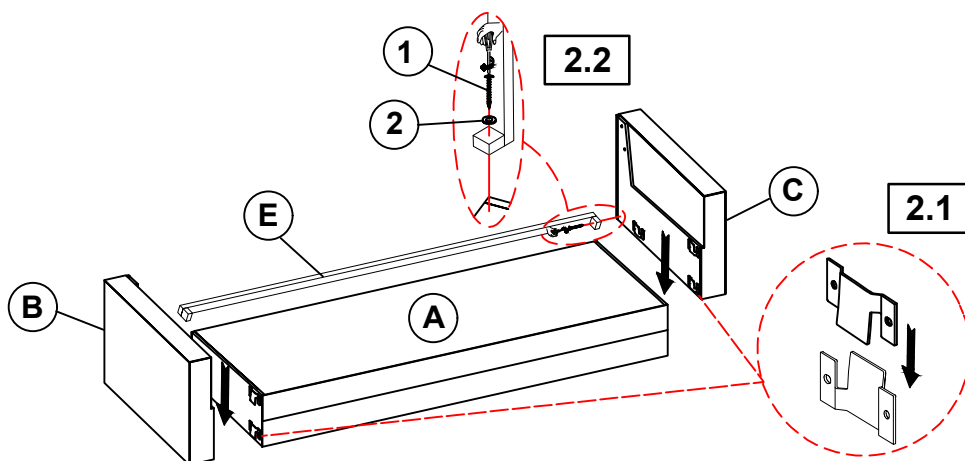

 
STEP 3

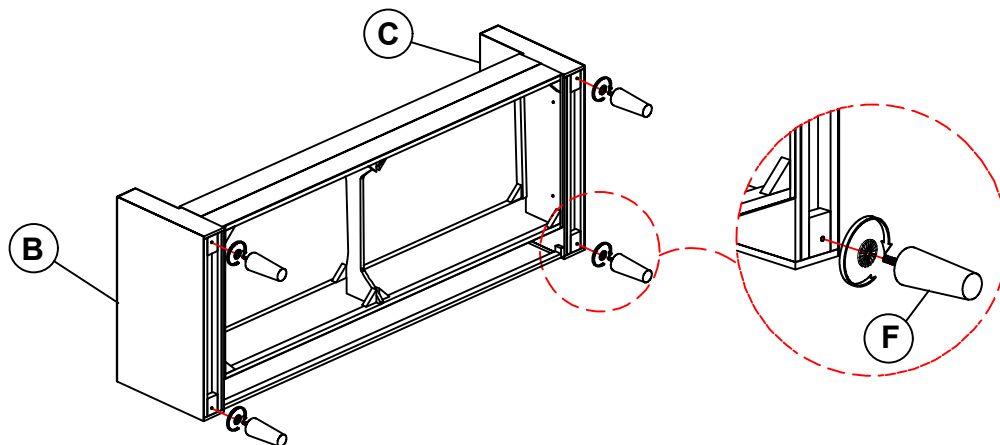

  STEP 4
COMPLETE

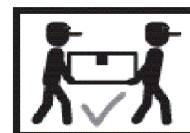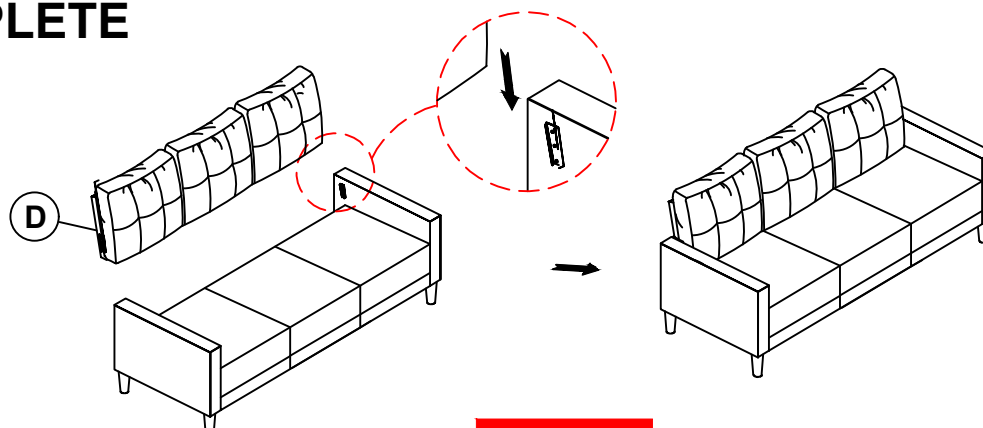

ITEM: 509971

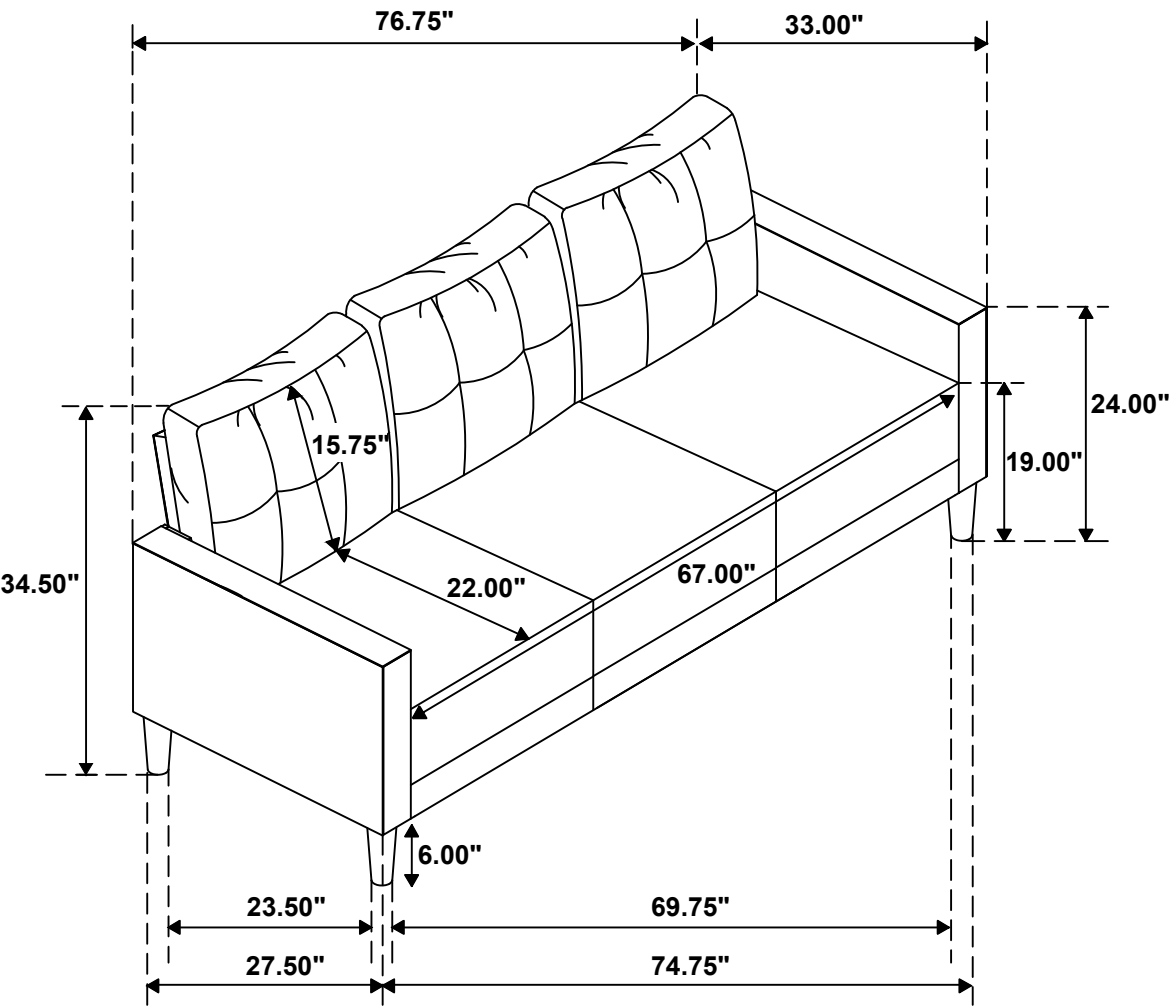 

Note: Dimension tolerance $\pm 5\%$



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

509972
Loveseat

ITEM: **509972**

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

 


ASSEMBLY TIME

5 MINUTES


PARTS IDENTIFICATION

A SEAT




1PC

 B LEFT ARM




1PC

 C RIGHT ARM




1PC

 D BACK



1PC

 E CROSSBAR



1PC

F LEG



4PCS

HARDWARE IDENTIFICATION

1 PAN HEAD SCREW
(#4" x 30mm - RBW)



2PCS

2 FLAT WASHER
(Ø1/4" x 16mm x 1.5mm - BLK)



2PCS

 
NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


ITEM: **509972**
ASSEMBLY INSTRUCTIONS




STEP 1

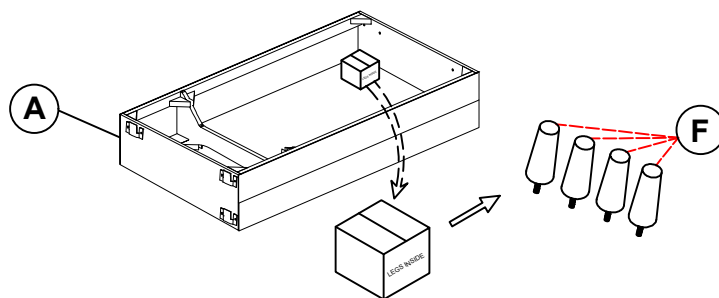


 
STEP 2

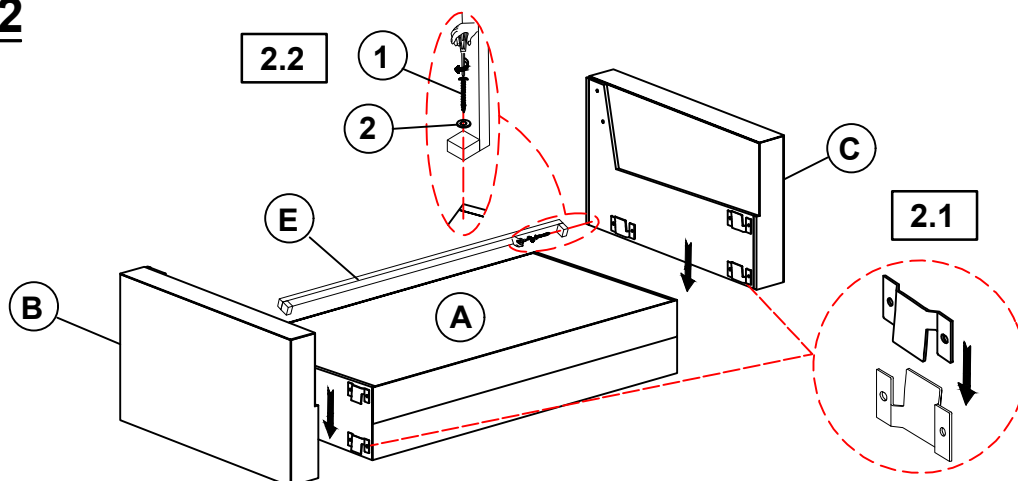

 
STEP 3

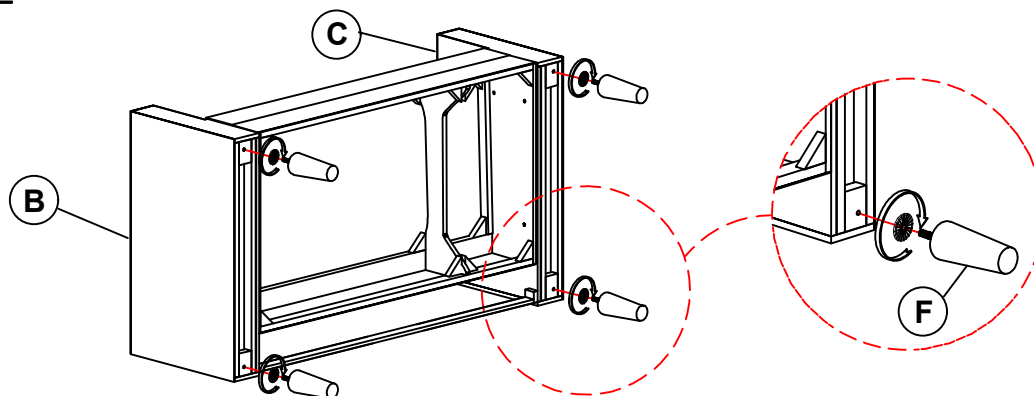

  STEP 4
COMPLETE

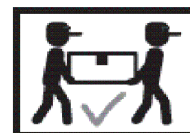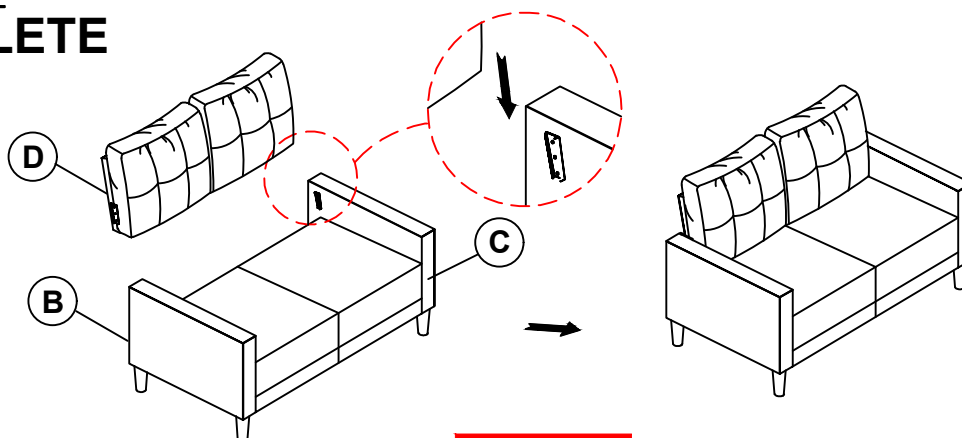

ITEM: 509972

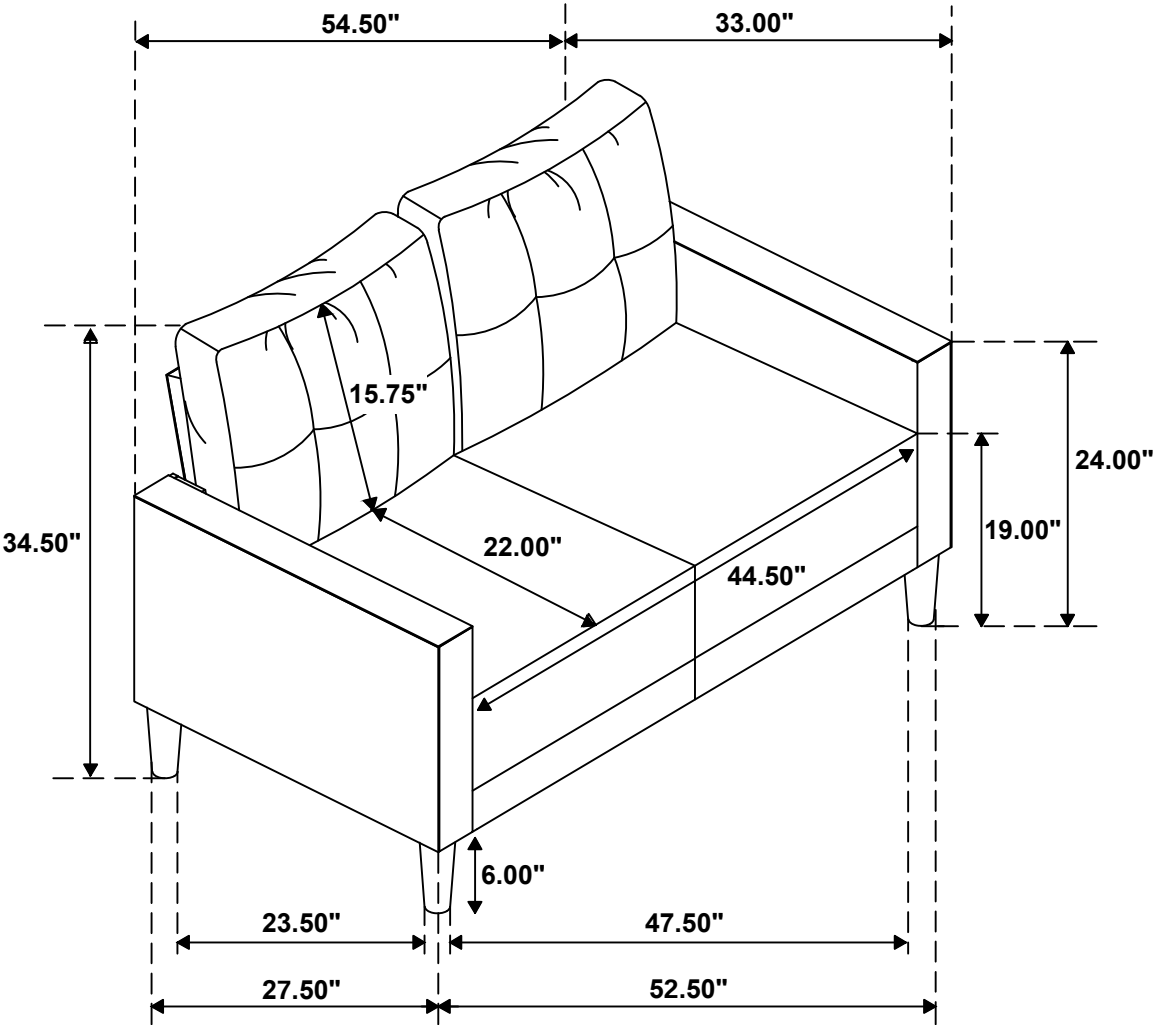 

Note: Dimension tolerance $\pm 5\%$



ASSEMBLY INSTRUCTIONS

COASTER FINE FURNITURE



Fine Furniture for every stage of life

509973
Chair

ITEM: **509973**

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

5 MINUTES

PARTS IDENTIFICATION

A SEAT



 
1PC

B LEFT ARM



1PC

C RIGHT ARM



1PC

D BACK



1PC

E CROSSBAR



1PC

F LEG



4PCS

HARDWARE IDENTIFICATION

1 PAN HEAD SCREW
(#4" x 30mm - RBW)



2PCS

2 FLAT WASHER
(Ø1/4" x 16mm x 1.5mm - BLK)



2PCS

NOTE:

 
Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: 509973


ASSEMBLY INSTRUCTIONS




STEP 1

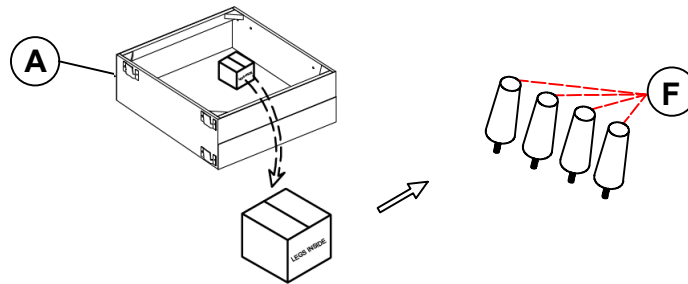


 
STEP 2

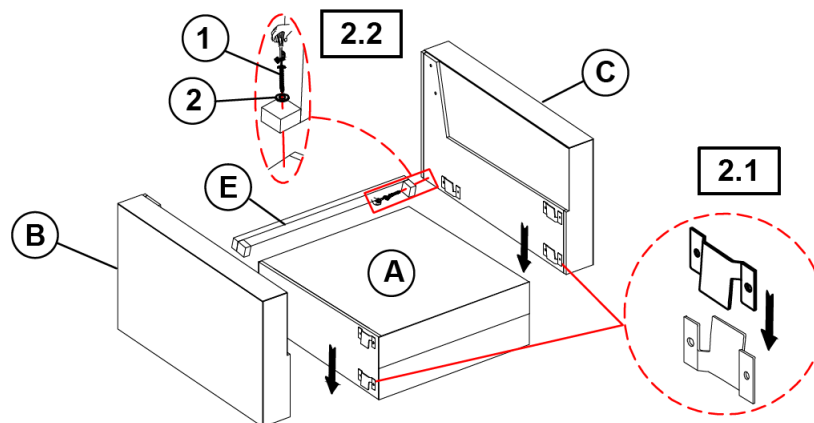

 
STEP 3

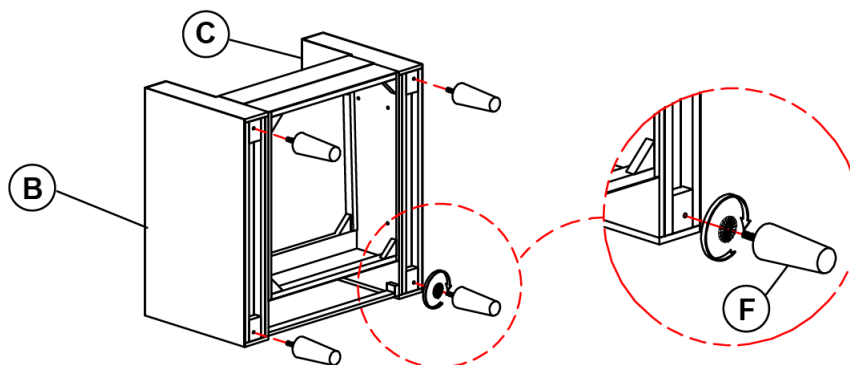

  STEP 4 **COMPLETE**

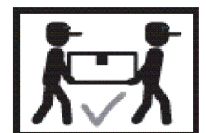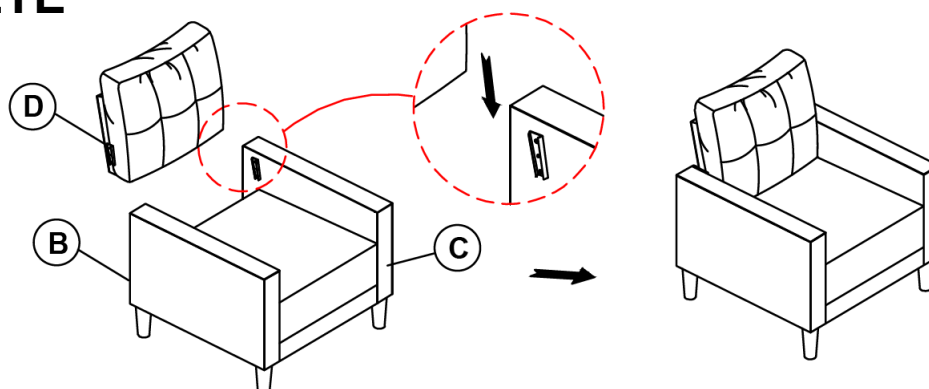

ITEM: 509973

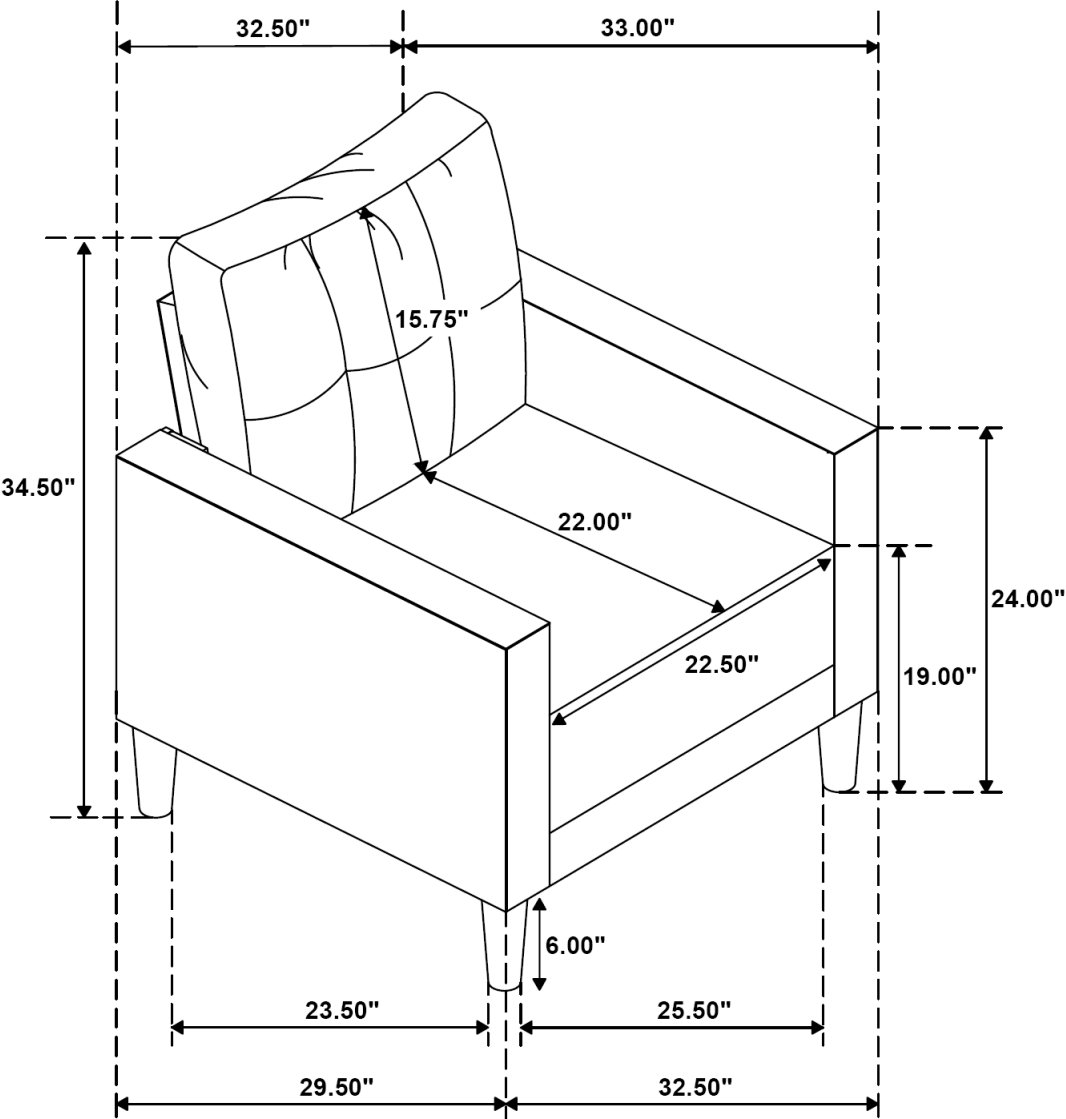 

Note: Dimension tolerance $\pm 5\%$