

Assembly instructions DRESSER JL300DR


Caution: Please read instructions thoroughly before unpacking assembly parts. Sharp, exposed staple tips can cause injury, therefore, for your protection, please remove any exposed staples used in packing.

1. We recommend that you should assemble this product with the assistance of another person; this will make assembly easier, and will help to eliminate damage to the product or injury to persons during assembly.
2. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.
3. Please do not over tighten screws or bolts.
4. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

PART LIST FOR DRESSER			
NO.	PART DESC	CODE	Q'TY
A	DRESSER		1
B	DRESSER LEG	PJL300CGLEG	4
C	DRESSER SUPPORT LEG	PJL300DRSPL	1

HARDWARE LIST				
NO.		HARDWARE DESC	CODE	Q'TY
1		TIPPING RESTRAINT	PJL300DRATK	1
2		FLAT WASHER (Ø5/16")	PJL300DRHW	4
3		SPRING WASHER (Ø5/16")		4
4		BOLT (Ø5/16"X60MM)		4
5		ALLEN KEY M4		1

Step 1

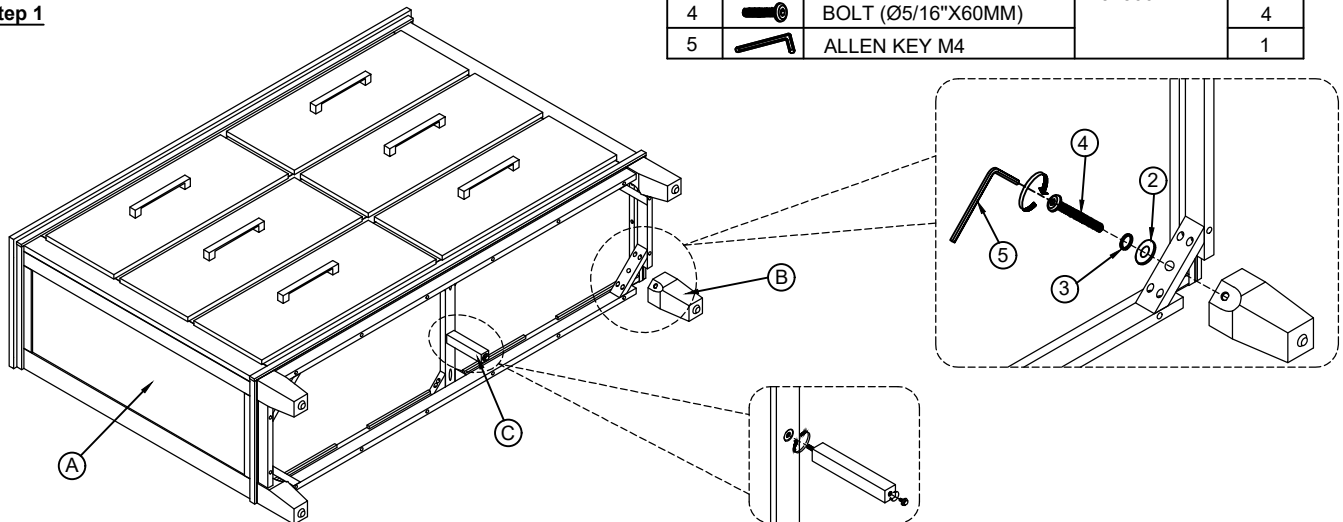

Step 2

