



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

193610(B1&B2) Dining Table

ITEM: 193610(B1&B2)

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



 
ASSEMBLY TIME

20 MINUTES

PARTS IDENTIFICATION

B1 (BOX 1)


A TOP



1PC

B2 (BOX 2)

 B LEG FRAME



3PCS

C LEG FRAME SUPPORT

 


3PCS

HARDWARE IDENTIFICATION


Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 193610(B1)

1 BOLT WITH BIG WASHER
(M6 x 50mm - BLK)



12PCS

 2 BOLT WITH SMALL WASHER
(M4 x 50mm - BLK)



6PCS

3 ALLEN WRENCH
(M4 x 55mm - GD)



1PC


NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


ITEM: 193610(B1&B2)

ASSEMBLY INSTRUCTIONS

STEP 1

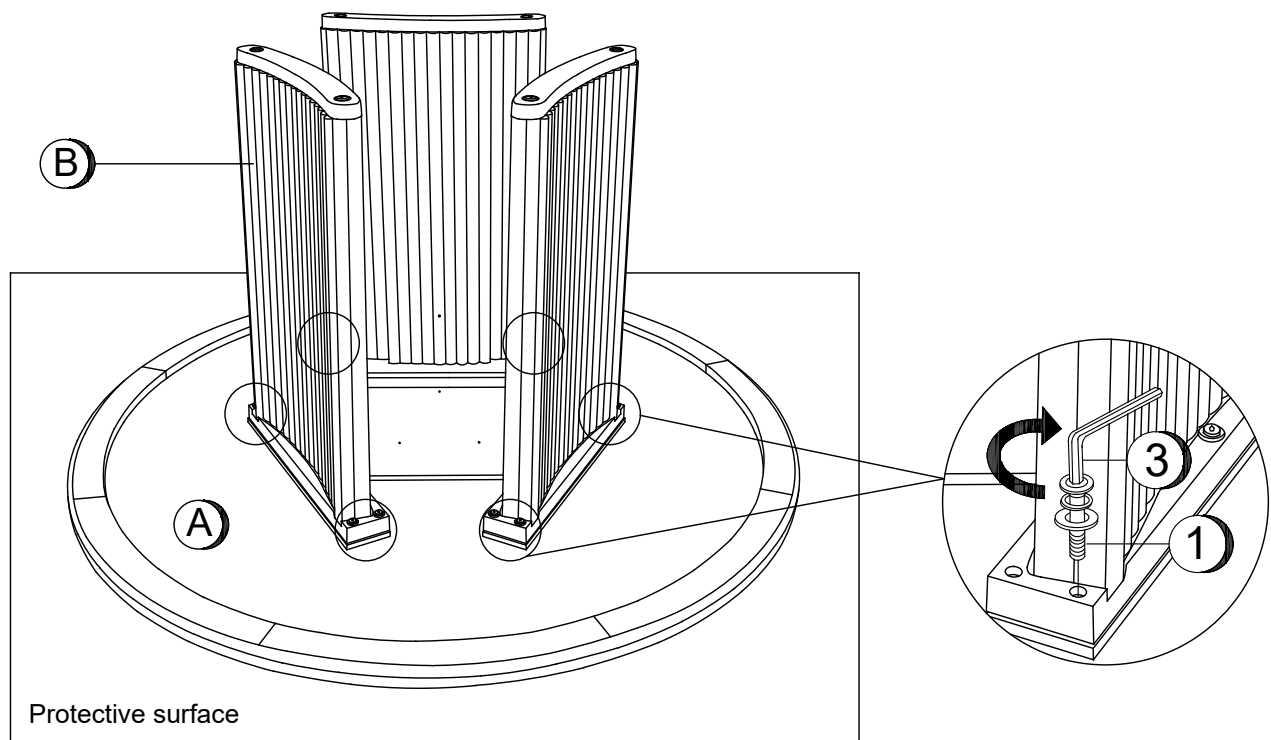


STEP 2

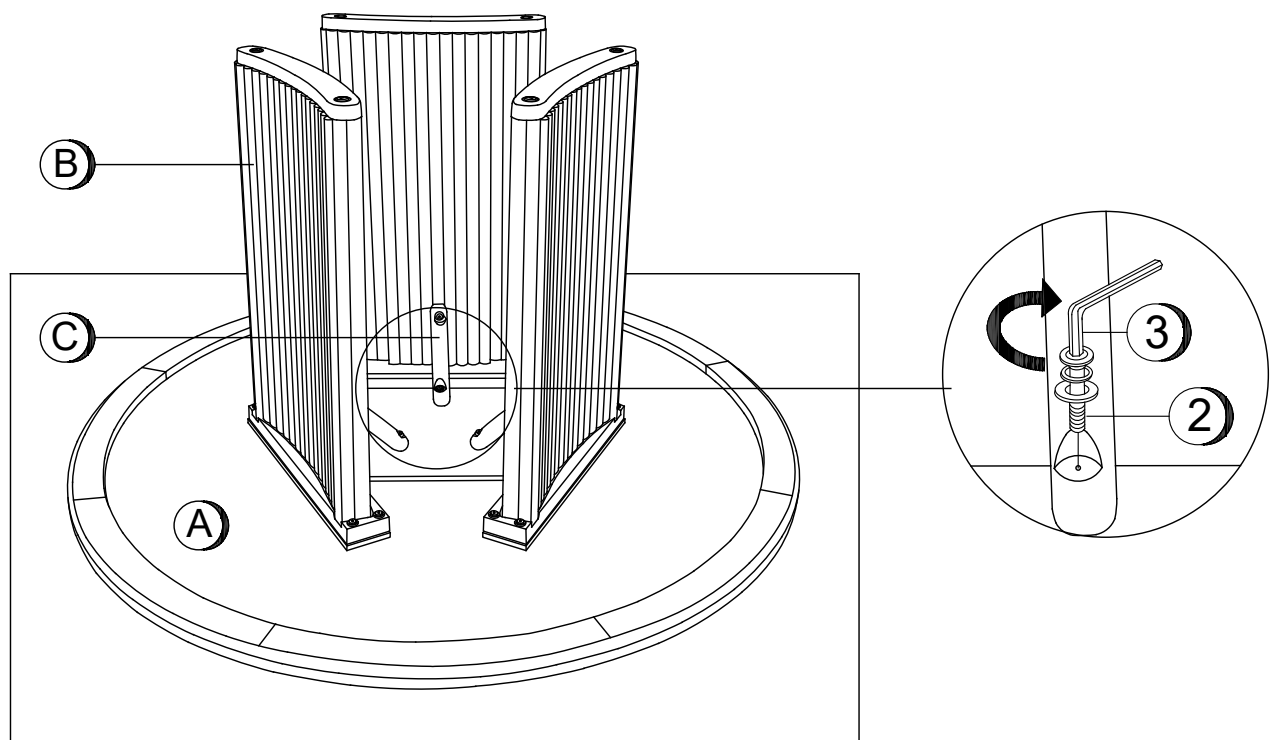


ITEM: **193610(B1&B2)**

ASSEMBLY INSTRUCTIONS


STEP 3

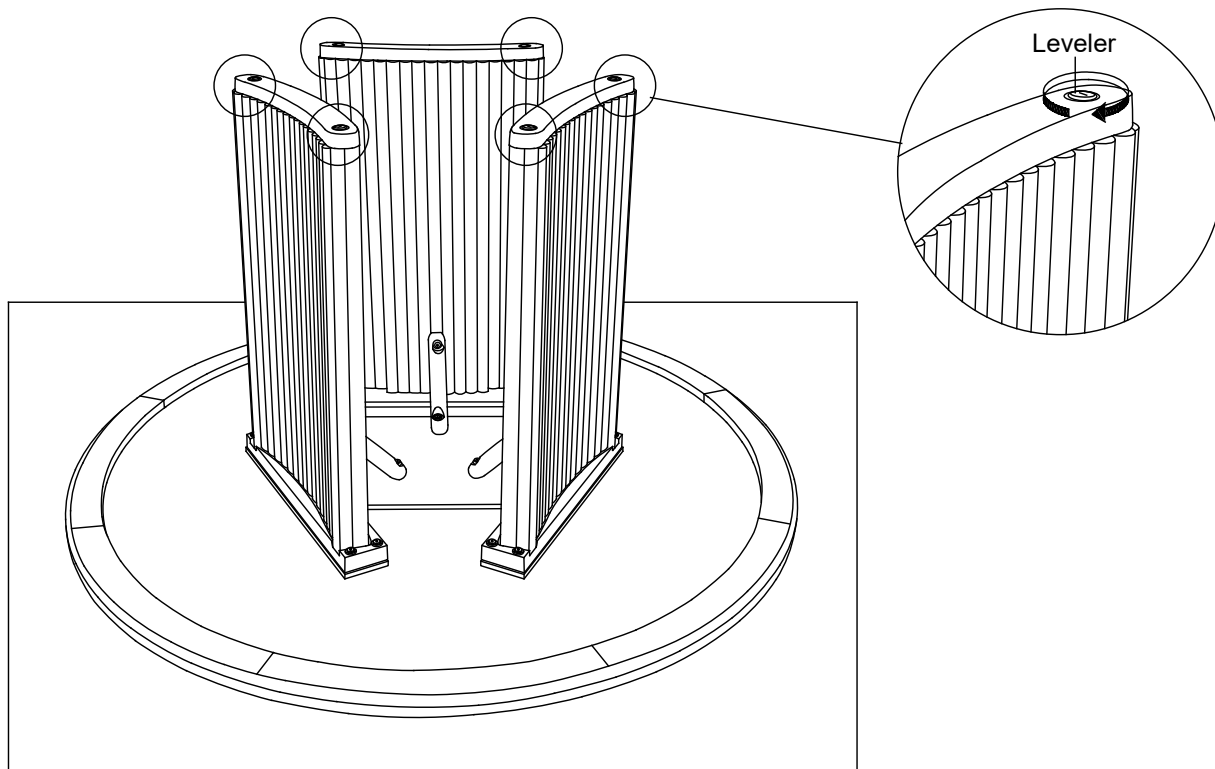

STEP 4 COMPLETE

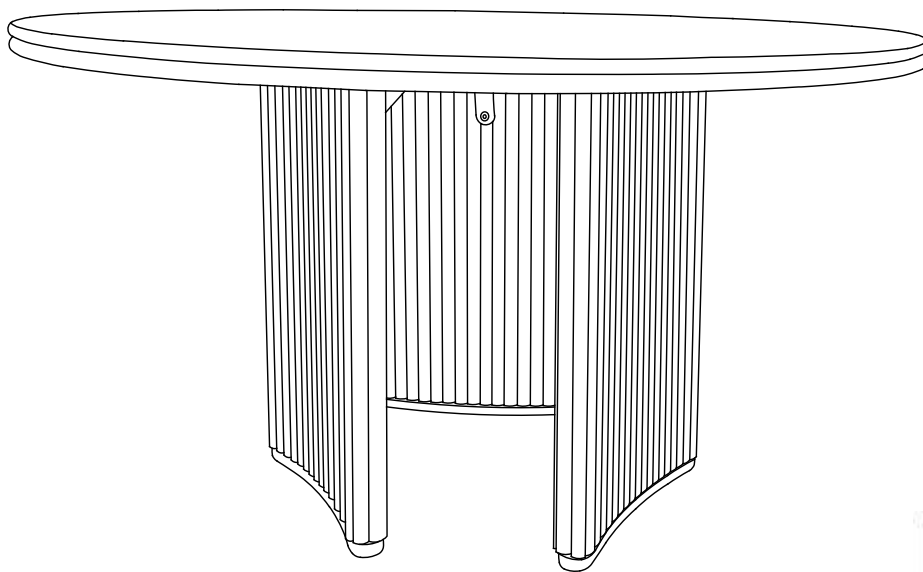

ITEM: **193610(B1&B2)**

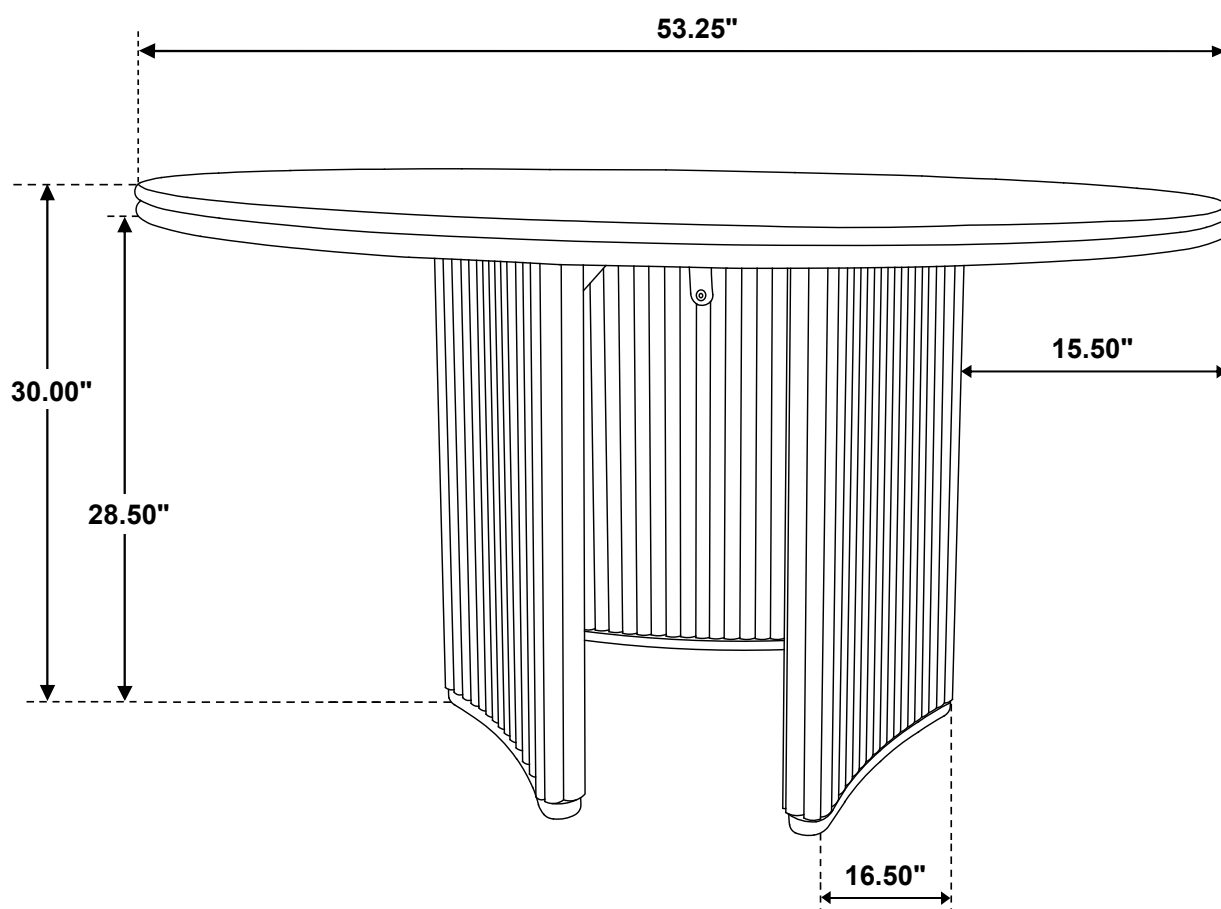

Note: Dimension tolerance $\pm 5\%$