

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

706222 *TV STAND*

REVISION 0 : 11/28/2024 REVISION 1 : 03/11/2025

PAGE 1 OF 18

COASTERFURNITURE.COM

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.

2. Please check to see that all hardware and parts are present prior to start of assembly.

3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately. 2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

60 MINUTES

MAX TV SIZE: 65"


PARTS IDENTIFICATION

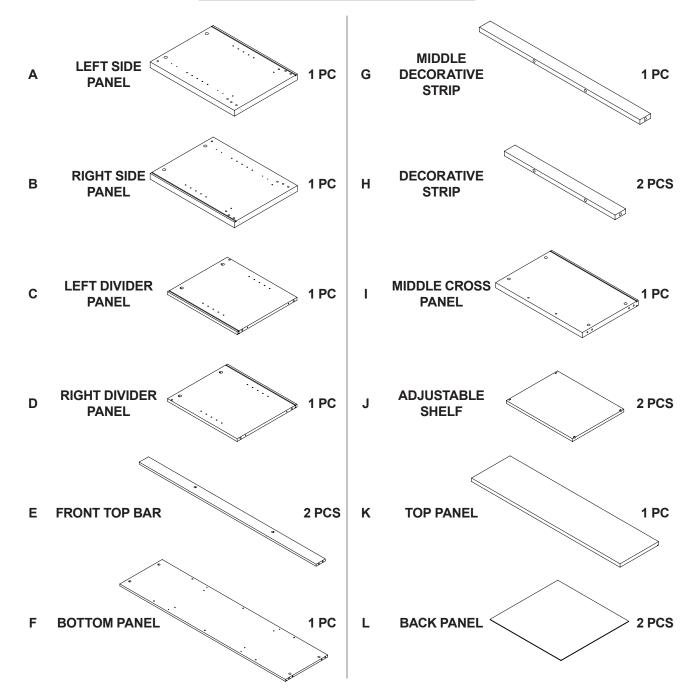

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.



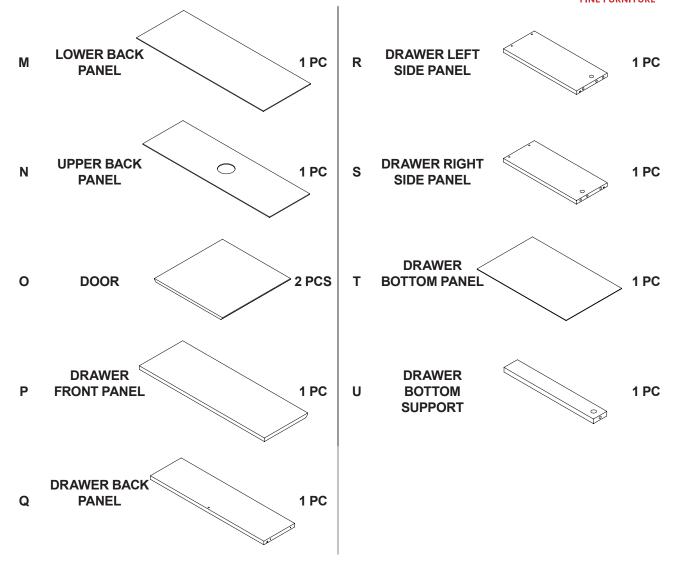



HARDWARE IDENTIFICATION


Z							
NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 40g		1 PC	9	GLIDES L = 350mm BLK	CL CR THE TOTAL OF	1 SET
2	WOODEN DOWEL Ø8 x 30mm		50 PCS	10	GLIDES SCREW Ø 3x12mm BLK		12 PCS
3	CAM BOLT Ø7 x 35.5mm SR		23 PCS	11	HINGE Ø35mm SR		4 PCS
4	CAM LOCK Ø15 x 12mm SR		23 PCS	12	HINGE SCREW Ø4 x 15mm SR		16 PCS
5	LONG SCREW Ø 4.5x42mm SR	attitutu M	4 PCS	13	PLASTIC COVER Ø 52mm		1 PC
6	SCREW Ø 4.3x35mm SR	ATTITUTE OF	5 PCS	14	BACK PANEL SUPPORT		6 PCS
7	PLASTIC FEET Ø15m		6 PCS	15	BACK PANEL SUPPORT SCREW Ø3 x 19mm SR		6 PCS
8	PIN FOR ADJUSTABLE SHELF Ø4.9x8mm SR		8 PCS	16	STICKER Ø20mm		4 PCS


Z9, Z11, Z13 not included in blister packaging.


NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


ITEM: 706222 STEP 1 The furniture The furniture

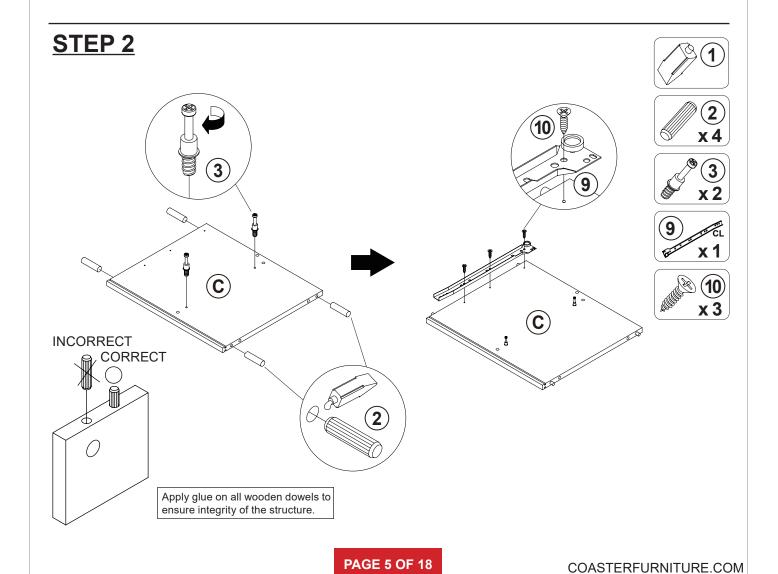

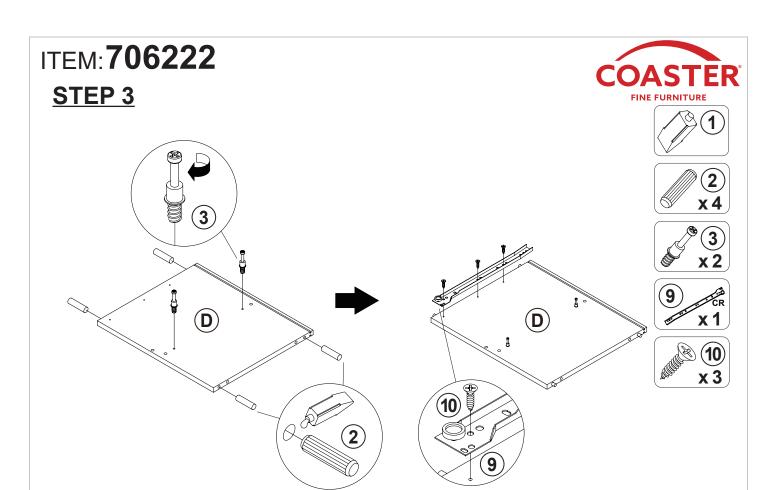

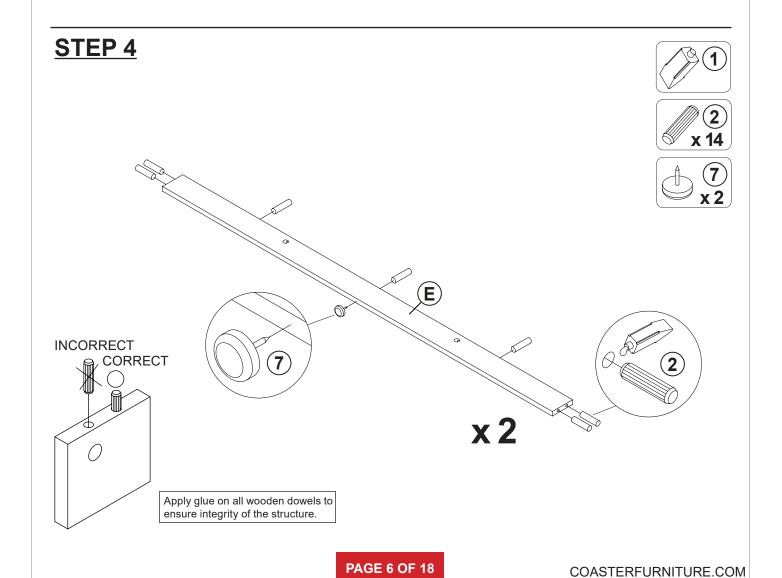


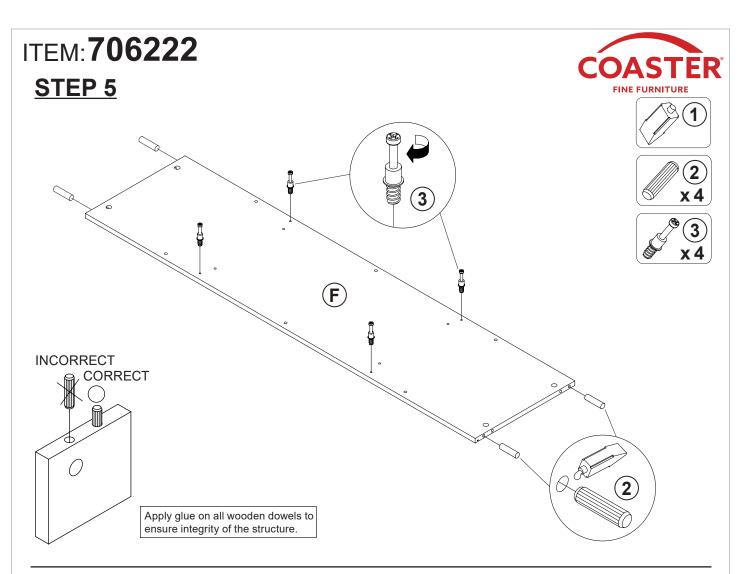

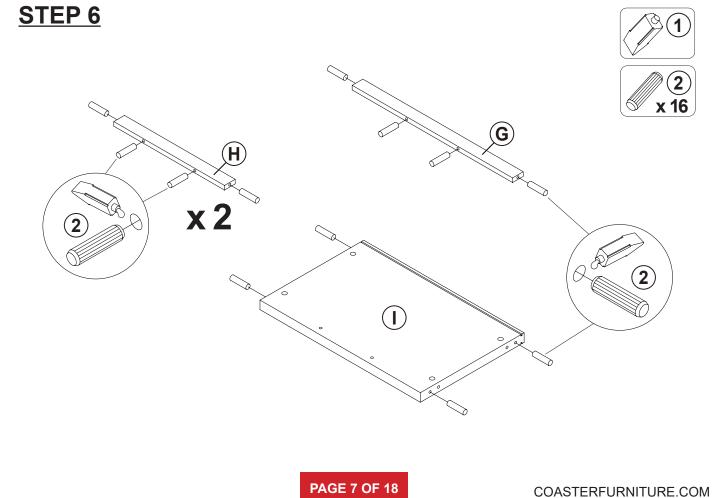







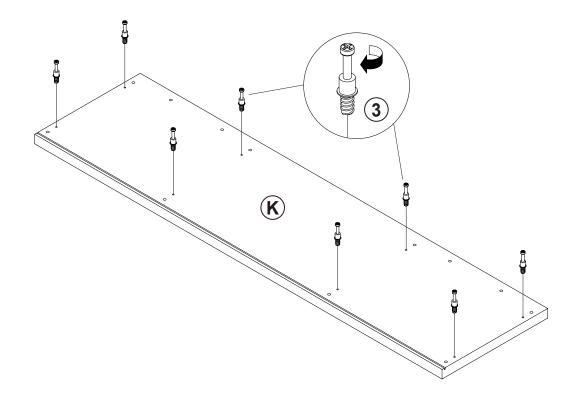




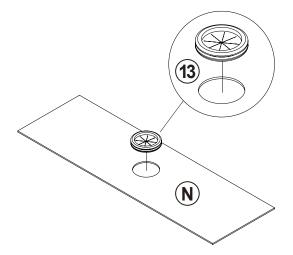




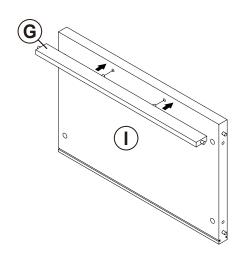


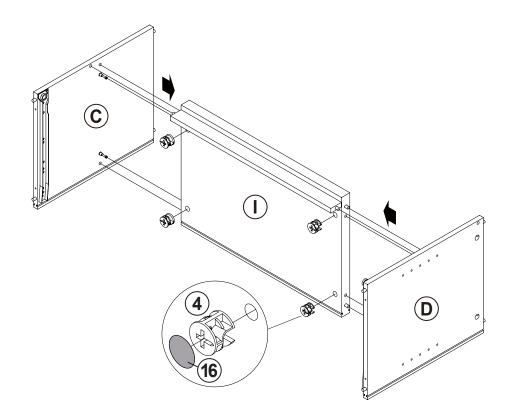








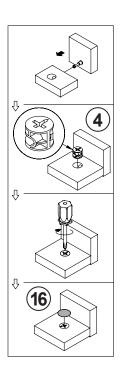

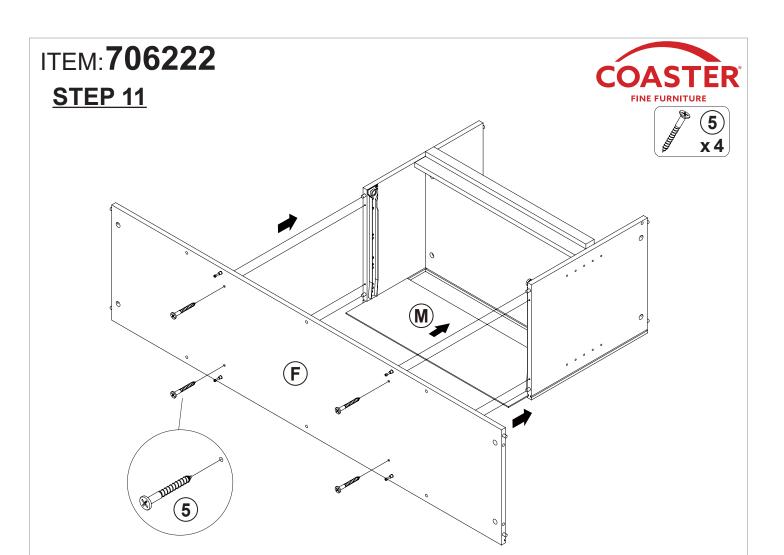

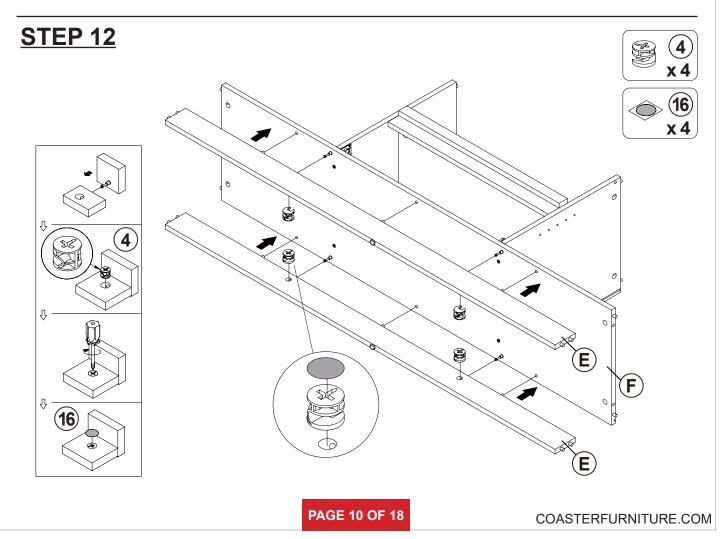

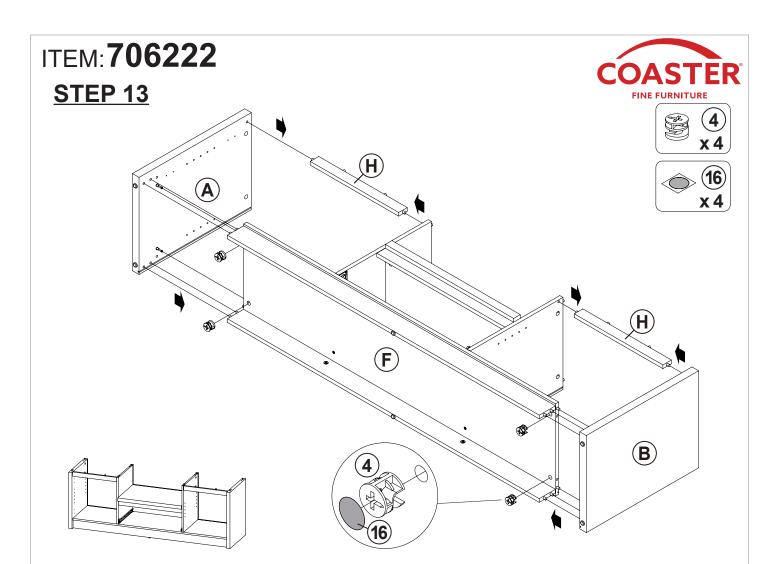


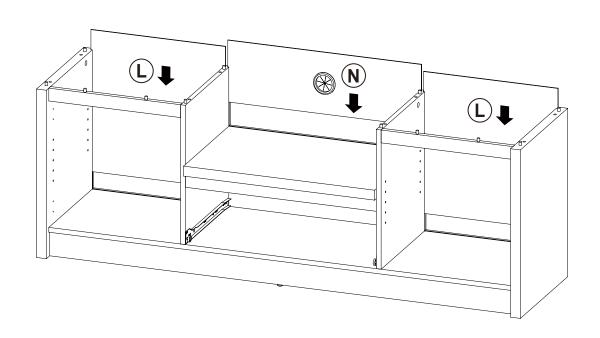









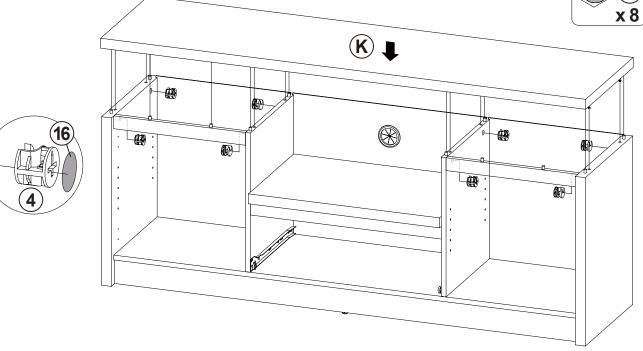



 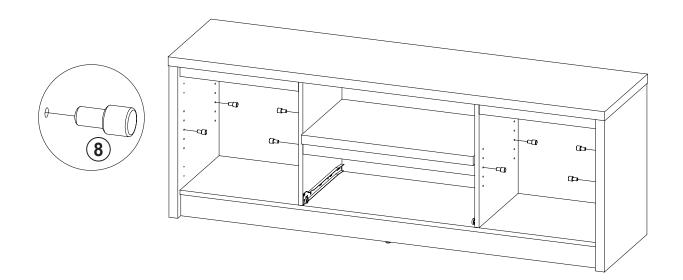




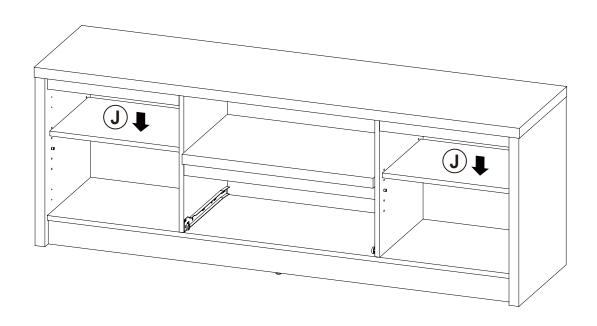







HORIZONTAL BY SCREW AADJUSTMENT





LATERAL BY SCREW B ADJUSTMENT




VERTICAL BY SCREW C ADJUSTMENT



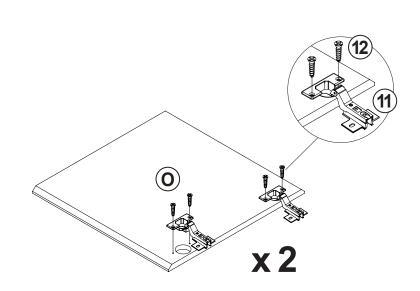

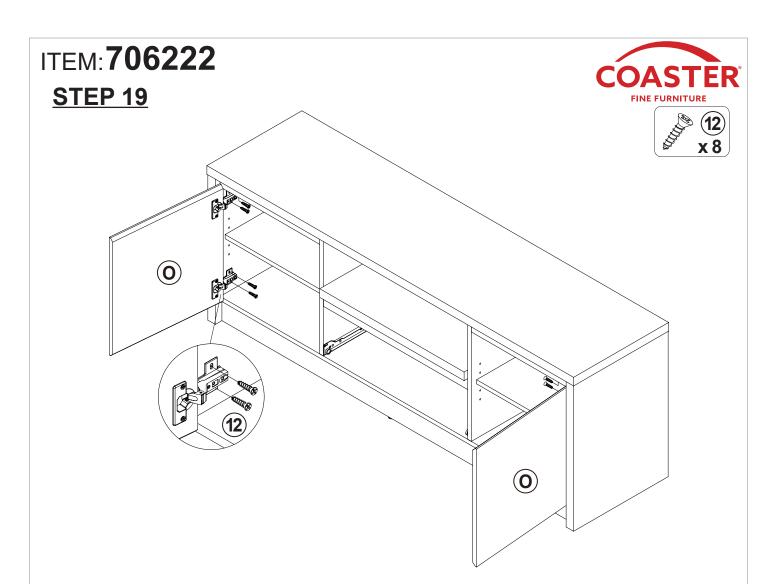


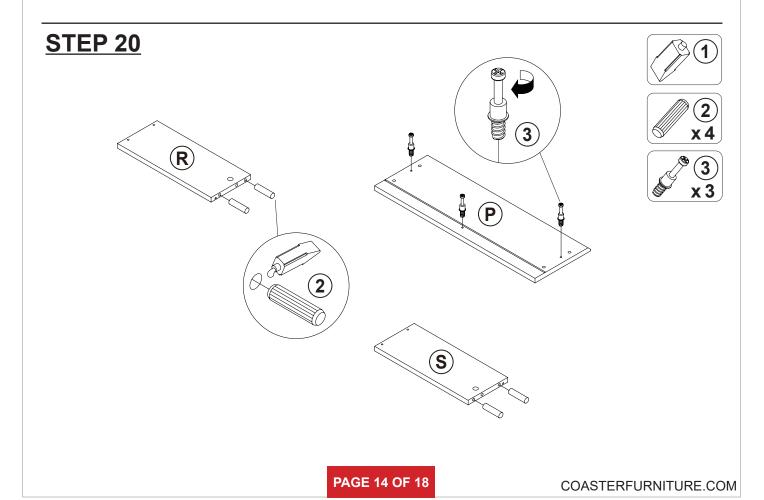

STEP 21-1






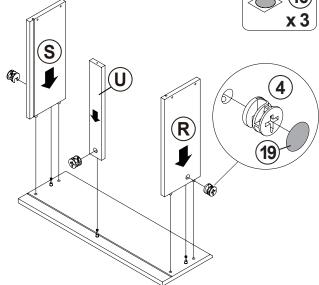


STEP 21-2



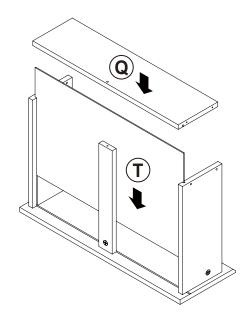

STEP 21-3




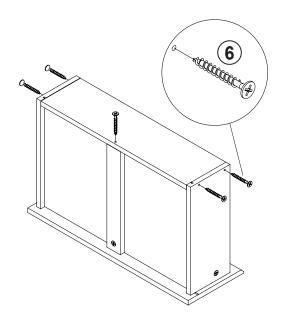


STEP 21-4






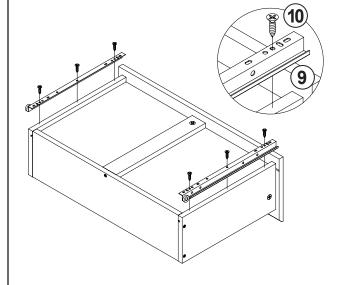



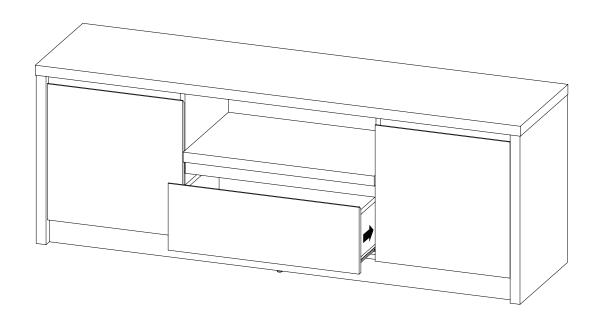


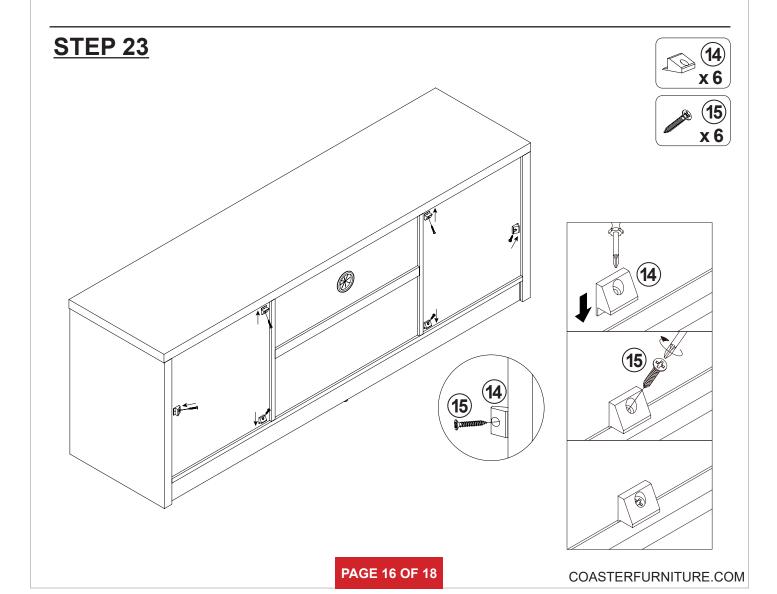

STEP 24

COMPLETE




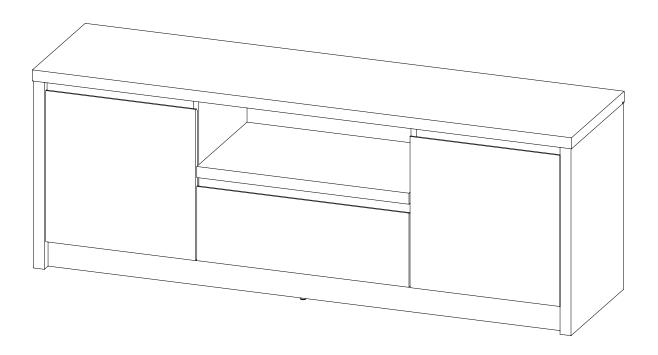








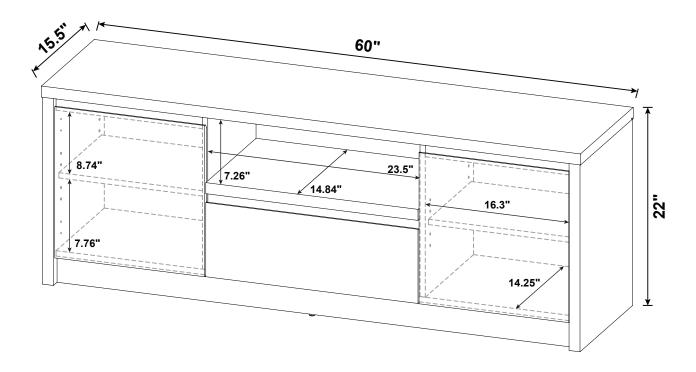

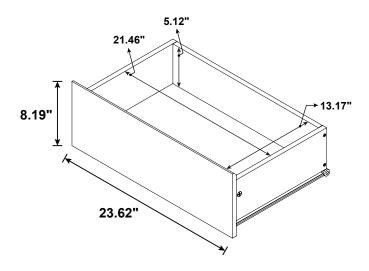

Note: Dimension tolerance ±5%



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

706224 *MEDIA TOWER*

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.

2. Please check to see that all hardware and parts are present prior to start of assembly.

3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

WARNING!


1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately. 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

60 MINUTES

PARTS IDENTIFICATION

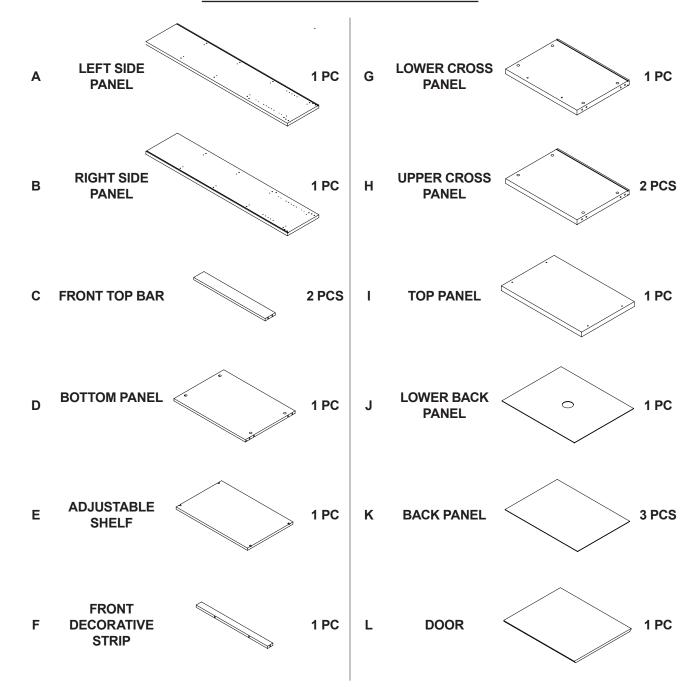

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.




HARDWARE IDENTIFICATION


Z NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 40g		1 PC	8	HINGE Ø35mm SR		2 PCS
2	WOODEN DOWEL Ø8 x 30mm		32 PCS	9	HINGE SCREW Ø4 x 15mm SR		8 PCS
3	CAM BOLT Ø7 x 35.5mm SR		16 PCS	10	BACK PANEL SUPPORT		6 PCS
4	CAM LOCK Ø15 x 12mm SR		16 PCS	11	BACK PANEL SUPPORT SCREW Ø3 x 19mm SR		6 PCS
5	BOLT Ø9.5x55mm SR		4 PCS	12	PLASTIC COVER Ø 52mm		1 PC
6	PLASTIC FEET Ø15m		4 PCS	13	STICKER Ø20mm		3 PCS
7	PIN FOR ADJUSTABLE SHELF Ø4.9x8mm SR		4 PCS				


Z8, Z12 not included in blister packaging.


NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

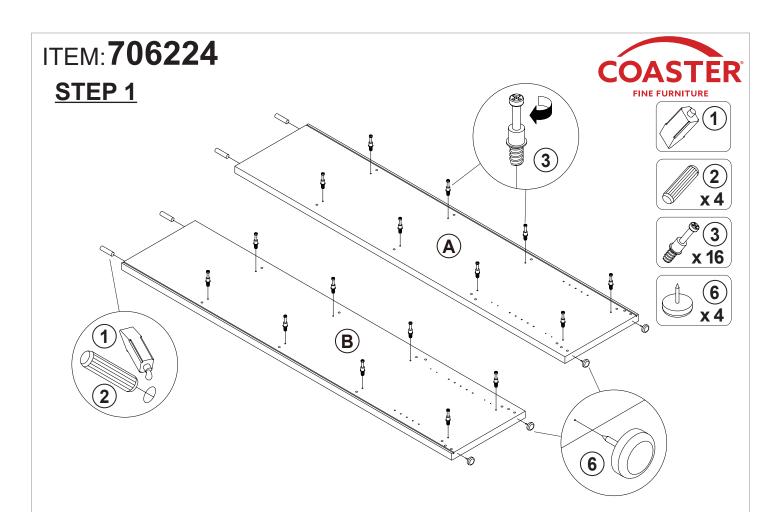

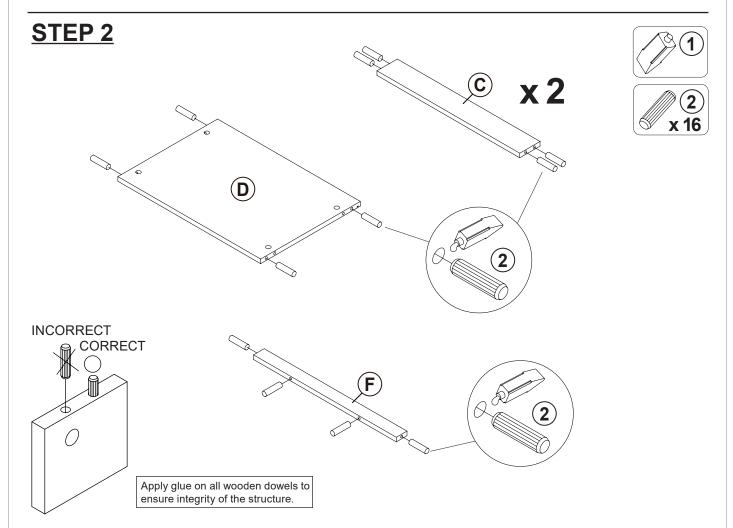

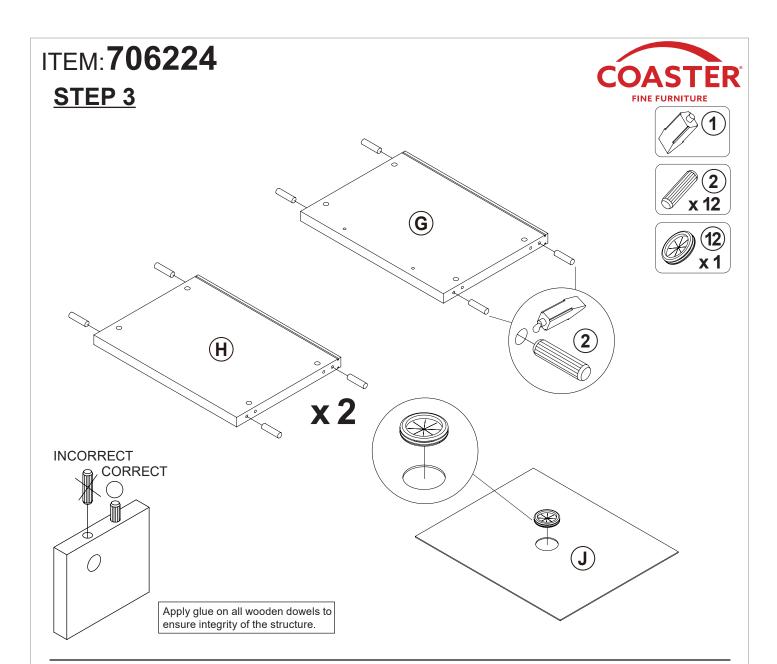


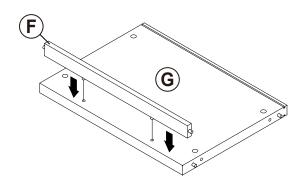









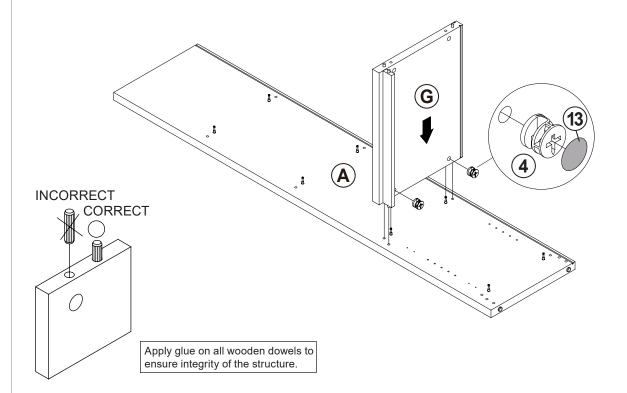


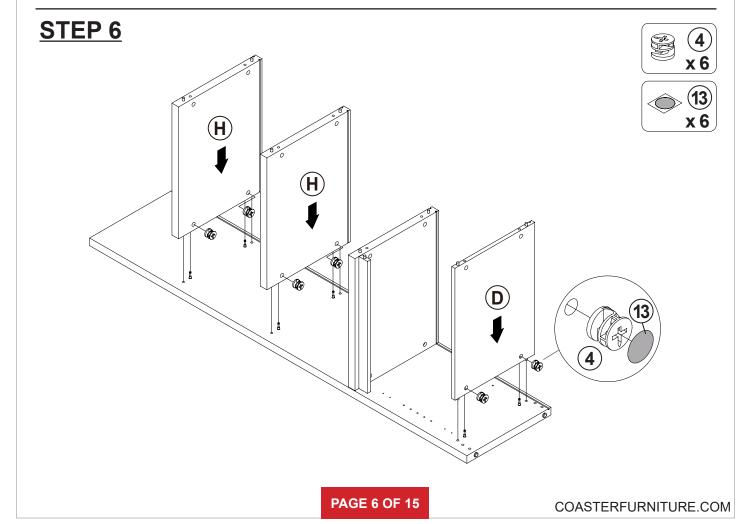



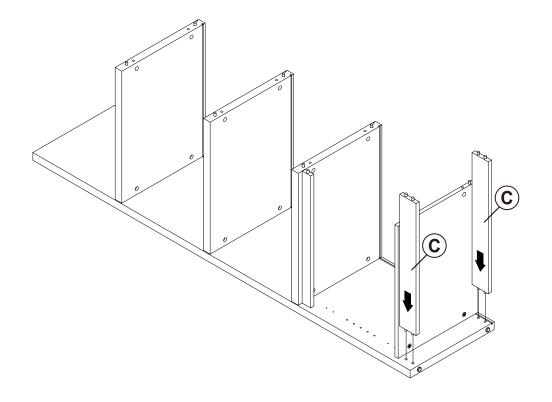



STEP 8

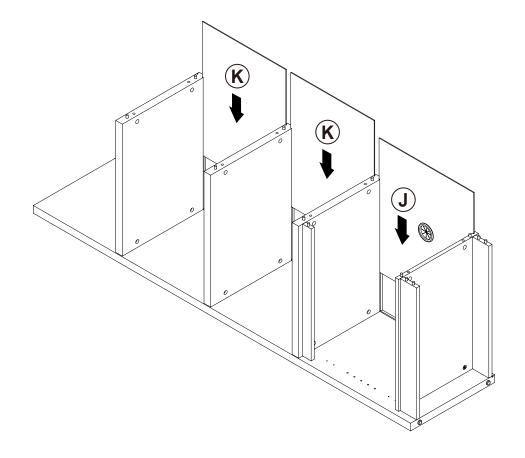


PAGE 7 OF 15

COASTERFURNITURE.COM

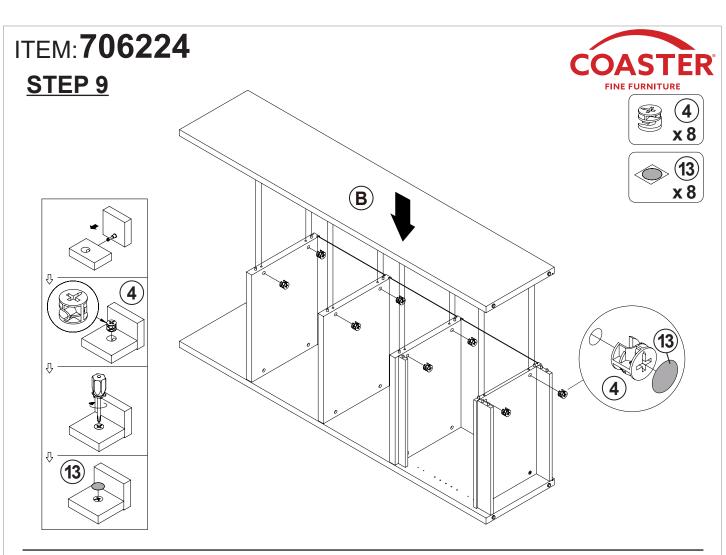

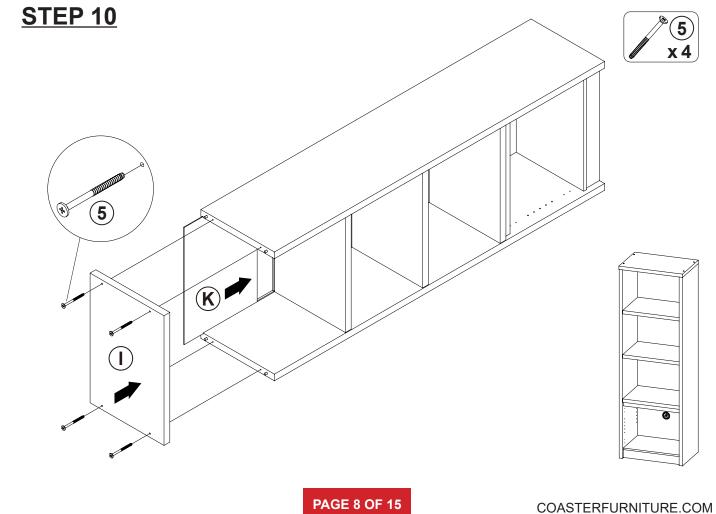


 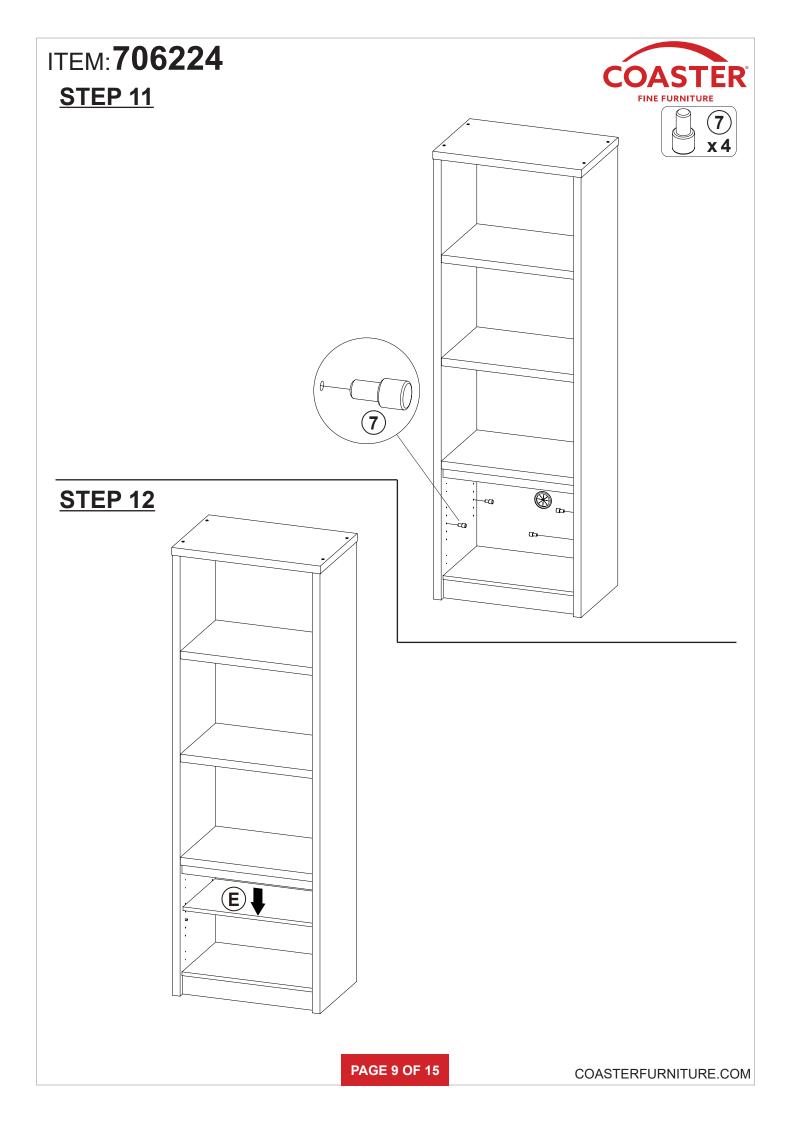








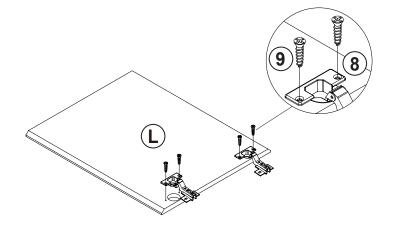



HORIZONTAL BY SCREW AADJUSTMENT




LATERAL BY SCREW B ADJUSTMENT




VERTICAL BY SCREW C ADJUSTMENT



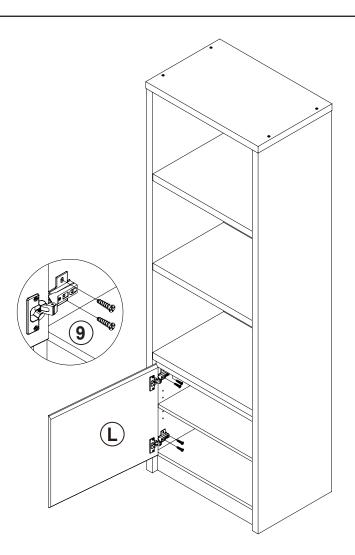






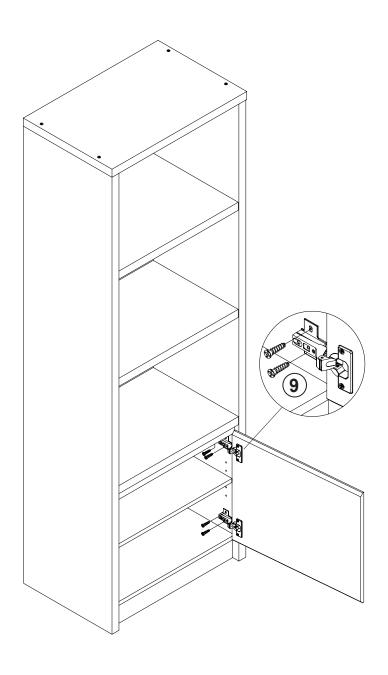









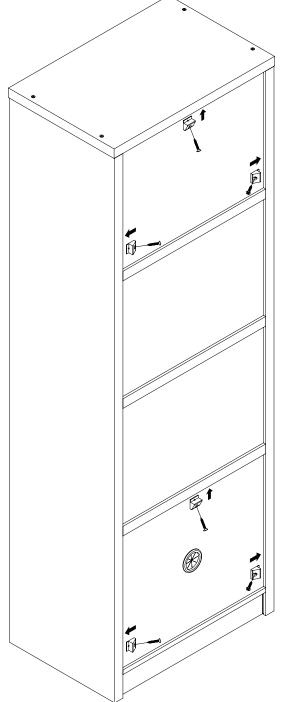

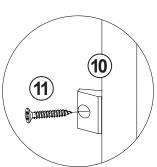


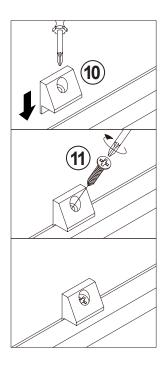

STEP 17

COMPLETE




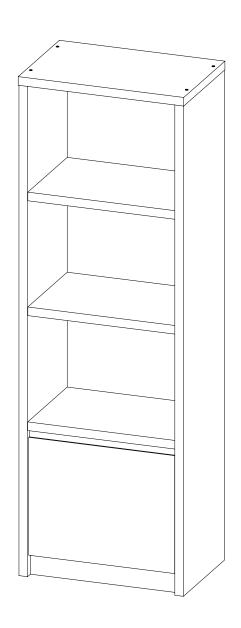







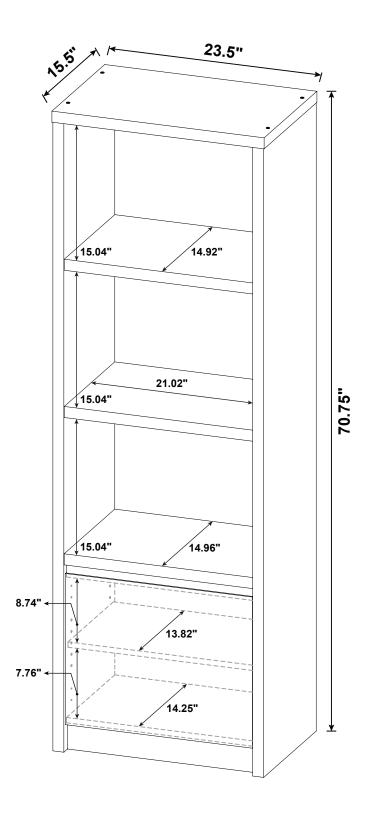

Note: Dimension tolerance ±5%



ANTI-TIPPING INSTALLMENT INSTRUCTIONS FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture.

This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.


This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.

This restraint must be screwed to a wood stud on the wall, using the long screw provided.


STEP 1

Secure the bracket to the back top of the unit, using the short screw provided, as shown in the drawing.

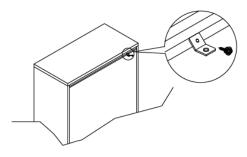

STEP 2

Locate the wood stud on the wall, and secure the other bracket, 2 inches below the back of the unit.

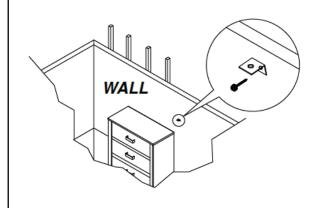

STEP 3

Place the furniture into position so both mounting brackets are vertically in line. Lace the end of the restraint strap through the larger hole in each mounting bracket. Bring both ends together and slide the flat end through the locking end, and drag it through, until the slack is removed. Ensure that the strap is securely laced and locked.

