 


TV STAND

91235

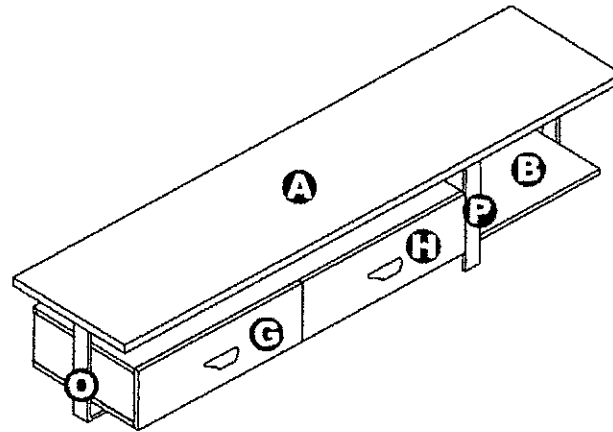 


DIMENSIONS


Width - 67.32"
Depth - 15.75"
Height - 13.58"

PARTS LIST


A X1

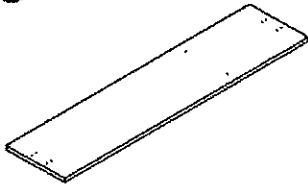


E X1

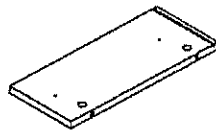 


I X2

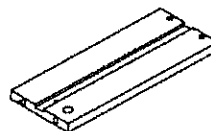 


M X2

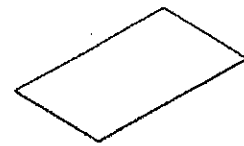 


B X1

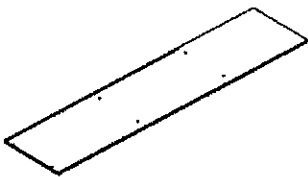 

F X1

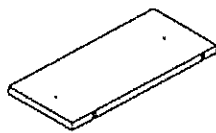 


J X2

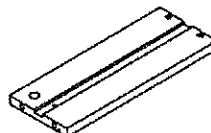 


N X1



 C X1

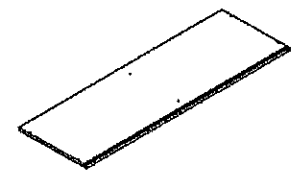


G X1

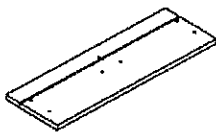 


K X2



 
O X2

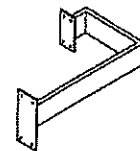


D X1

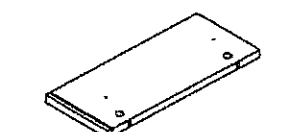 


H X1

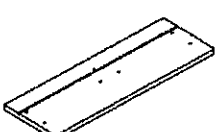 

L X2

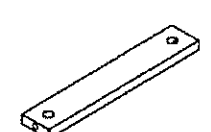 

P X1

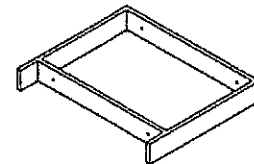 


Q X1



HARDWARE LIST

 1 X14



2 X14



3 X4



4 X8



5 X6



6 X4



7 X8



8 X4



9 X4



10 X20



11 X1



12 X2



13 X4



14 X4



15 X2



 
16 X2



17 X4











Step 1.

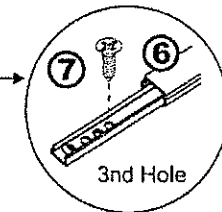






ASSEMBLY INSTRUCTIONS

        Step 2.

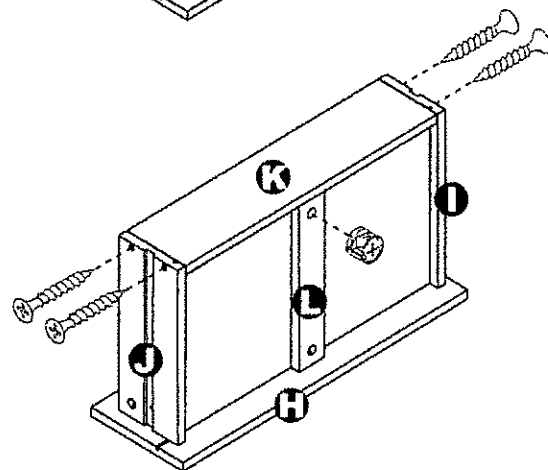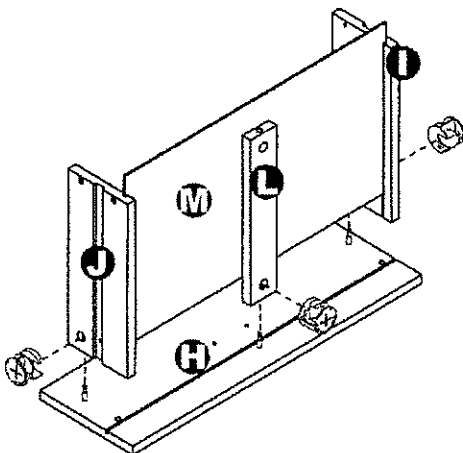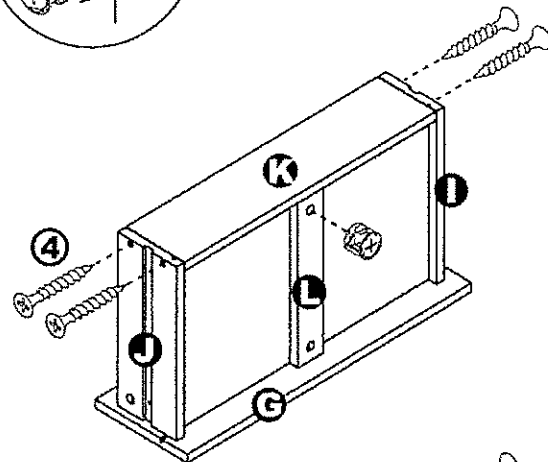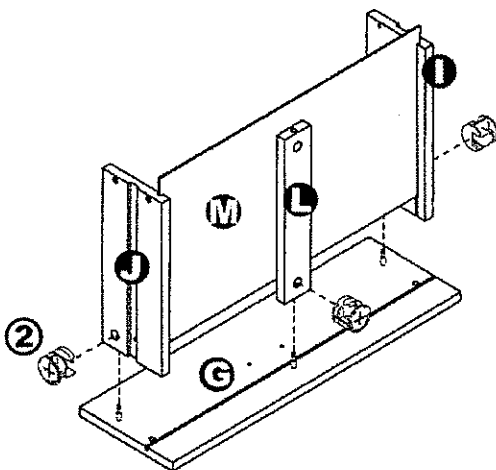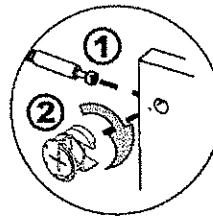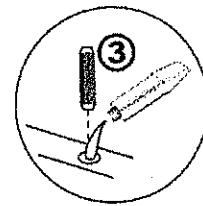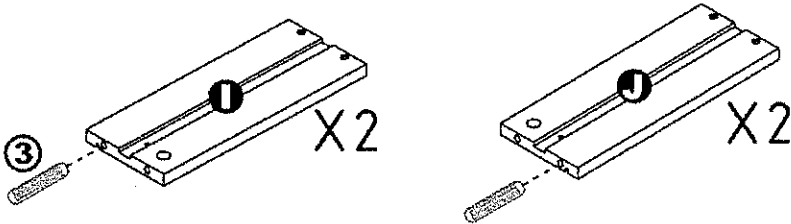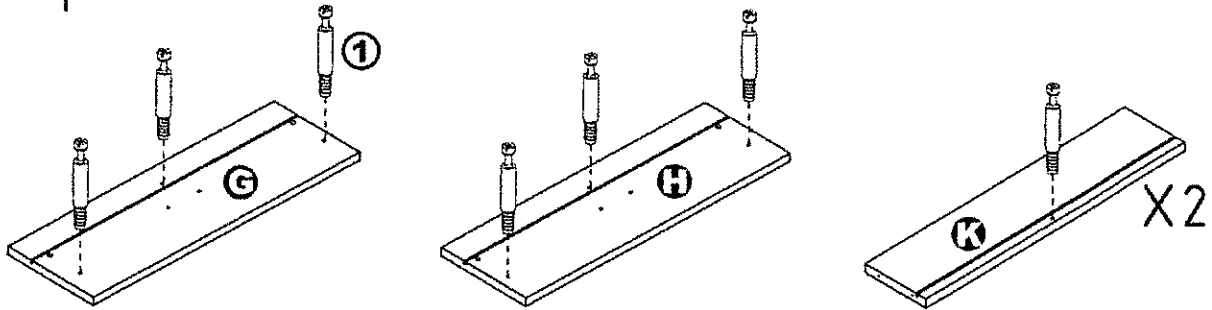


ASSEMBLY INSTRUCTIONS

     Step 3.

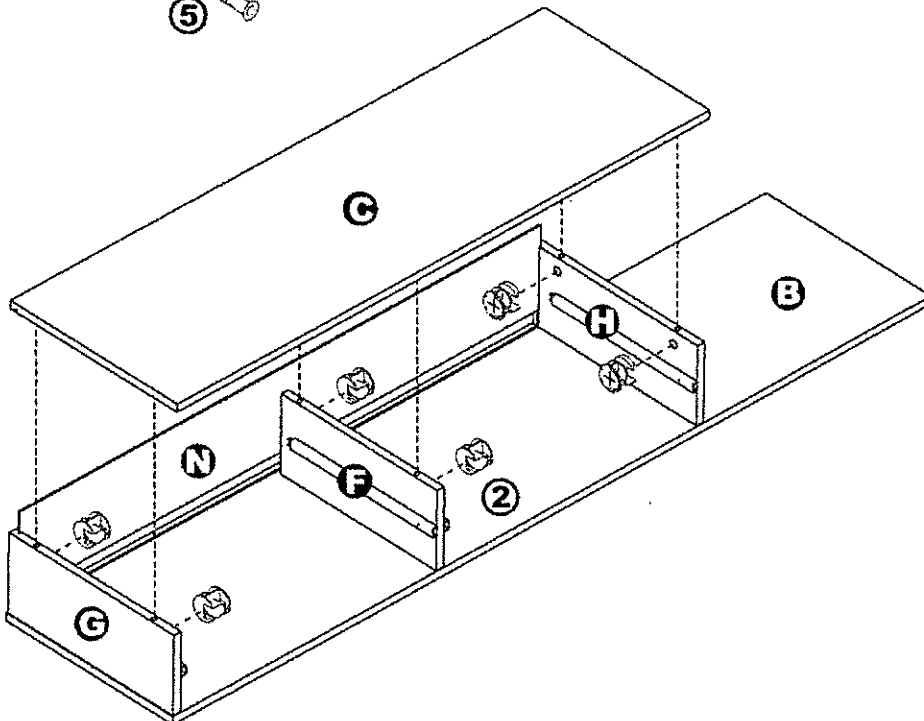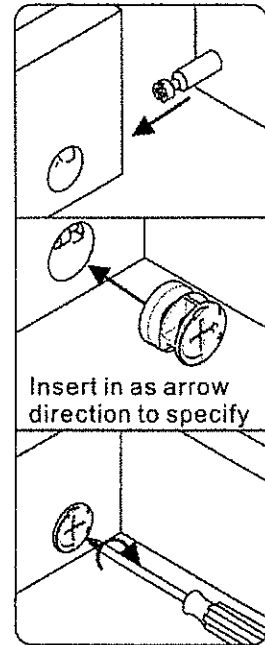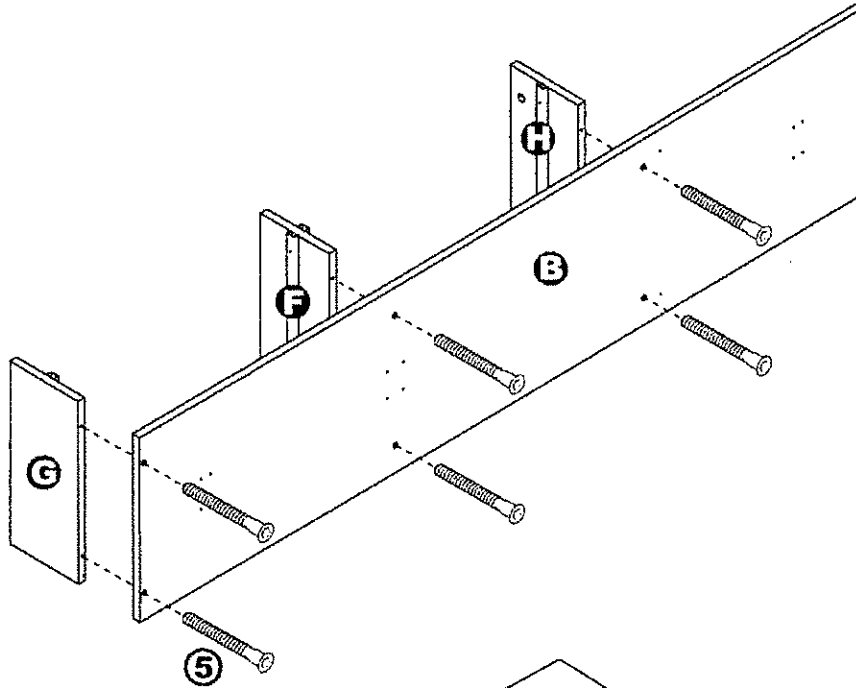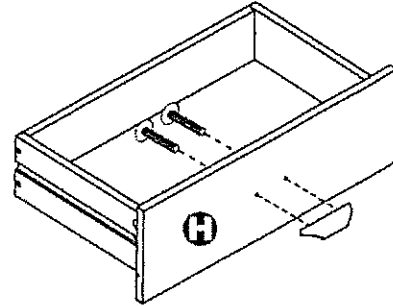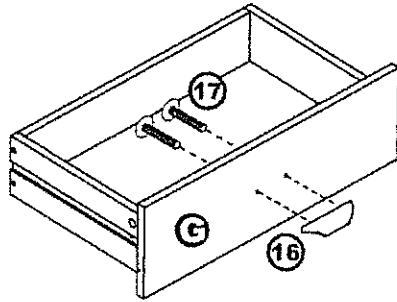



ASSEMBLY INSTRUCTIONS

 Step 4.

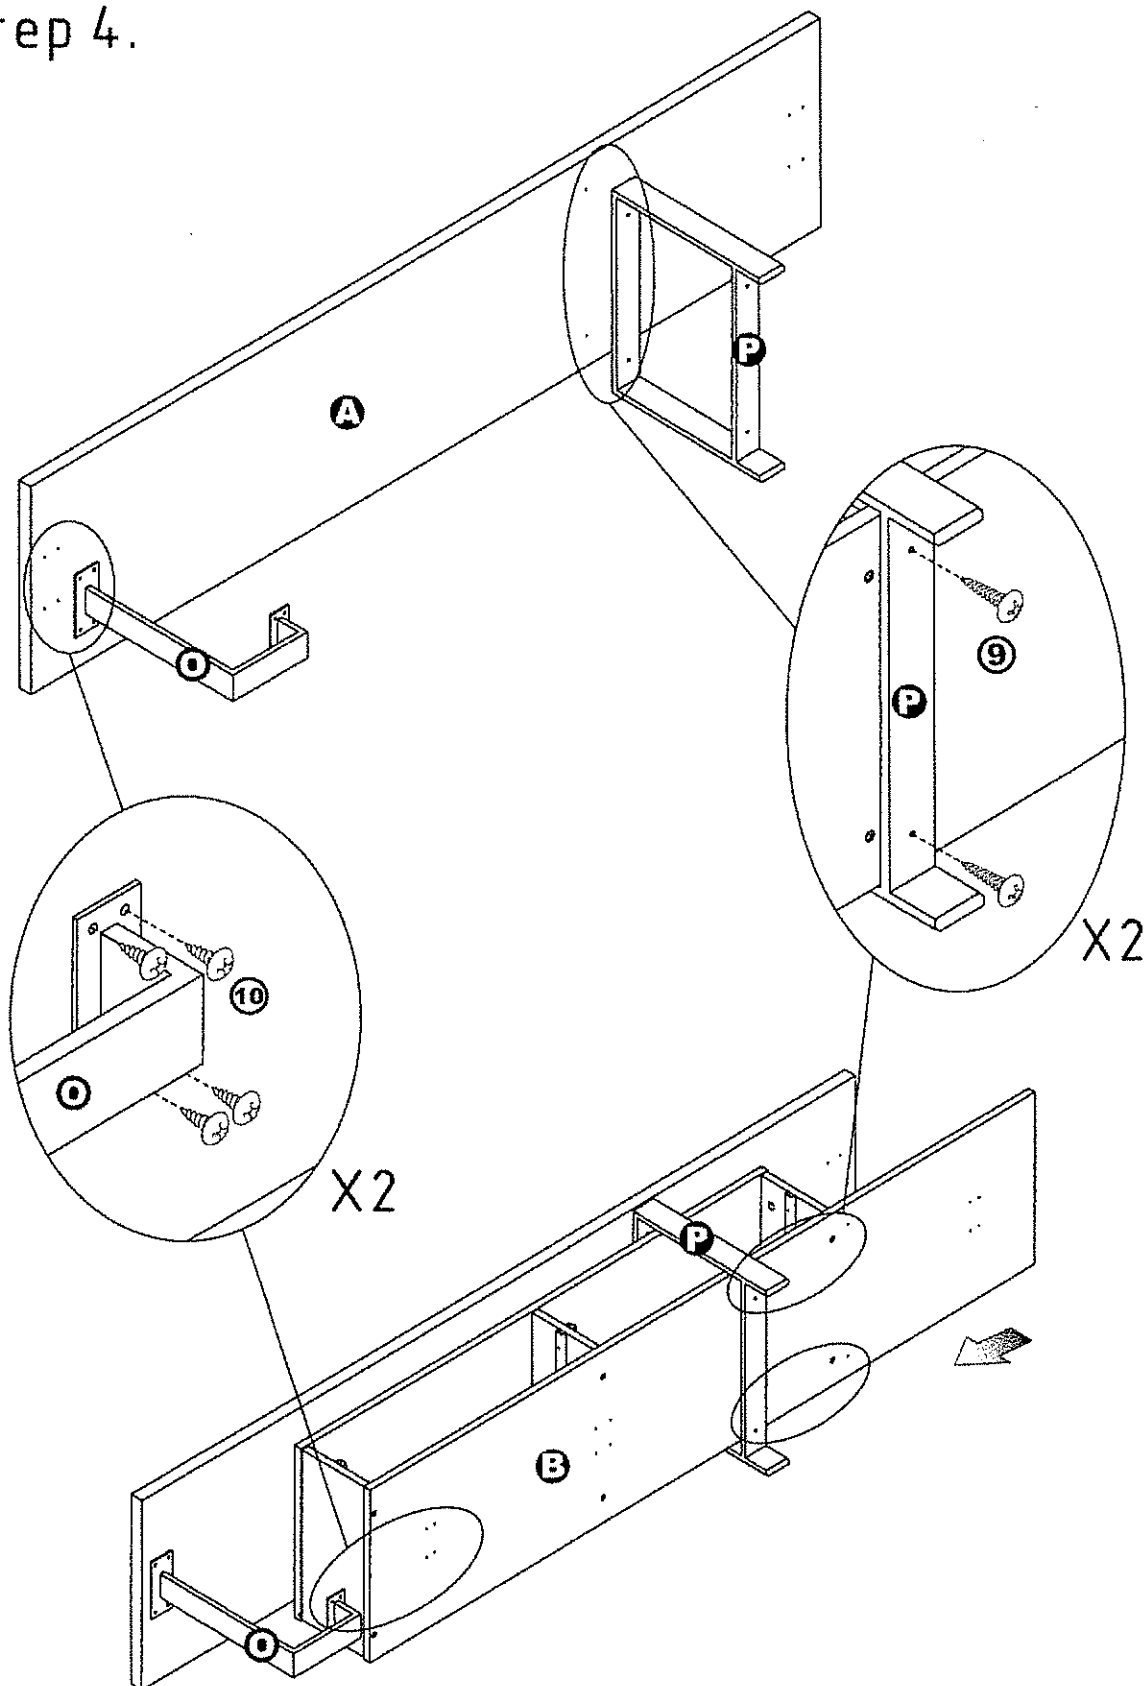

ASSEMBLY INSTRUCTIONS

  
Step 5.

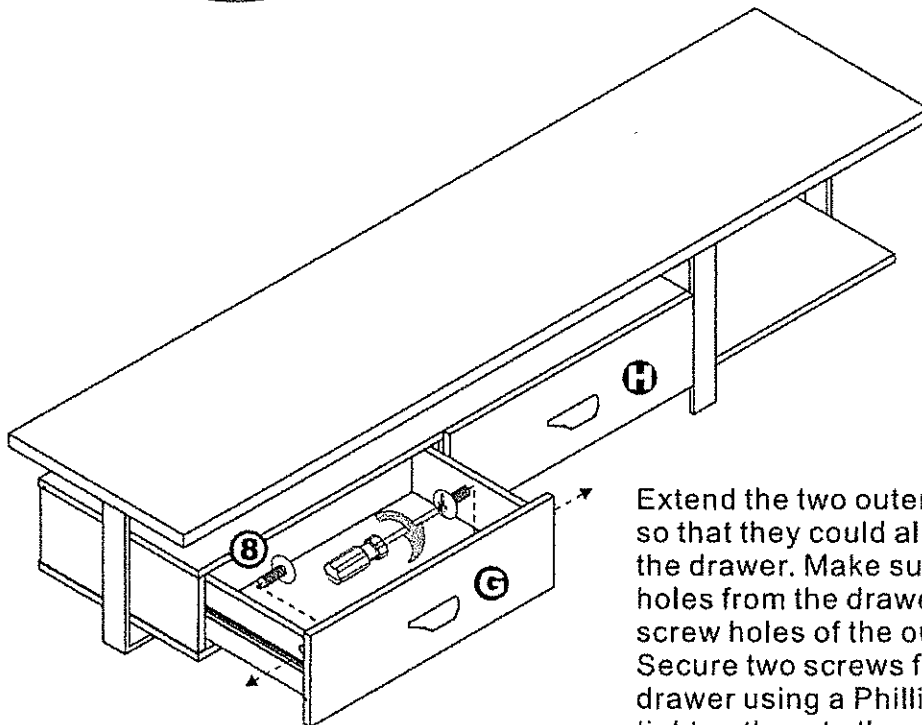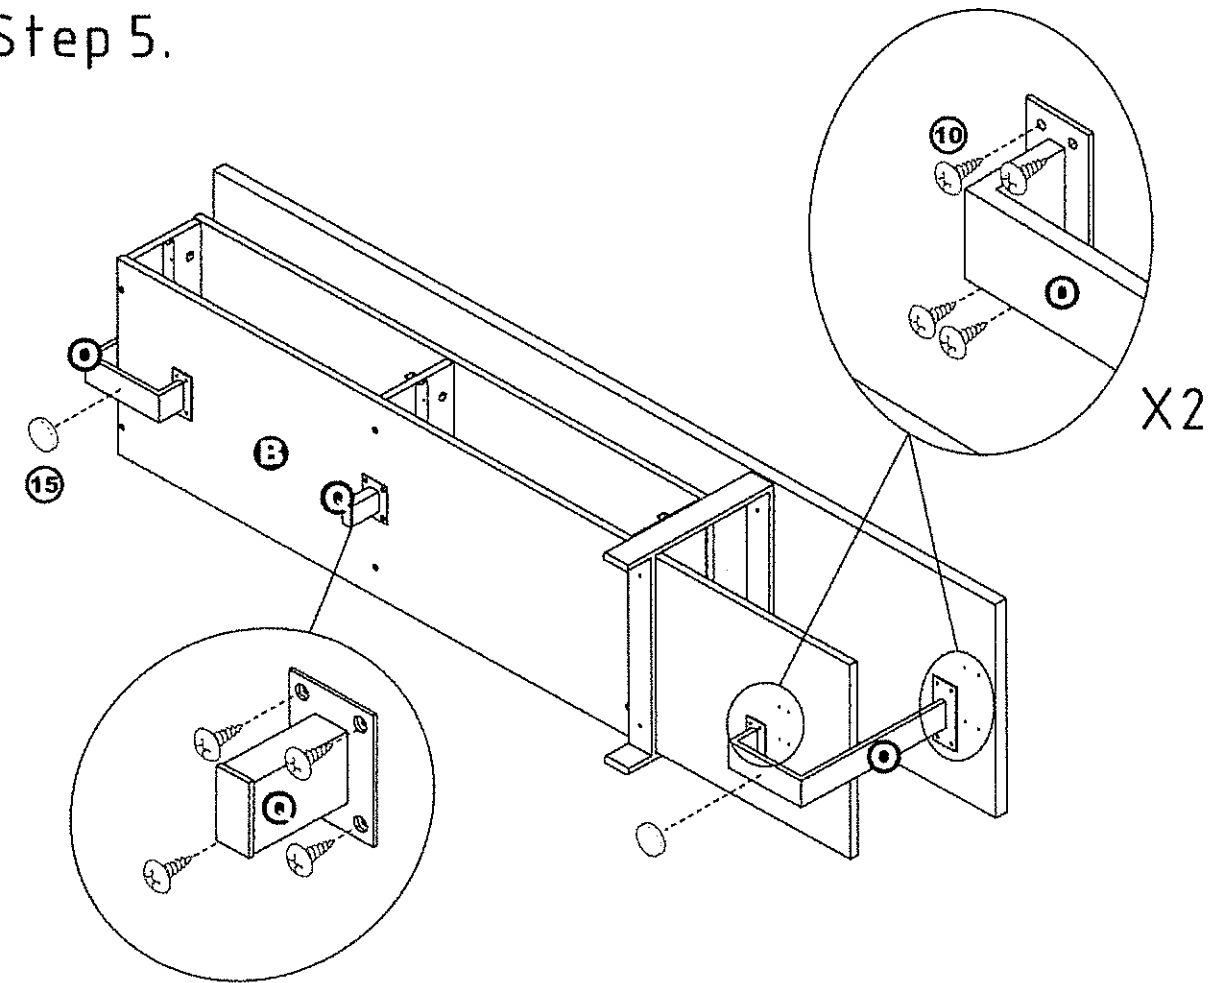

Extend the two outer slides of the runners so that they could align with the sides of the drawer. Make sure the pre-drilled holes from the drawer align with the screw holes of the outer slides. Secure two screws from the inside of the drawer using a Phillips screwdriver to tighten them to the outer slides.

ASSEMBLY INSTRUCTIONS

 Step 6.

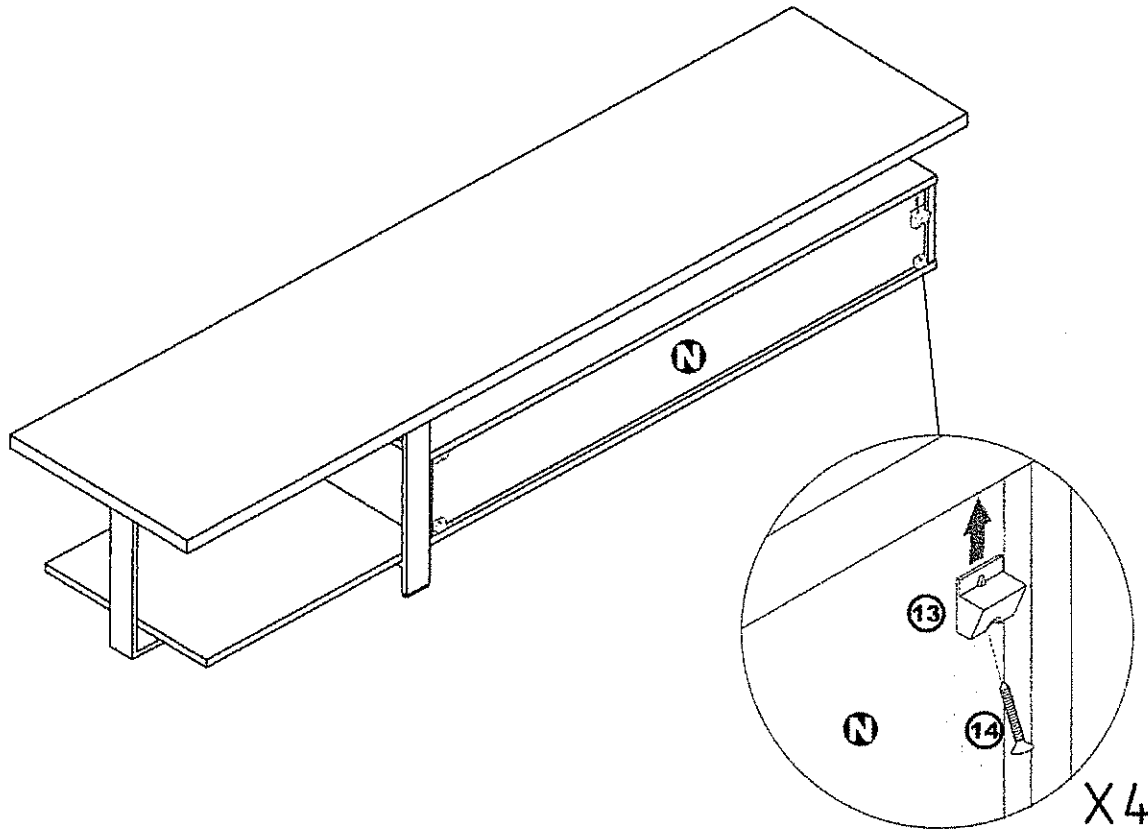

ASSEMBLY IS COMPLETED

Make sure the product is rested on a flat surface and does not feel loose or wobbly. If it does, double check that the bolts/screws are secured and properly tightened.