
 


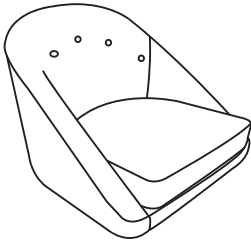



ITEM NAME/NOM D'ITEM: CARTER ACCENT CHAIR


ITEM#/NO.ITEM: 109876

## PARTS LIST/LISTE DES PIÈCES


(1)	(2)	(3)	(4)
 <p>x1</p>	 <p>x1</p>	 <p>x1</p>	<p>A.  x1 M6x30mm</p> <p>B.  x4 M6x50mm</p> <p>C.  x1 M6</p>

## ASSEMBLY INSTRUCTIONS/INSTRUCTIONS D'ASSEMBLAGE


I

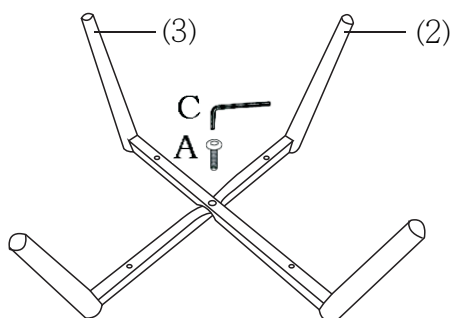

II

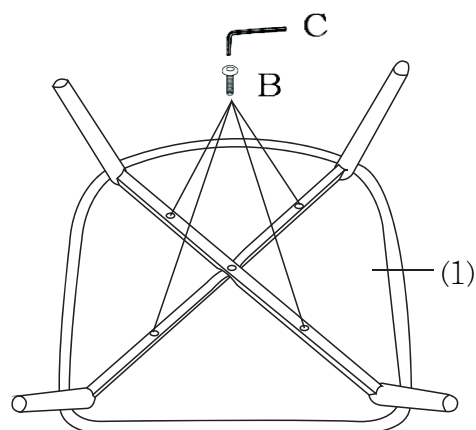

III

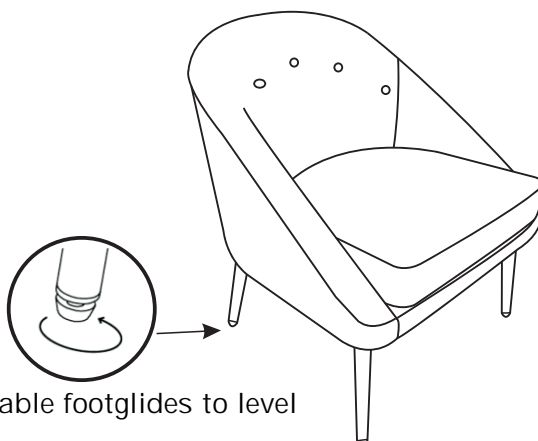

Please use the attached adjustable footglides to level the chair on uneven surface.

For missing parts or damaged parts, please call /  
Pour pièce manquante ou endommagée, veuillez appeler:

USA, Canada and Mexico: (866)-798-6663

AI-V1-231116