
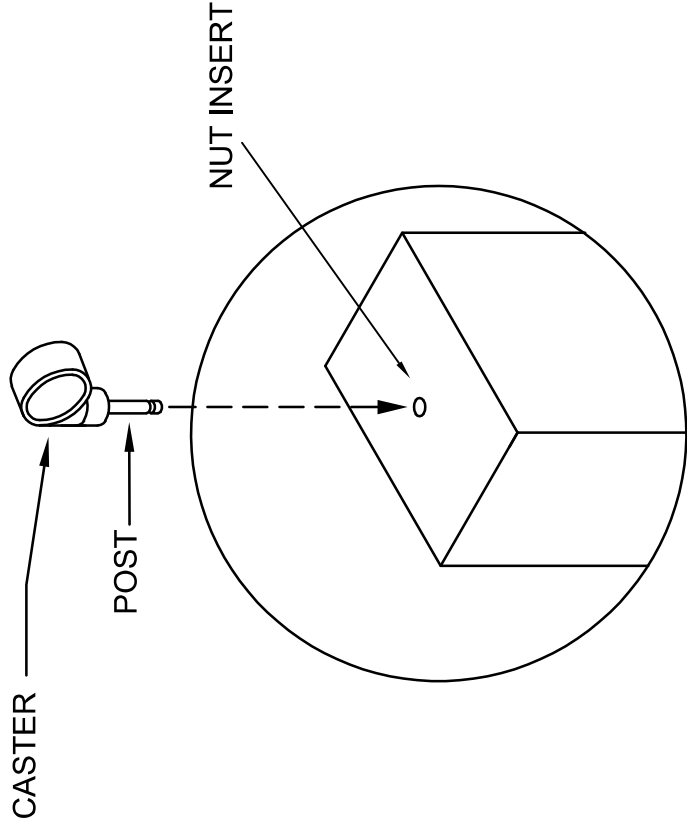


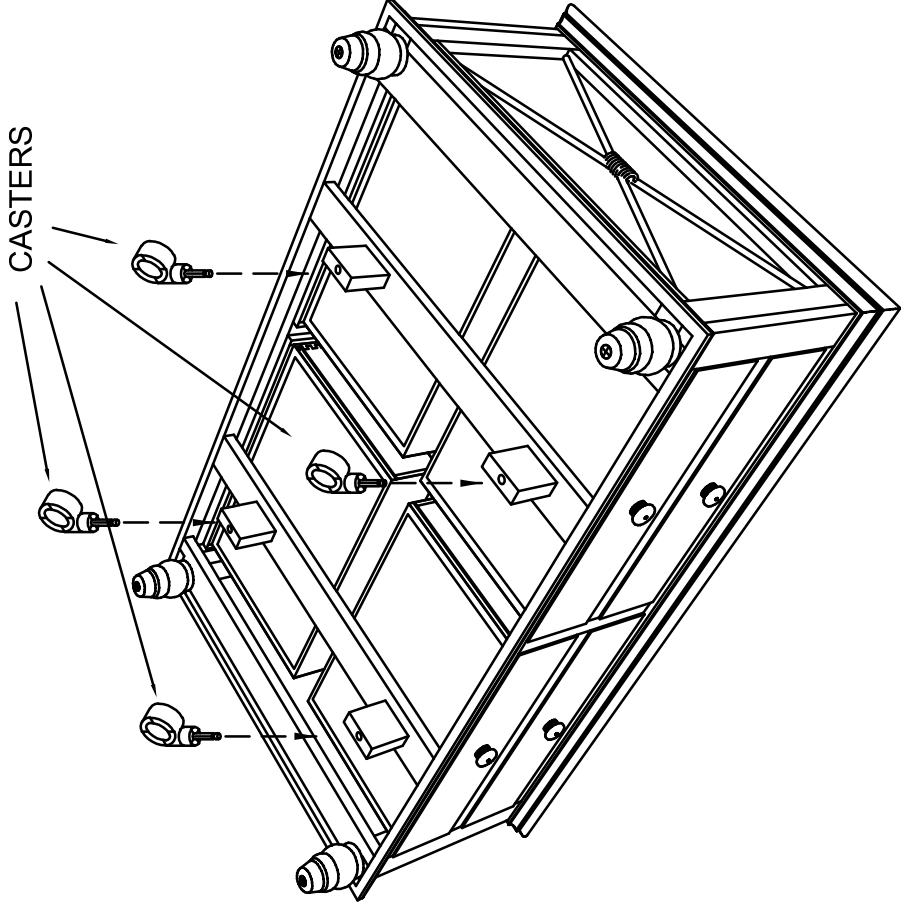

## INSTRUCTIONS:

### TO ATTACH THE CASTERS TO THE TABLE

- 1.- INSERT THE POST OF THE CASTER INTO THE NUT INSERT AND PUSH FIRMLY

| HARDWARE    |       |  |
|-------------|-------|--|
| DESCRIPTION | # PCS |  |
| CASTER      | 4     |  |

PRODUCT IMAGE SHOWN IS FOR ILLUSTRATIVE PURPOSES ONLY, SHOULD NOT BE TAKEN AS REFERENCE POINT



# ASSEMBLY INSTRUCTIONS

I-CKT-C001