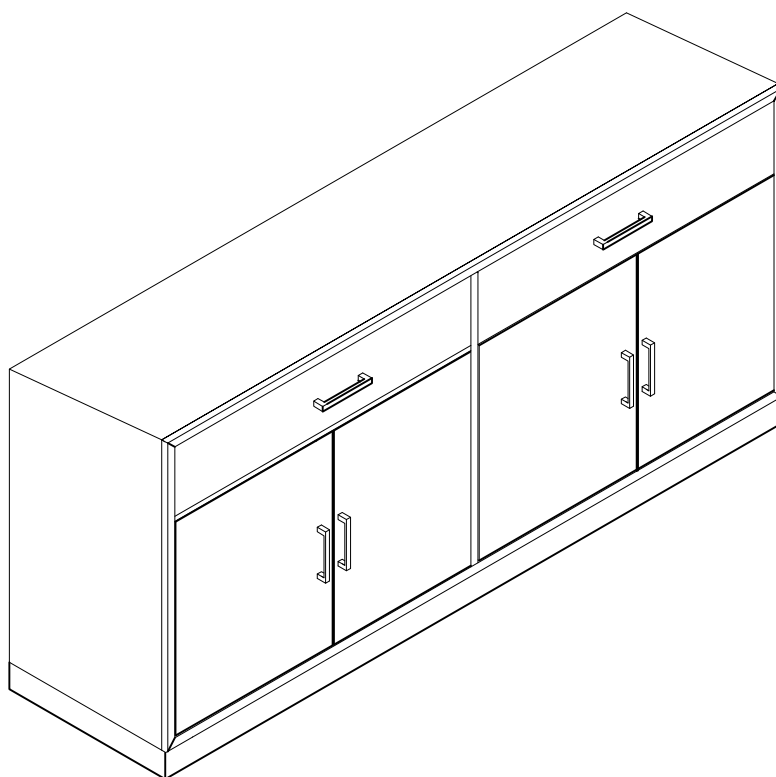


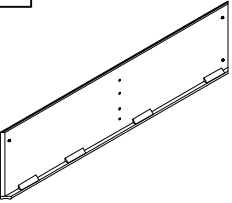
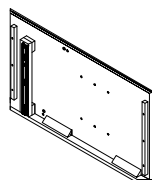
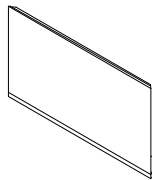
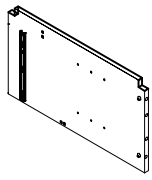
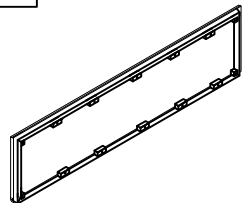
 
 
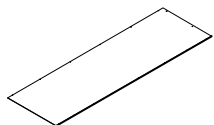
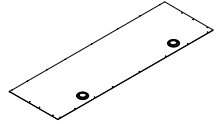
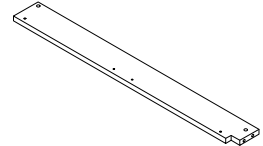
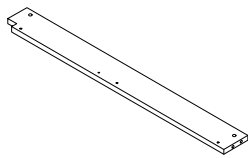
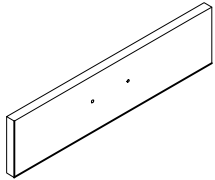
 
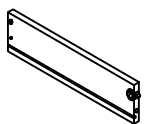
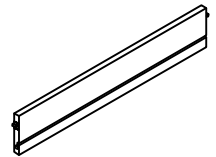
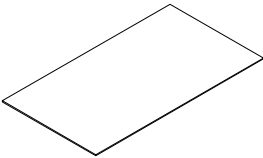

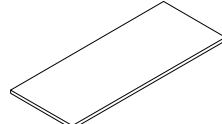
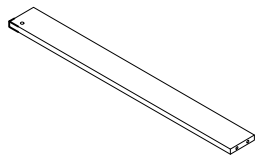
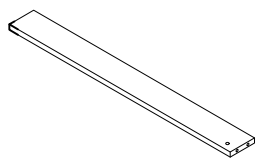
CROSLEY

FURNITURE

 
 
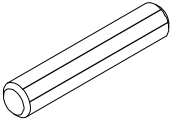
 
 

 
 
 

 
 
 
 
 
Sideboard CF4223



PART LIST


A 	B 	C 	D 	E 
Top Panel 1 PC	Left Panel 1 PC	Right Panel 1 PC	Partition Panel 1 PC	Bottom Panel 1 PC
F 	G 	H 	I 	J 
Left Door 2 PCS	Right Door 2 PCS	Top Back Panel 1 PC	Bottom Back Panel 1 PC	Left Cross Rail 1 PC
K 	L 	M 	N 	O 
Right Cross Rail 1 PC	Drawer Front Panel 2 PCS	Drawer Left Panel 2 PCS	Drawer Right Panel 2 PCS	Drawer Back Panel 2 PCS
P 	Q 	R 	S 	T 
Drawer Bottom Panel 2 PCS	Drawer Bottom Rail 2 PCS	Adjustable Shelf 2 PCS	Left Back Rail 1 PC	Right Back Rail 1 PC

HARDWARE LIST

#1  Ø8*30mm Long Wood Dowel 8 PCS (Extra 1)	#2  Ø6*30mm Short Wood Dowel 12 PCS (Extra 1)	#3  Ø8*50mm Large Wood Dowel 3 PCS (Extra 1)	#4  Magnet 2 PCS	#5  Round Head Screw 4 PCS (Extra 1)
#6  Handle 6 PCS	#7  Round Head Bolt 12 PCS (Extra 1)	#8  Bolt 8 PCS (Extra 1)	#9  Shelf Holder 8 PCS	#10  Screw 40 PCS (Extra 1)
#11  Adjustable Leveler 4 PCS	#12  Allen Wrench 1 PC	#13  Cam Bolt 10 PCS (Extra 1)	#14  Cam Lock 10 PCS (Extra 1)	#15  Safety Strap Kit 1 SET

ADDITIONAL TOOLS (Not Provided)

 
Note: It is not recommended to use power tools during assembly.



Phillips Head Screwdriver


Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.

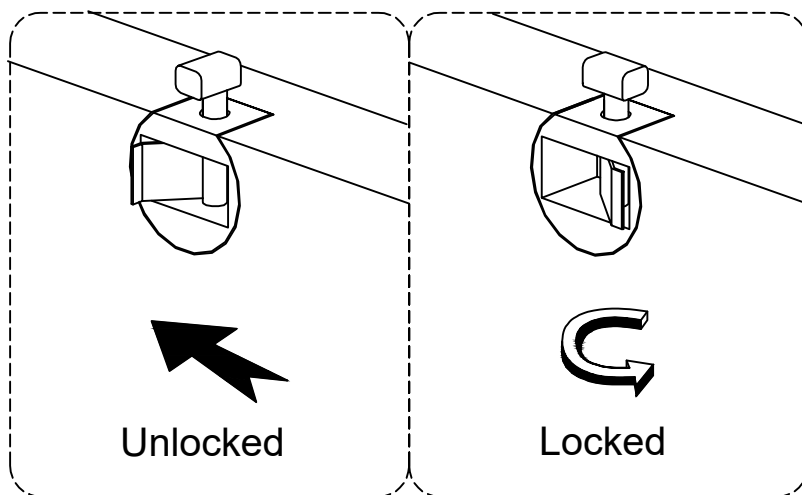Please do not use tools to assemble this unit unless specifically indicated.




Reference the images above any time the instructions state "lock the hardware".
Note: Be sure to check all hardware is locked when completed.

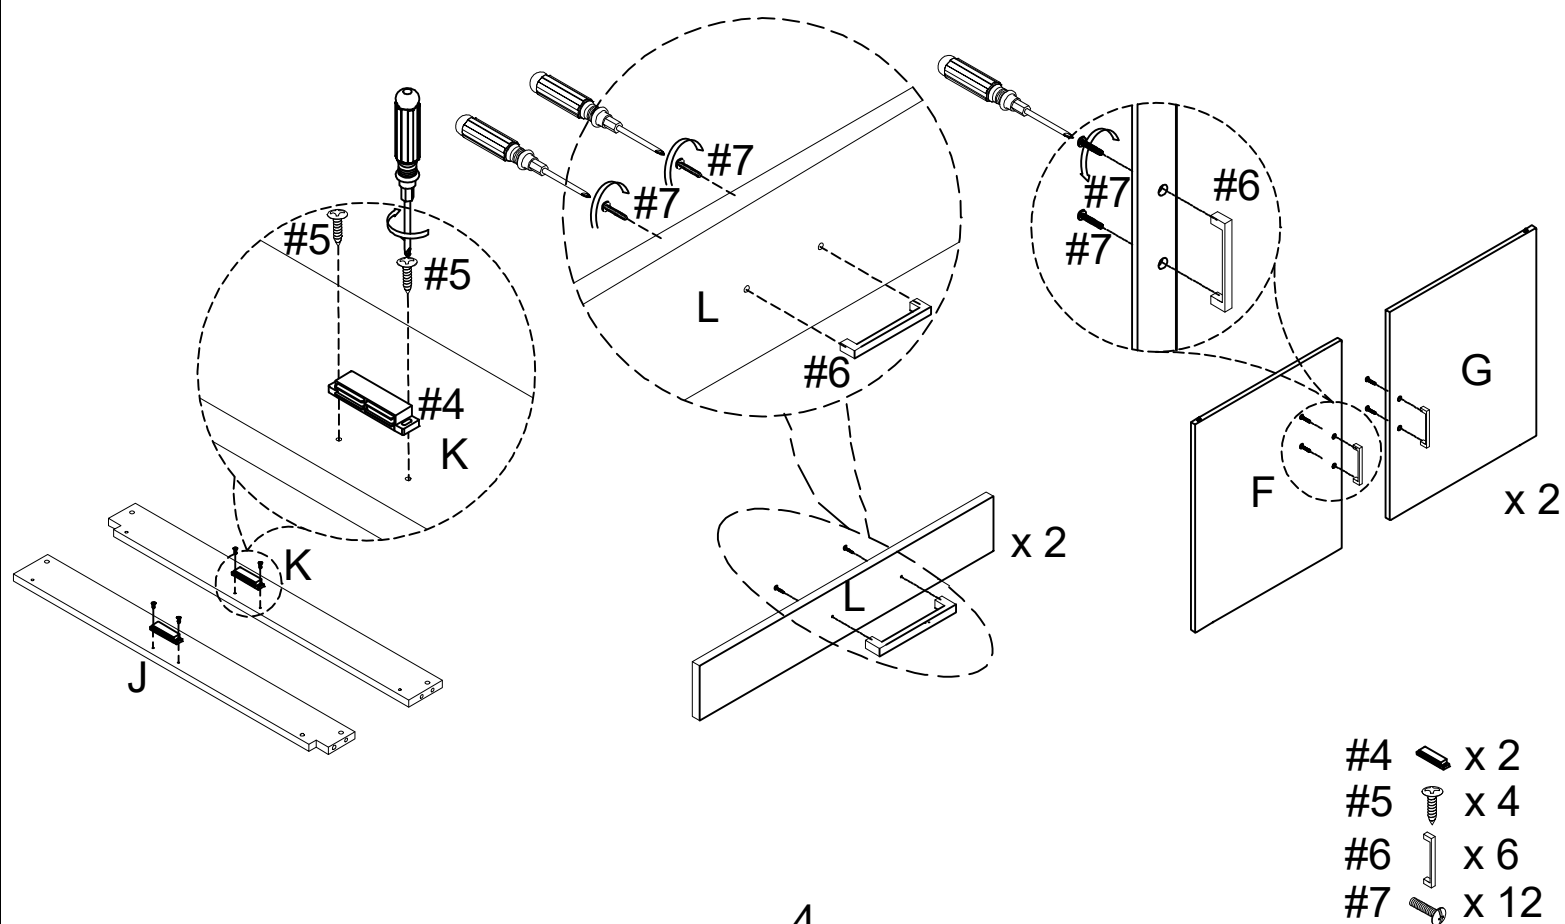Step 1. Attach magnets (part #4) to rails (parts J & K) using round head screws (part #5) and phillips head screwdriver. Attach handles (part #6) to panels (parts F, G & L) using round head bolts (part #7) and phillips head screwdriver.




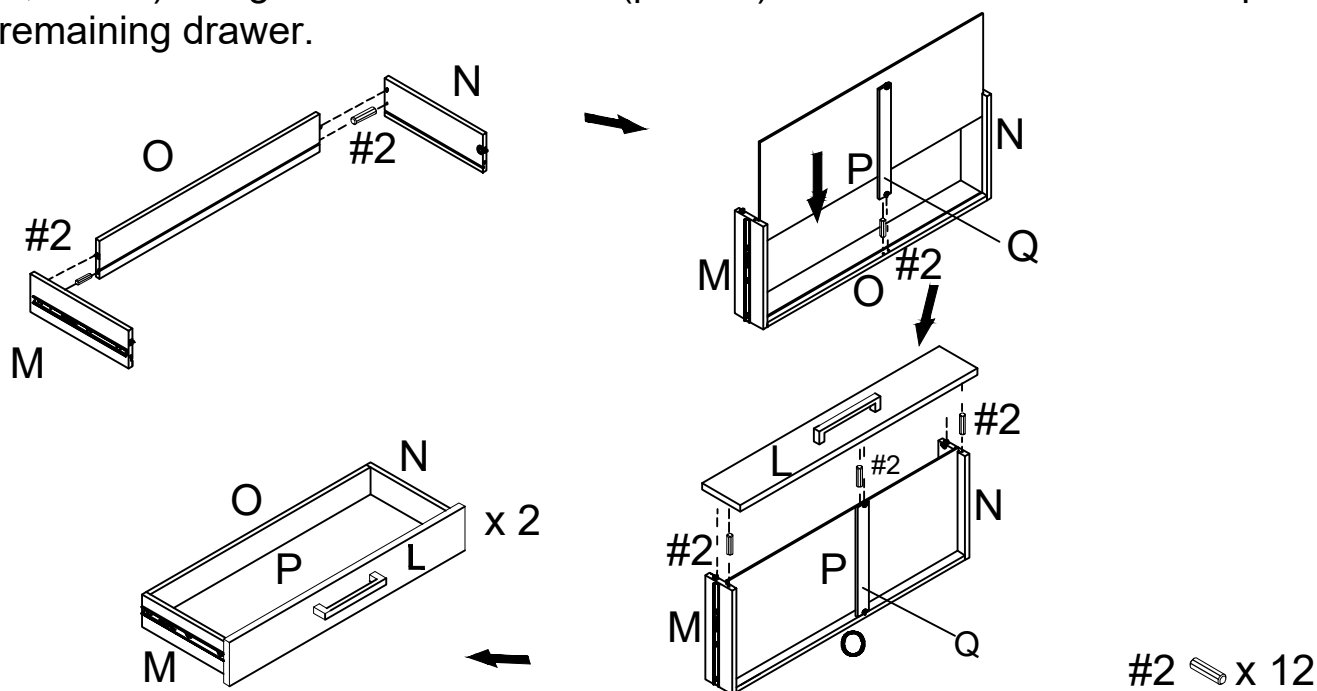Step 2. Attach drawer panels (parts M & N) to drawer back panel (part O) using short wood dowels (part #2) and lock the hardware. Slide drawer bottom panel (part P) into grooves of assembled unit (parts M, N & O). Attach drawer bottom rail (part Q) to drawer back panel (part O) using small wood dowel (part #2) and lock the hardware. Attach drawer front panel (part L) to assembled unit (parts M, N, O & P) using short wood dowels (part #2) and lock the hardware. Repeat for remaining drawer.




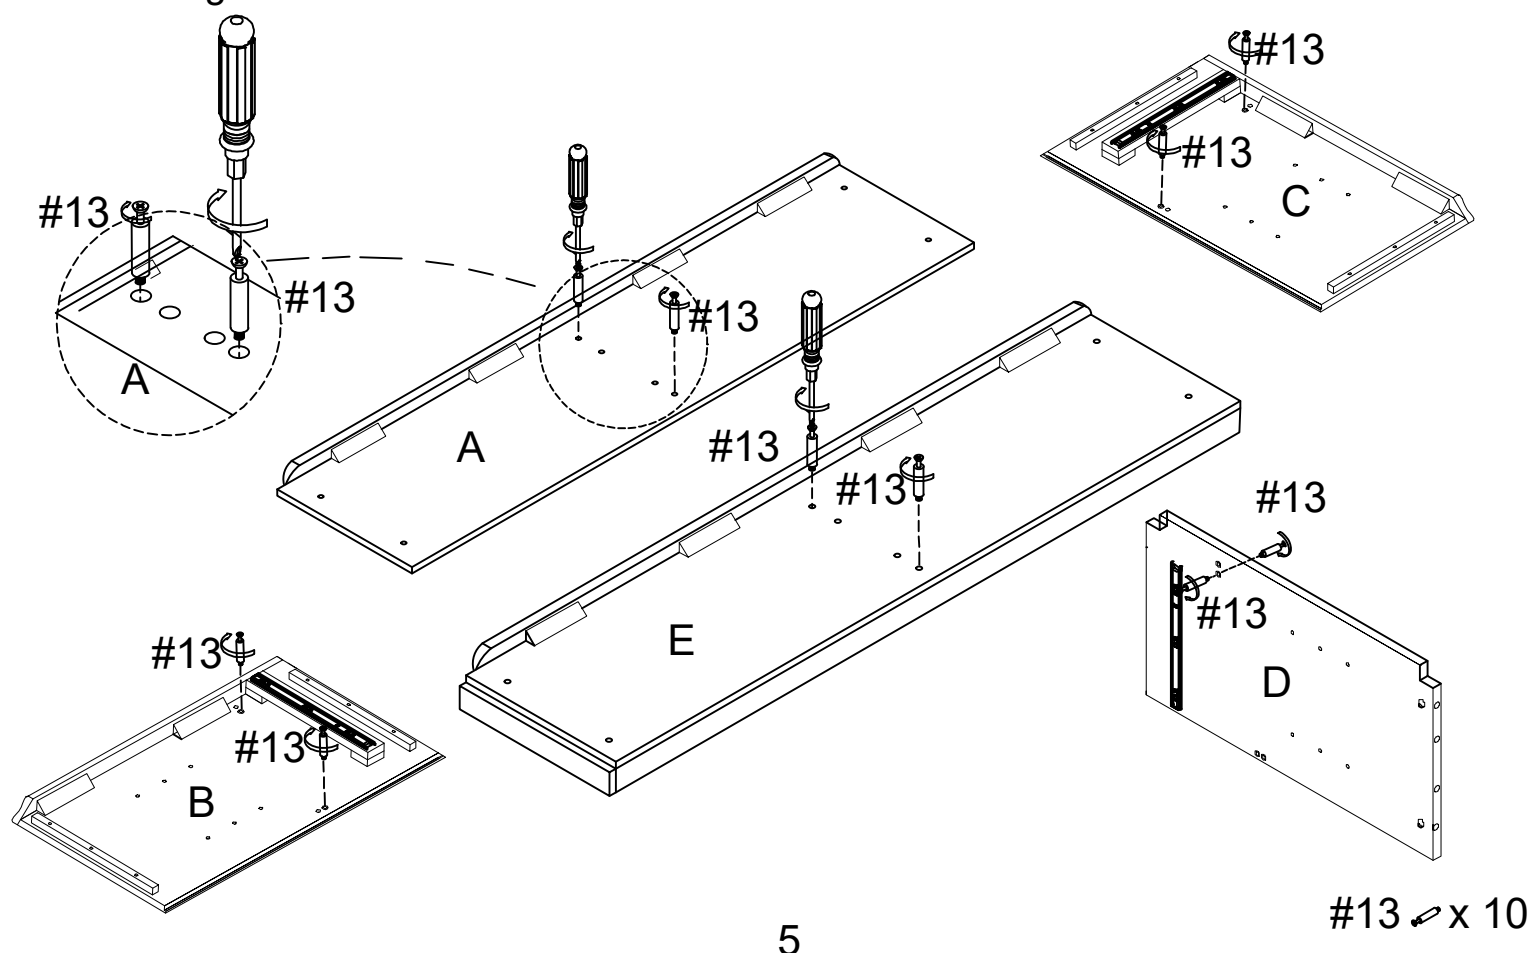
Step 3. Insert cam bolts (part #13) into pre-drilled holes of panels (parts A, B, C, D & E) using phillips head screwdriver.




Note: Do not overtighten cam bolts. Stop tightening once threads on cam bolts are no longer visible.



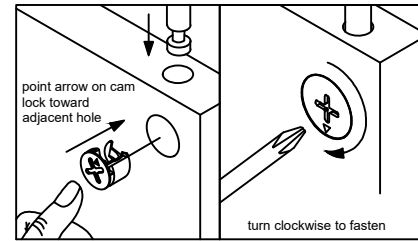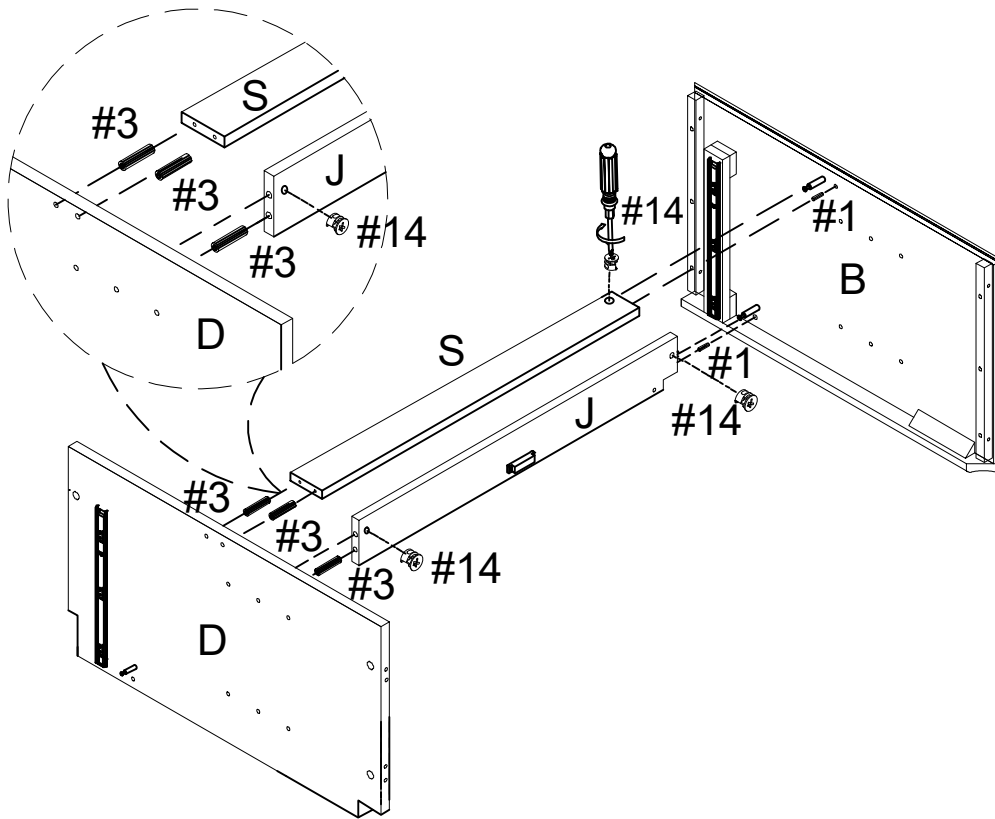Step 4. Attach rails (parts J & S) to panels (parts B & D) using cam locks (part #14), long wood dowels (part #1), large wood dowels (part #3) and phillips head screwdriver.



Note: Cam locks must rotate a full 180°. See pictured insert.





#1  x 2
 #3  x 3
 #14  x 3

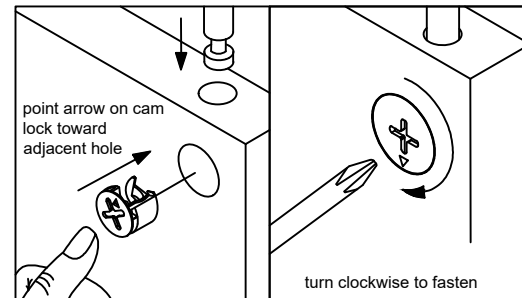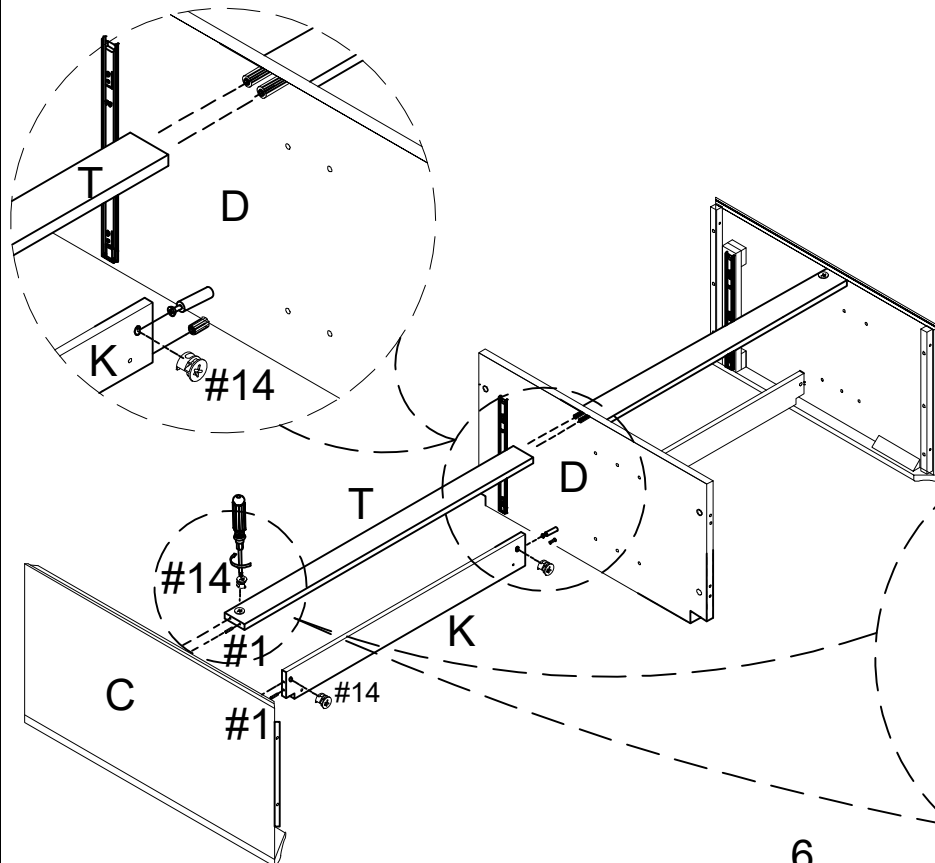
Step 5. Attach rails (parts K & T) to panels (parts C & D) using long wood dowels (part #1), cam locks (parts #14) and phillips head screwdriver.

Note: Cam locks must rotate a full 180°. See pictured insert.




#1  x 2
 #14  x 3

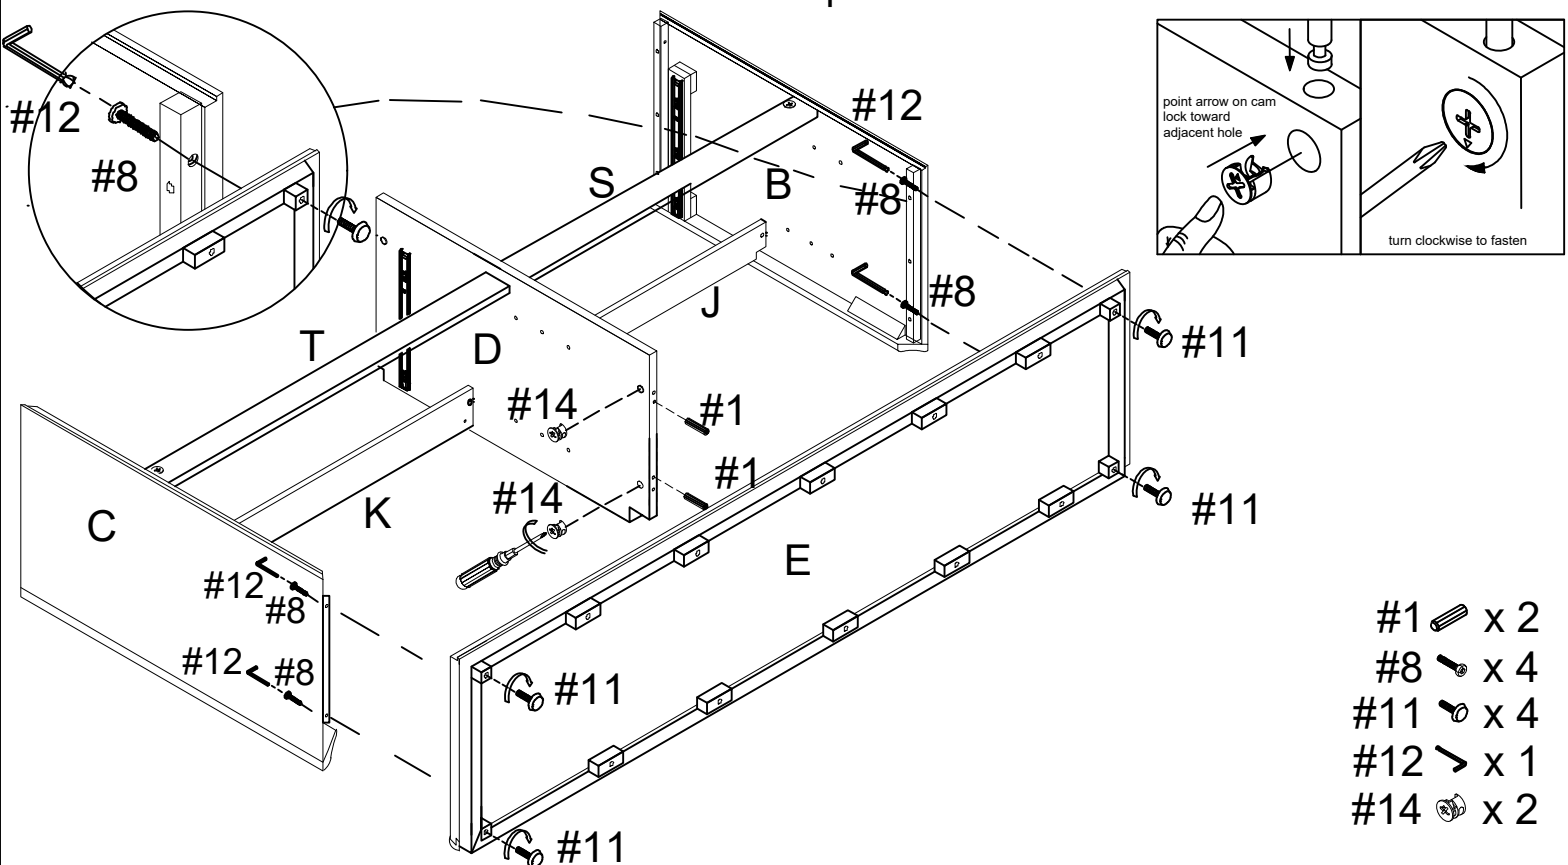
Step 6. Attach bottom panel (part E) to assembled unit (parts B, C & D) using long wood dowels (part #1), cam locks (part #14), bolts (part #8) and allen wrench (part #12). Attach adjustable levelers (part #11) to bottom panel (part E).
 Note: Cam locks must rotate a full 180°. See pictured insert.



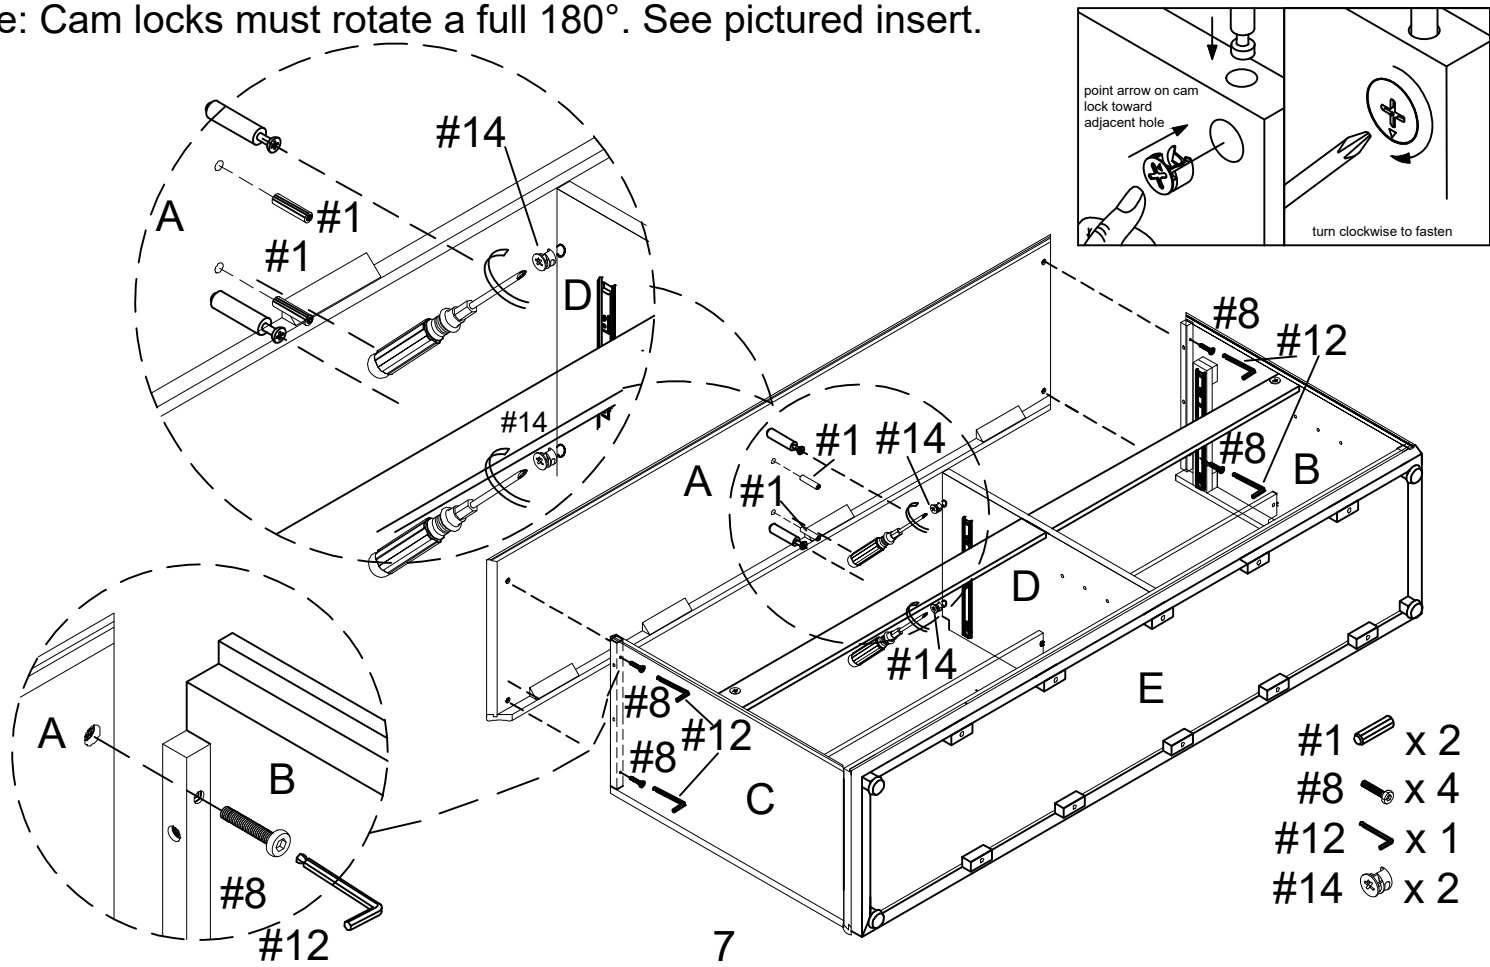Step 7. Attach top panel (part A) to assembled unit (parts B, C & D) using long wood dowels (part #1), cam locks (part #14), bolts (part #8), allen wrench (part #12) and phillips head screwdriver.
 Note: Cam locks must rotate a full 180°. See pictured insert.




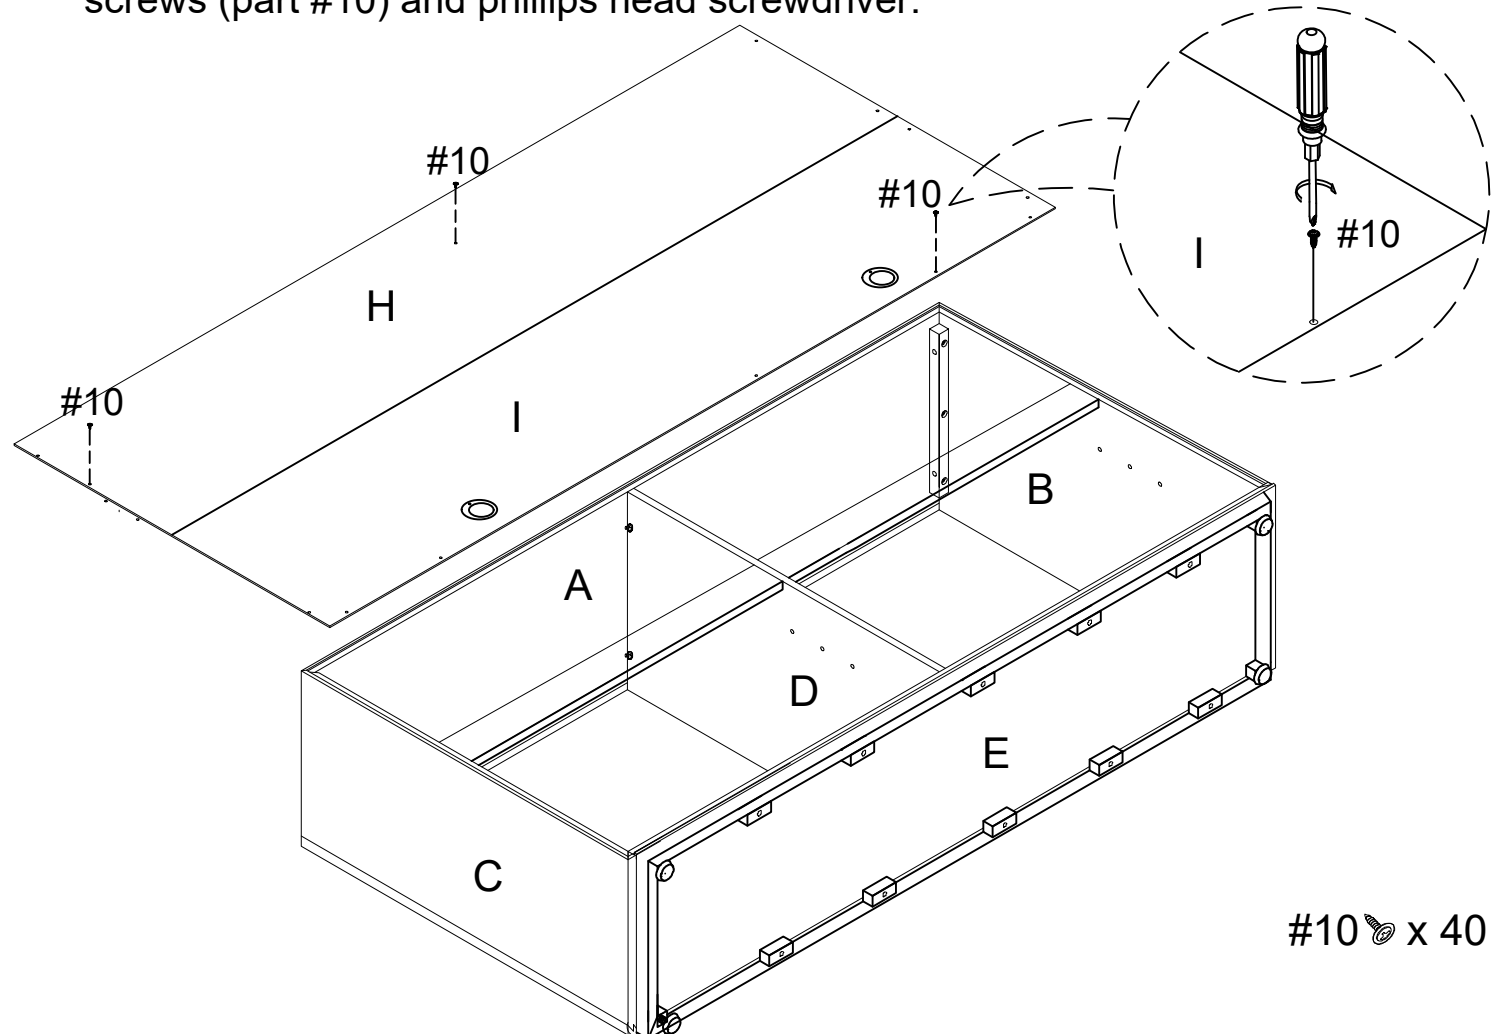Step 8. Attach back panels (parts H & I) to assembled unit (parts A, B, C, D & E) using screws (part #10) and phillips head screwdriver.




#10 x 40

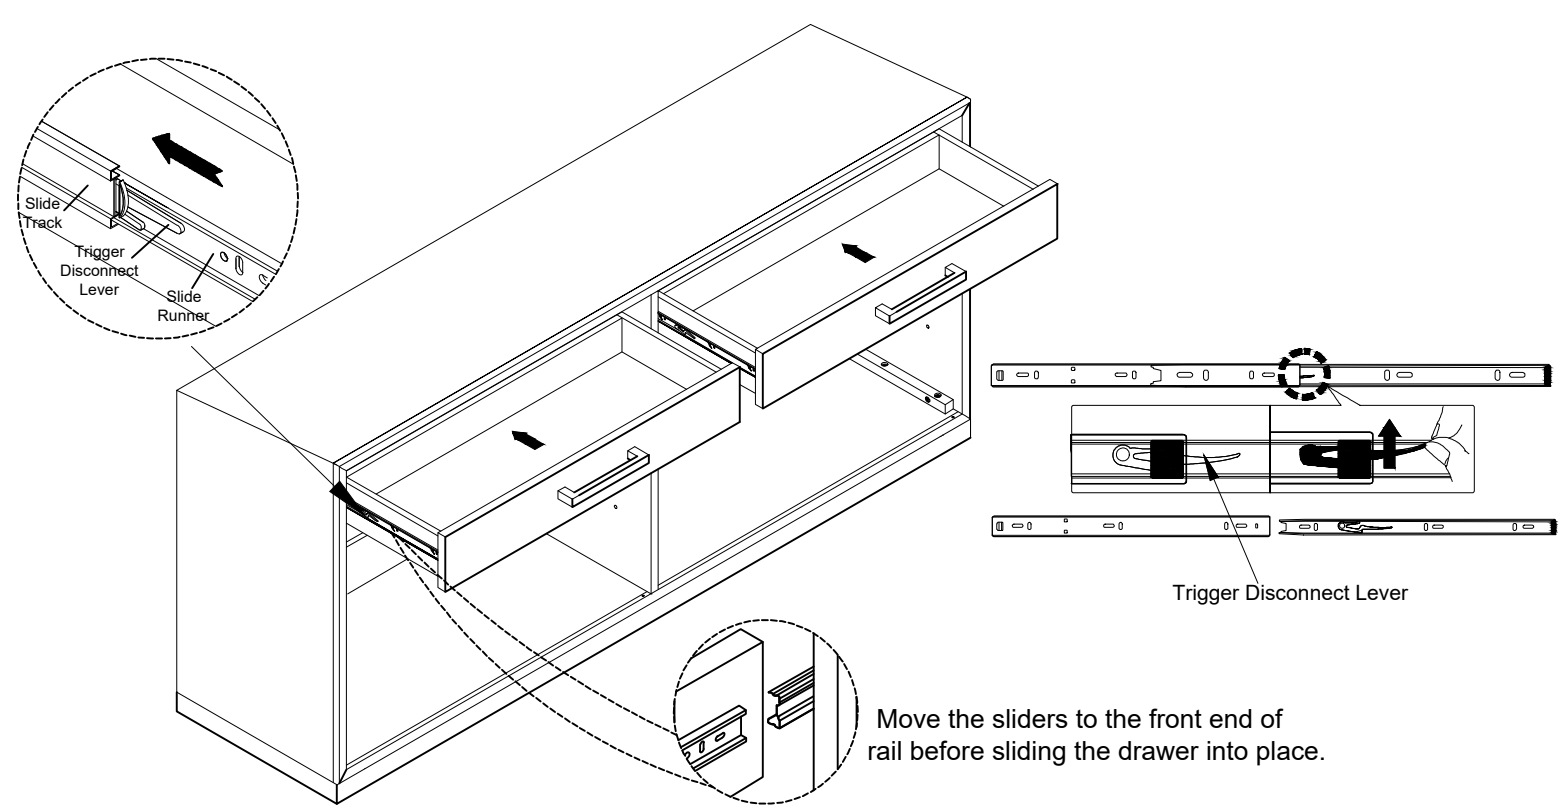Step 9. Carefully turn unit upright. Slide assembled drawers into place.
Note: To release trigger disconnect levers push one side up and the other down.



Move the sliders to the front end of rail before sliding the drawer into place.

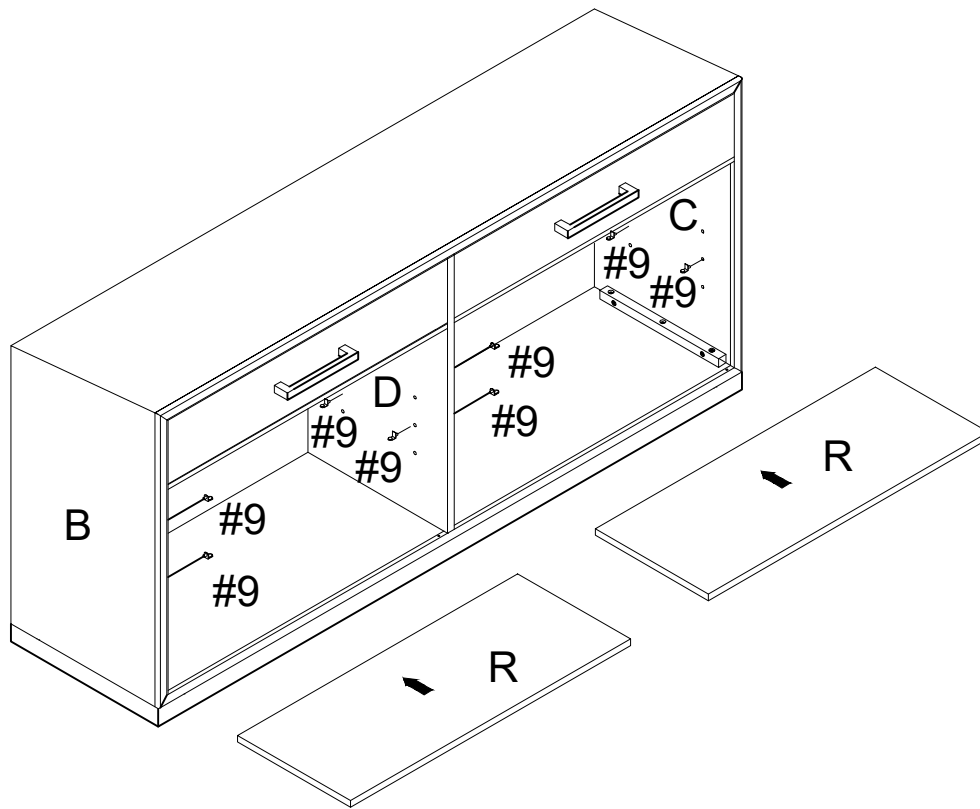Step 10. Place shelf holders (part #9) into desired position and then slide adjustable shelves (part R) into place.




#9  x 8

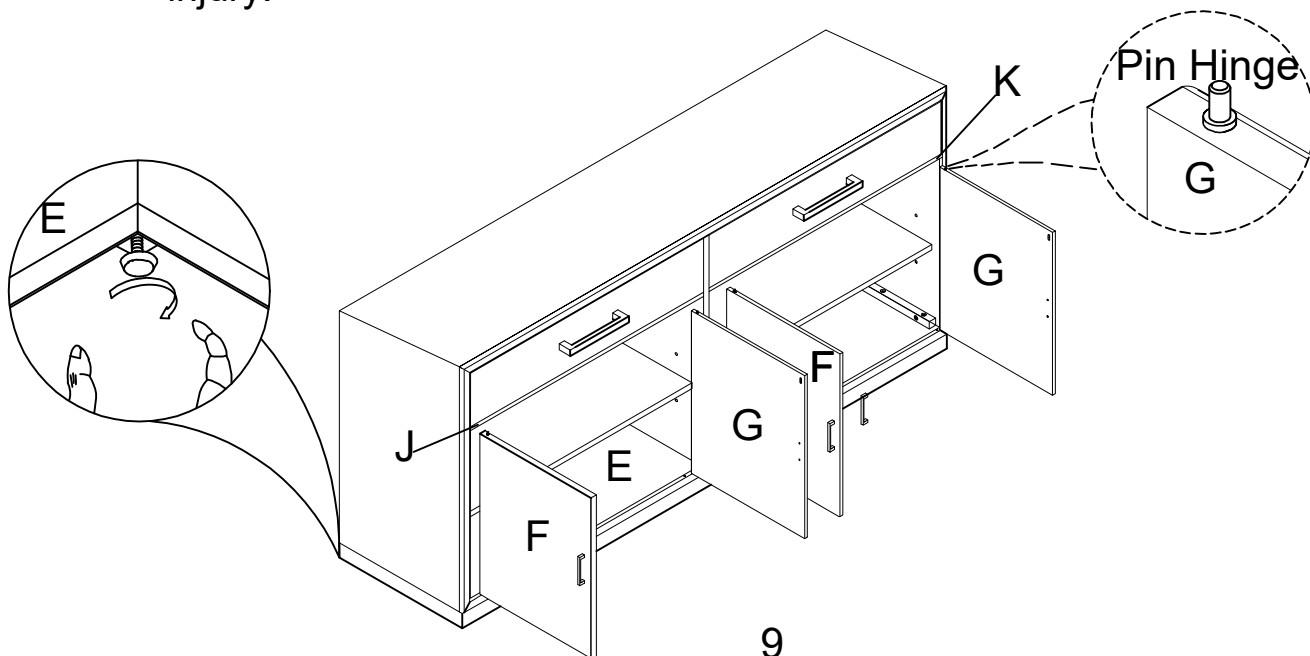
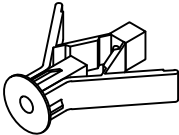



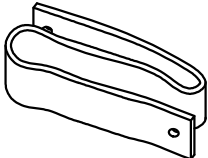
Step 11. Attach doors (parts F & G) by placing bottom pin hinge (pre-installed in door) in the pre-drilled hole of bottom panel (part E). Then depress the top spring-loaded pin hinge so it can be placed in the pre-drilled hole of cross rails (parts J & K).

NOTE: Be sure top and bottom pin hinges are fully extended to secure doors in place.

NOTE: It is important to adjust levelers once fully assembled and upright. Extend adjustable leveler until it's firmly in contact with the floor. If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.

Important: Safety strap kit (part #15) must be installed to prevent tipping, damage and/or injury.




#15	A	B	C	D	E
			 D8*3/4"	 D8*1-1/2"	
Safety Strap Kit 1 SET	Wall Anchor 1 PC	Washer 2 PCS	Short Screw 1 PC	Long Screw 1 PC	Safety Wall Strap 1 PC

SAFETY WALL STRAP INSTALLATION

Note: It is highly recommended to install this safety strap kit to prevent tipping, damage and/or injury.

1. Insert short screw (C) through washer (B) and safety wall strap (E) and attach to top back panel (part H) using phillips head screwdriver.
2. Drill a 11/32" hole where you want to secure the unit. The drilled hole will be at the same height as the hole in top back panel (part H) where the safety wall strap (E) is attached. Tap wall anchor (A) into the hole.
3. Insert long screw (D) through washer (B) and safety wall strap (E) into wall anchor (A) using phillips head screwdriver.

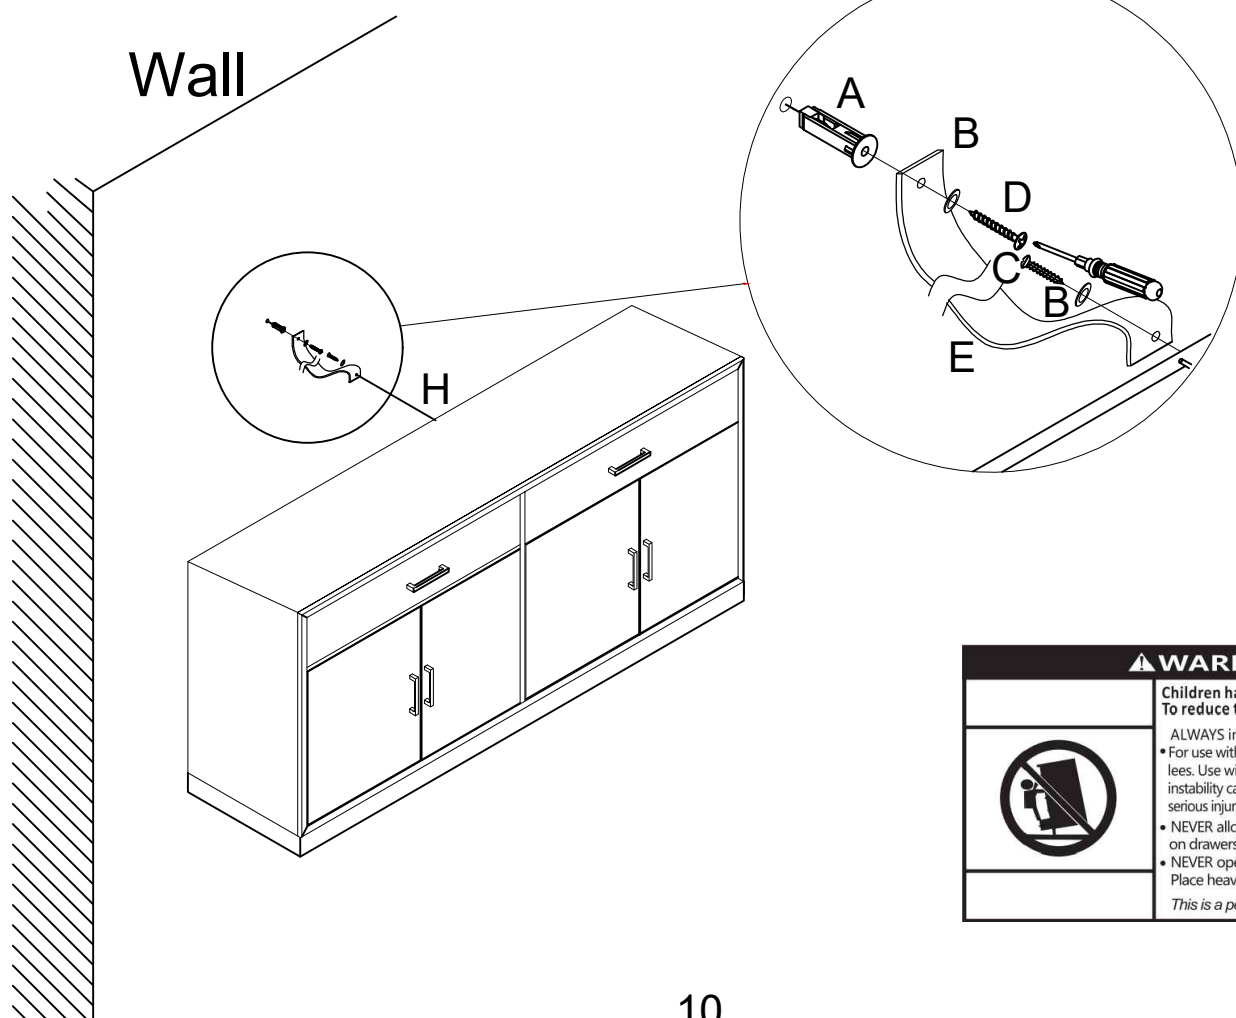Note: This item is not intended for clothing storage use.



⚠ WARNING	
	<p>Children have died from furniture tipover. To reduce the risk of furniture tipover:</p> <p>ALWAYS install tipover restraint provided.</p> <ul style="list-style-type: none"> • For use with televisions weighing 50lbs(23kg) or less. Use with heavier televisions may result in instability causing tip-over resulting in death or serious injury. • NEVER allow children to stand, climb or hang on drawers, doors, or shelves. • NEVER open more than one drawer at a time. Place heaviest items in the lowest drawers. <p><i>This is a permanent label. Do not remove!</i></p>