


TANNER DINING TABLE ASSEMBLY INSTRUCTIONS



PARTS PACKING CONFIGURATIONS

A. TOP

1 PC


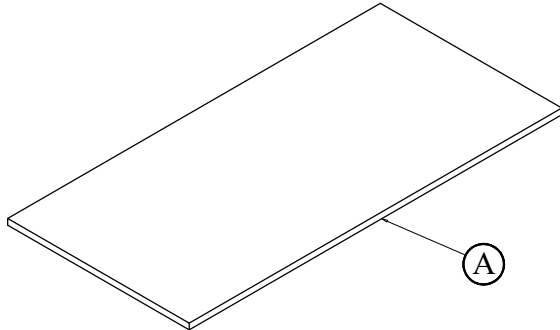


B. OUTER LEG


2 PCS

C. INNER LEG

2 PCS

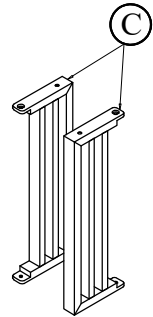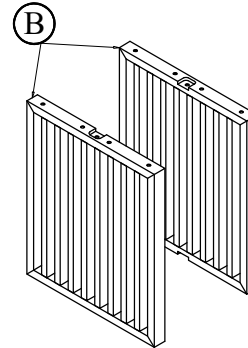



FULLY ASSEMBLED

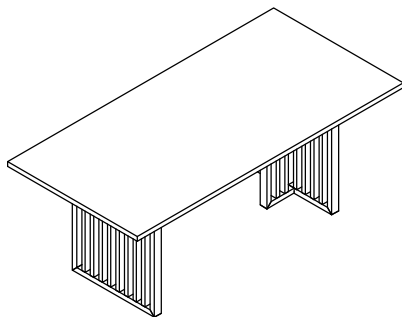


HARDWARE KIT PACKED IN BOX

NO.	DESCRIPTION	IMAGE	QTY
1	ALLEN BOLT (5/16"x20mm) and FLAT WASHER (5/16")		4 SETS
2	ALLEN BOLT (5/16"x30mm) with SPRING WASHER (5/16") and FLAT WASHER (5/16")		26 SETS
3	ALLEN KEY		1 PC

  EXTRA HARDWARE MAY BE INCLUDED




STEP 1

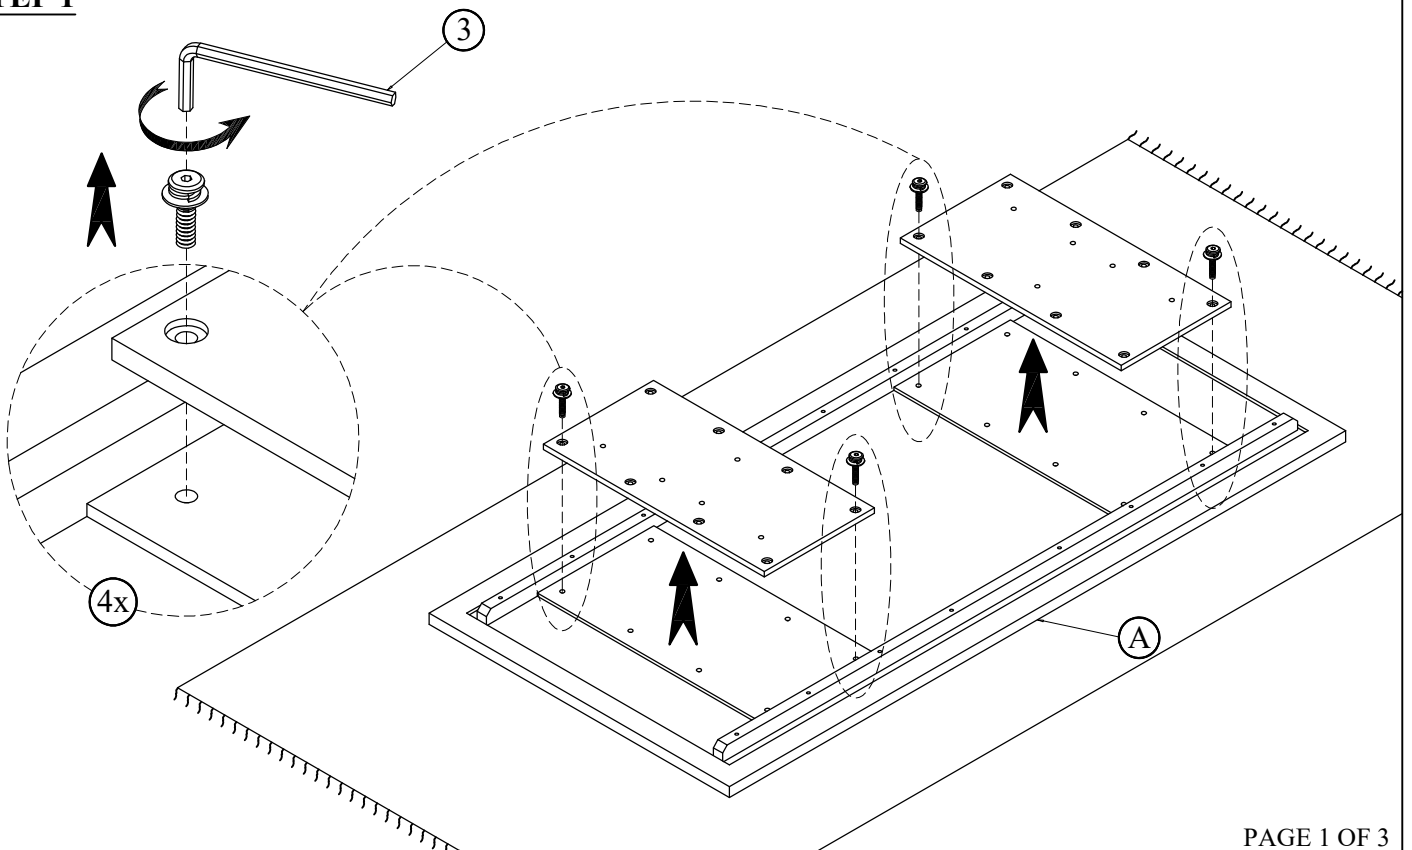

TANNER DINING TABLE ASSEMBLY INSTRUCTIONS

STEP 2

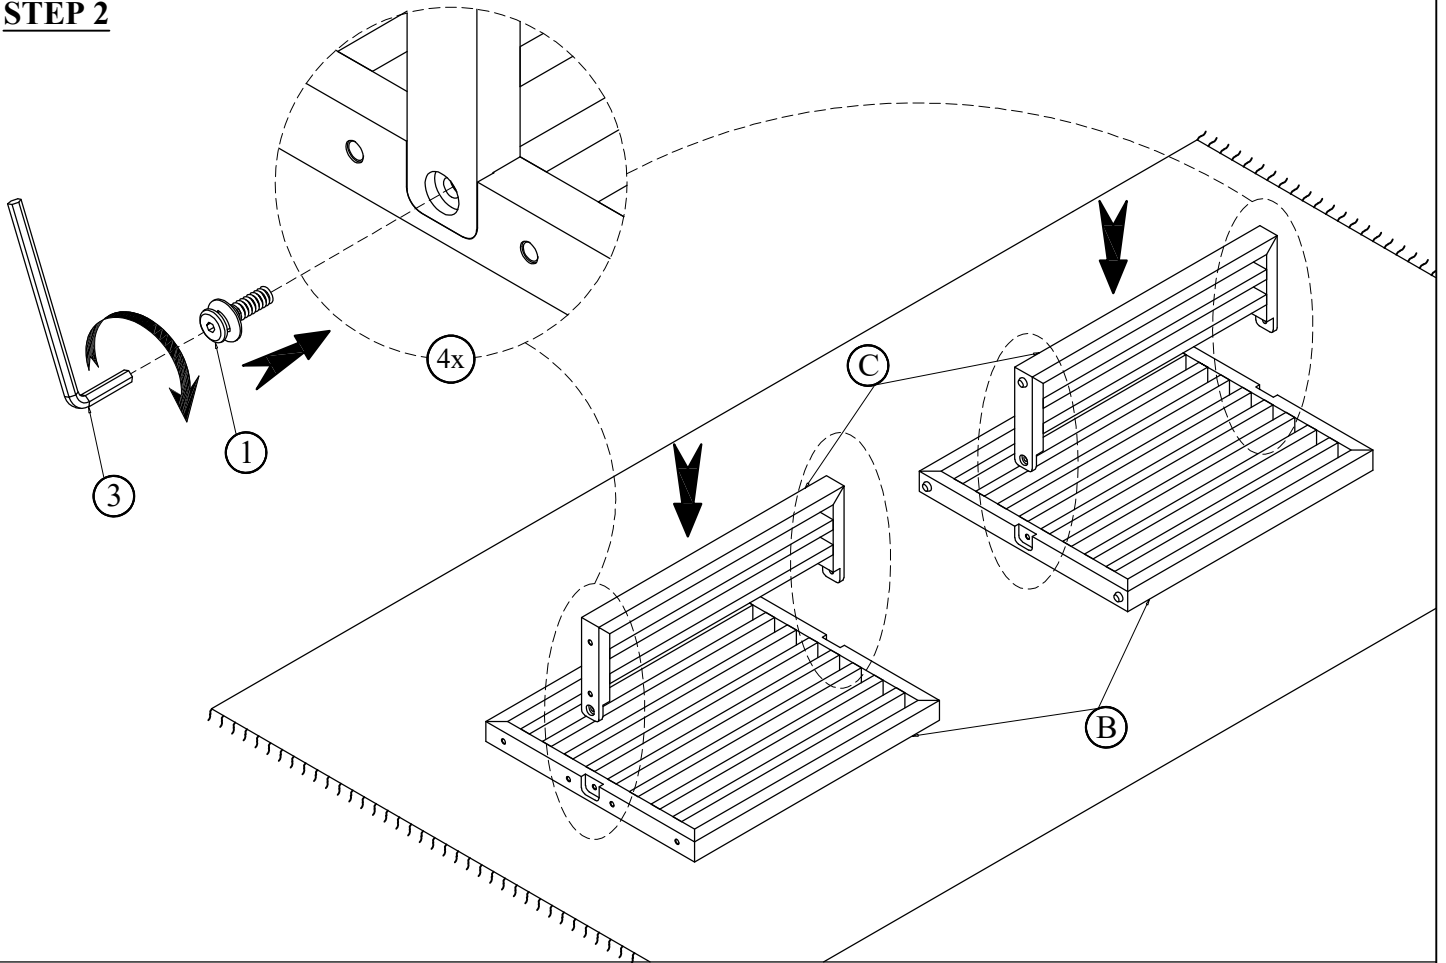

STEP 3

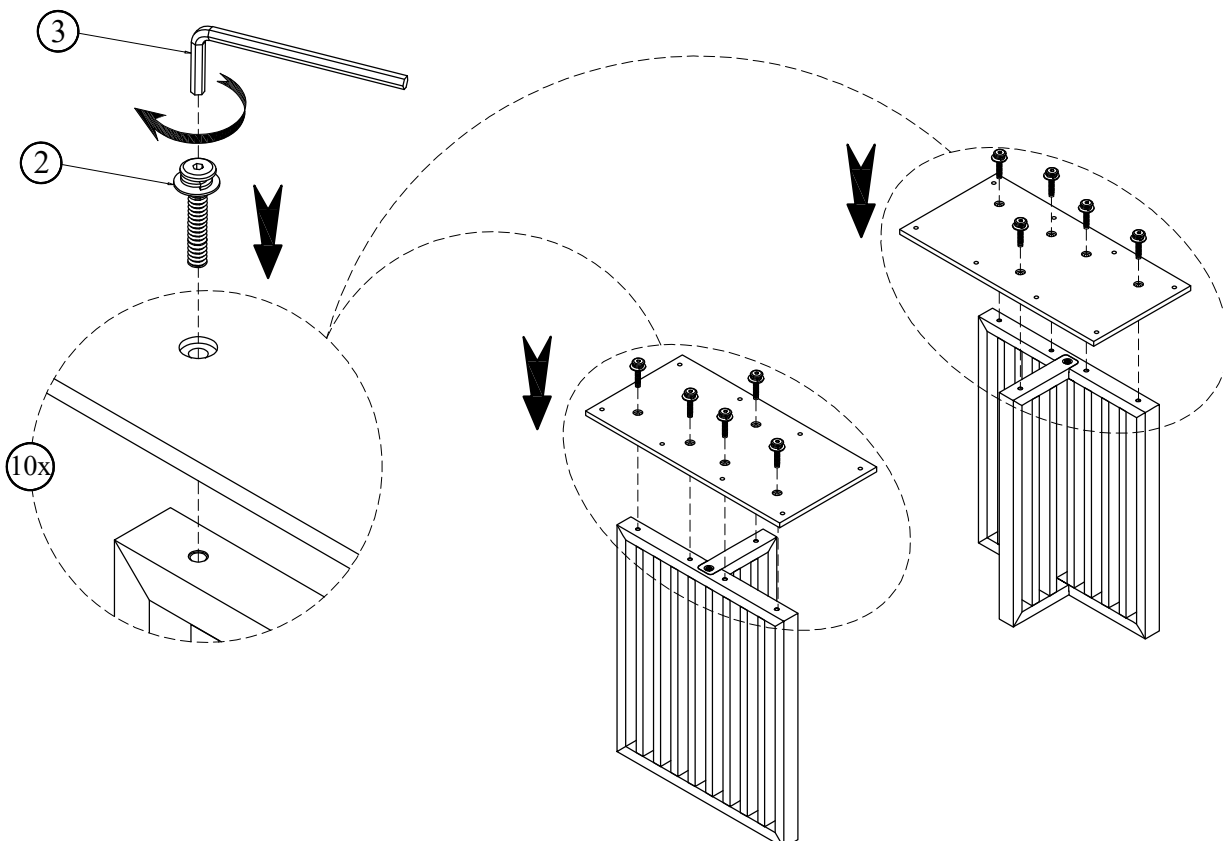


Diagram illustrating the assembly of the rear panel. The main view shows the rear panel being attached to the main unit using screws. A detailed inset shows a screw being inserted into a panel labeled '16x'.

STEP 5

The diagram illustrates the final step of assembling the table. It shows a rectangular table top being lowered onto the four legs. A large black arrow points from the legs to the table top. Two inset diagrams show the correct and incorrect way to place the table top on the floor. The top-left inset shows the table top being placed on the floor with a red 'X' indicating it is incorrect. The top-right inset shows the table top being placed on the floor with a red checkmark and an upward arrow indicating it is correct. A circular inset at the bottom right shows a close-up of the table top being rotated onto the legs, with a curved arrow indicating the direction of rotation.

PAGE 3 OF 3