
 
 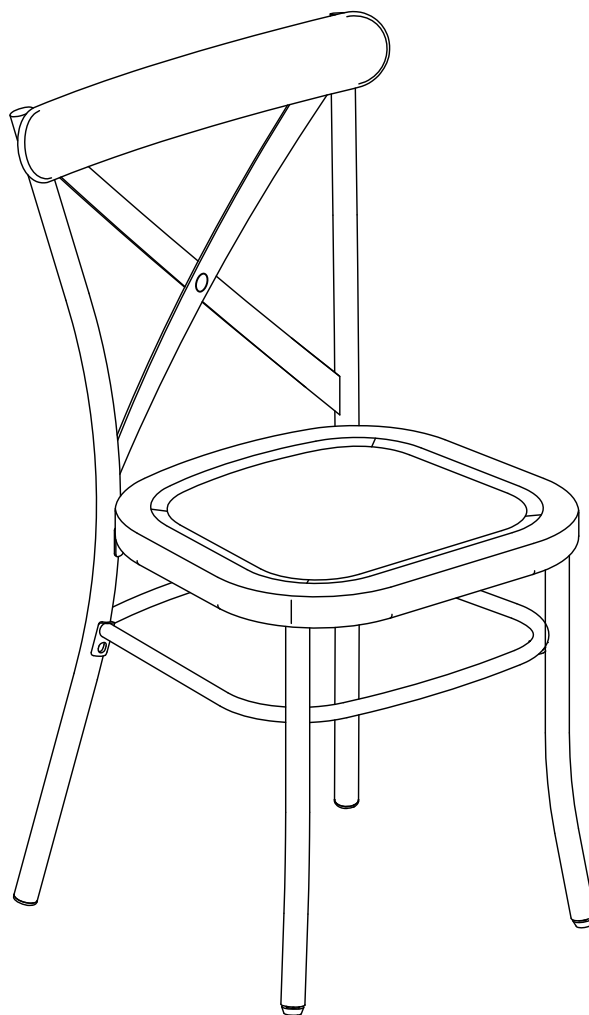





Dining Chair
CF500620



PART LIST


A	B	C	D
			
Back 1 PC	Seat 1 PC	Stretcher 1 PC	Front Leg 2 PCS

 HARDWARE LIST

#1	#2	#3	#4
			
1/4"x5/8"L	φ10.5xφ7.0x1.5	φ16xφ7.0x1.5	M4
Bolt 10 PCS (Extra 1)	Spring Washer 10 PCS (Extra 1)	Flat Washer 10 PCS (Extra 1)	Allen Wrench 1 PC

Step 1. Lay back (part A) down on a soft flat surface, such as carpet.
Attach seat (part B) to back (part A) using bolts (part #1),
spring washers (part #2), flat washers (part #3) and
allen wrench (part #4).


NOTE: Please do not fully tighten bolts until unit is fully assembled.

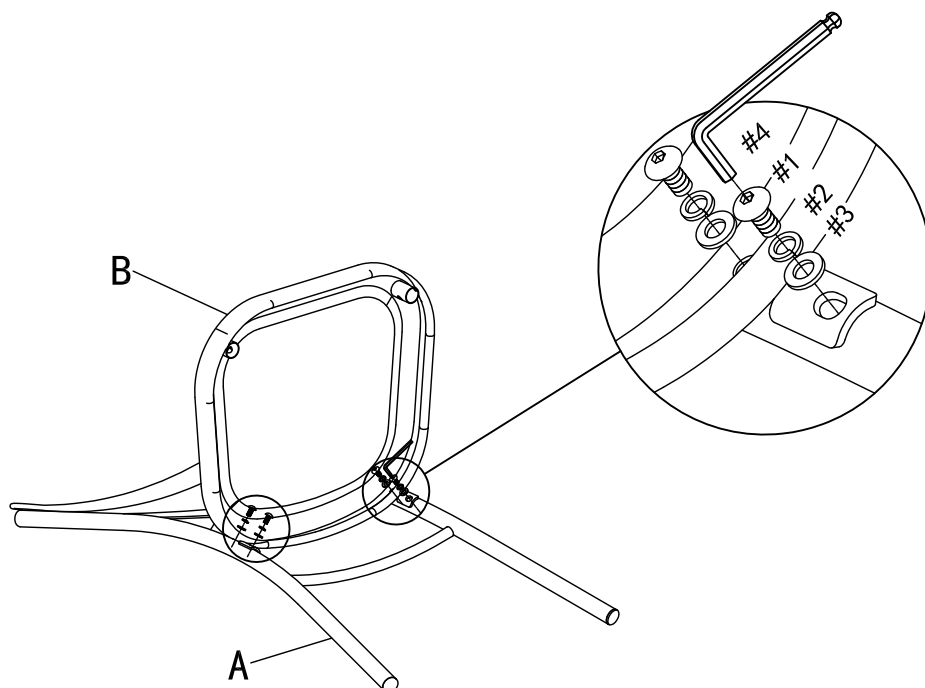

#1		x 4
#2		x 4
#3		x 4
#4		x 1

Step 2. Attach stretcher (part C) to back (part A) using bolts (part #1), spring
washers (part #2), flat washers (part #3) and allen wrench (part #4).


NOTE: Please do not fully tighten bolts until unit is fully assembled.

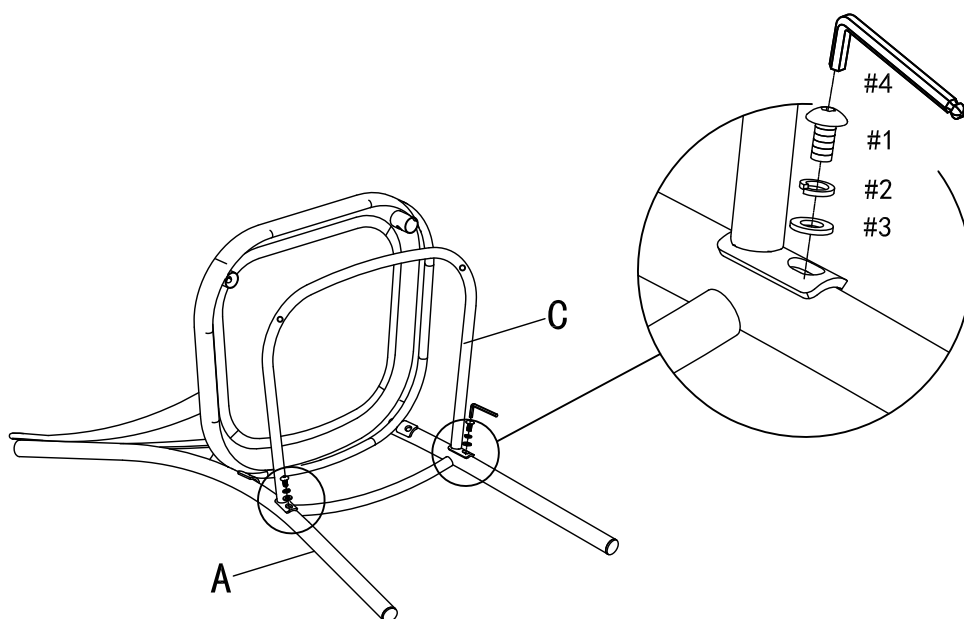

#1		x 2
#2		x 2
#3		x 2
#4		x 1

Step 3. Attach front legs (part D) to seat (part B) and stretcher (part C) using bolts (part #1), spring washers (part #2), flat washers (part #3) and allen wrench (part #4).

NOTE: Please fully tighten all bolts at this time.

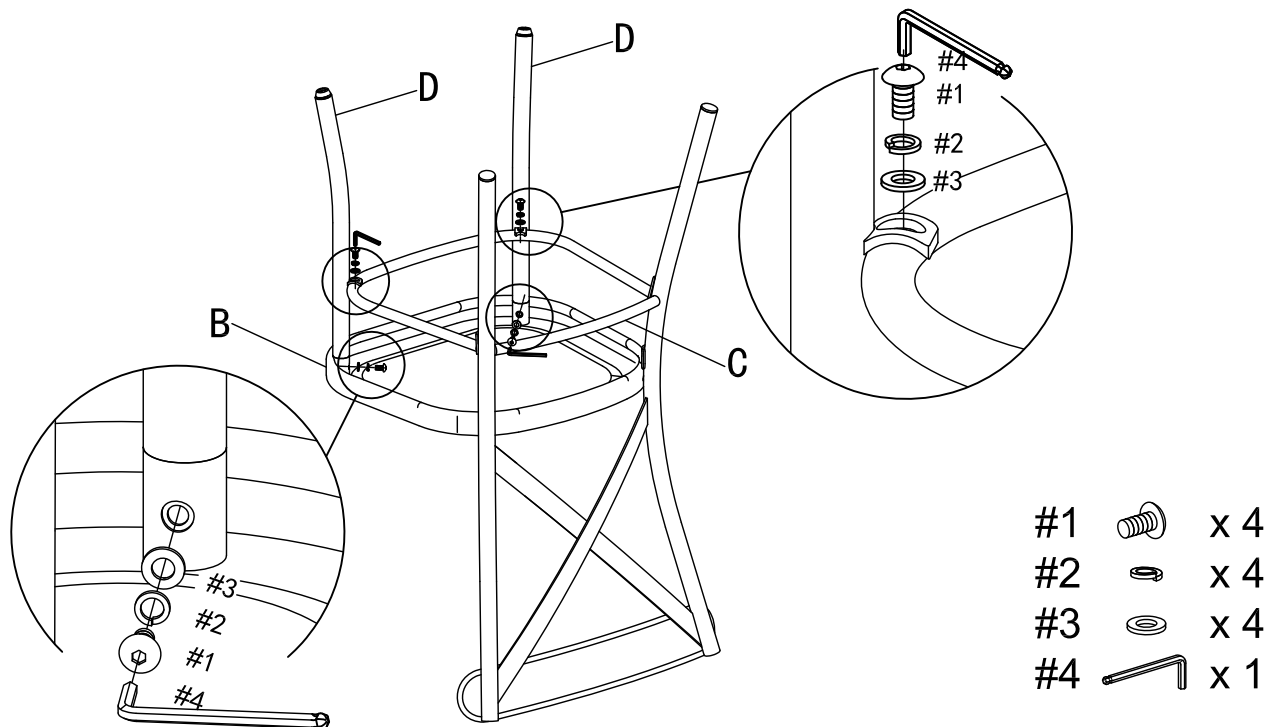

Step 4. Carefully turn unit upright. Repeat steps 1-3 to assemble remaining chair.

