

ASSEMBLY INSTRUCTIONS

MODEL #

CM6833-CS

Questions?

GIVE US A CALL: 1-888-980-5122
MON – FRI 8:30AM – 5:30PM (PST)

TOOLS REQUIRED



 
Allen Wrench

(Included)



**Phillips
Screwdriver**

(Not Included)

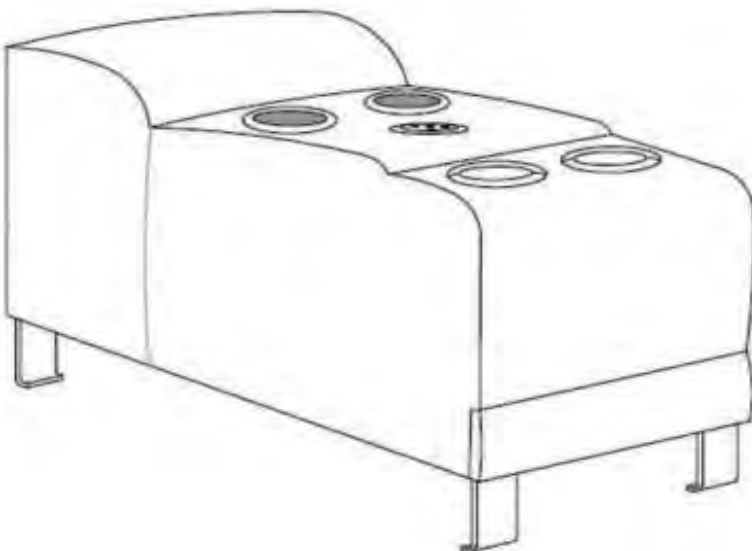

**2 - People
Recommended**

ASSEMBLY RATING



EASY —————> DIFFICULT

The Assembly Rating is a 5-point system showing the level of effort needed to assemble a specific product.



FOA Intro

Thank you for your purchase!

We hope you enjoy this new addition to your home for many years to come.

Our commitment to providing quality products does not simply end when you purchase our product. We fully stand behind our products from start to finish. Our customer service department is available Monday – Friday 8:30 AM – 5:30 PM Pacific and can help with assembly questions as well as, if necessary, replacing damaged or missing parts. To help expedite our service, please have these assembly instructions readily available, along with your order receipt.



Consumer Hotline
Toll-Free 1-888-980-5122



WEBSITE
www.foagroup.com



Monday to Friday
8:30AM- 5:30PM (PST)



E-MAIL
cs.ec@foagroup.com



foagroup



FurnitureOfAmerica



CHECK BEFORE STARTING

☐

Are you missing anything?

Double-check all parts, hardware and accessories listed on Page 6 are accounted for.

☐

Check out our Quick Tips!

We recommend reviewing the pre-assembly handouts. Even experts need a refresher now and then!

☐

Should we send any replacements?

Are there any irregularities or flaws in the parts? We can send replacements!

 
☐

Prep Time!

Please review the assembly instructions and all diagrams prior to assembling. Arrange parts as recommended on Page 7 and group identical hardware together to make assembling easier.



PRE ASSEMBLY INTRODUCTION

We understand building ready-to-assemble furniture can be a challenging experience for some. To help avoid confusion, we have provided some helpful tips that may speed up the process.

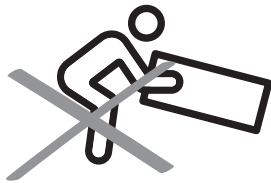

Teamwork

  ALWAYS have at least two people to help with transporting and assembling the product to avoid potential injury and/or damage.

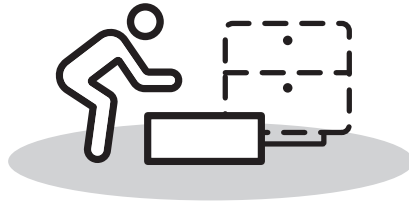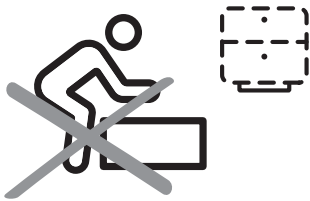


Suitable Location

Assembling near the area of the intended location is highly recommended.




Sufficient Space

 Make sure you have enough space to move around during the assembly.

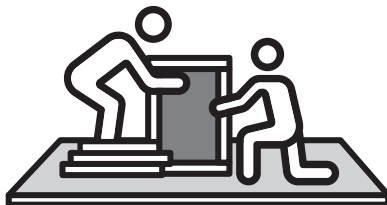

Avoid Scratches

 Use cardboard, blankets or a carpeted area while assembling furniture to prevent scratches.

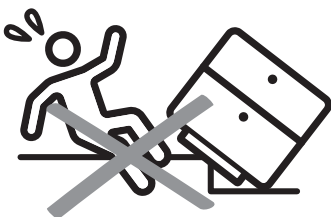

Flat Surface

Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

 
ASSEMBLY AND CARE ADVICE



**FAILURE TO FOLLOW THE GUIDELINES BELOW MAY
RESULT IN INJURY AND/OR PROPERTY DAMAGE.**



Position each part correctly
and insert screws or bolts into
their respective holes.

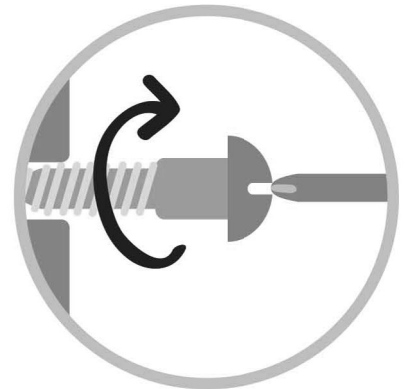

Turn clockwise to tighten and
only tighten when step is
completed or when instructed
to do so.



Use the appropriate hand tools
or power tools for assembly.
Select steps, such as tightening
screws and/or bolts, may require
hand tools to avoid causing
damage during assembly.




Save the instructions and store
any supplied tools for later
maintenance.

After two weeks, check and
tighten any loose hardware and
repeat again every six months
thereafter.


IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.

CONSOLE

 CM6833-CS

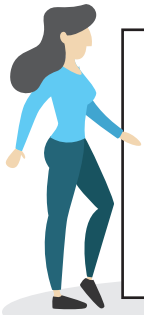

 - Please keep instructions for future reference.
- Check the quantity and irregularity of parts and hardware before you start.

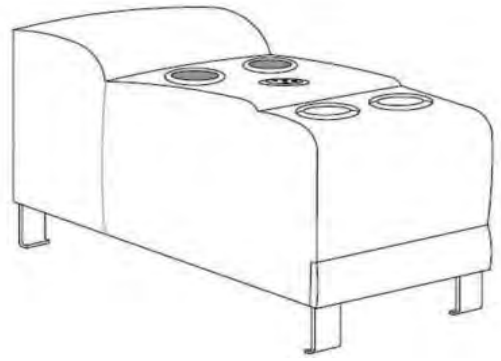

PARTS

#1 4PCS



Leg

#2 1PC



Console

#3 1PC



Power Adapter

HARDWARE

#A 4PCS



Bolt 5/16"X1"

#B 4PCS



Flat Washer

#C 1PC



Allen Wrench

#D 16PCS



Wood Screw

ASSEMBLY INSTRUCTIONS

1

PART (#1) X 4pcs

 
PART (#2) X 1pc

HARDWARE (#A) X 4pcs

HARDWARE (#B) X 4pcs

HARDWARE (#C) X 1pc

HARDWARE (#D) X 16pcs

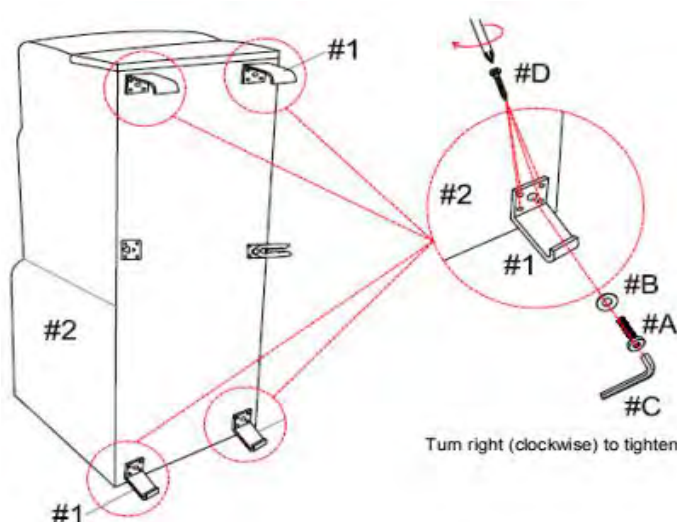


- I. Align the 4 legs (#1) with the pre-drilled holes on the bottom corners of the console (#2).
- II. Prepare 4 bolt assemblies by inserting the flat washer (#B) onto the bolt (#A).
- III. Insert the bolt assemblies through the 4 legs (#1) using the Allen wrench (#C) to lock them with the console (#2).
- IV. Insert 4 wood screws (#D) through each leg (#1) using the Phillips screwdriver to lock them with the console (#2).

2

PART (#2) X 1pc

PART (#3) X 1pc

 
- I. Make sure the console is rested on a flat surface and does not feel loose or wobbly. If it does, double check that the bolts/screws are secured and properly tightened.
- II. To supply power to the unit, plug the metal prongs of the power adapter (#3) into the AC wall outlet and the barrel pin connector to the connection port of the console (#2).

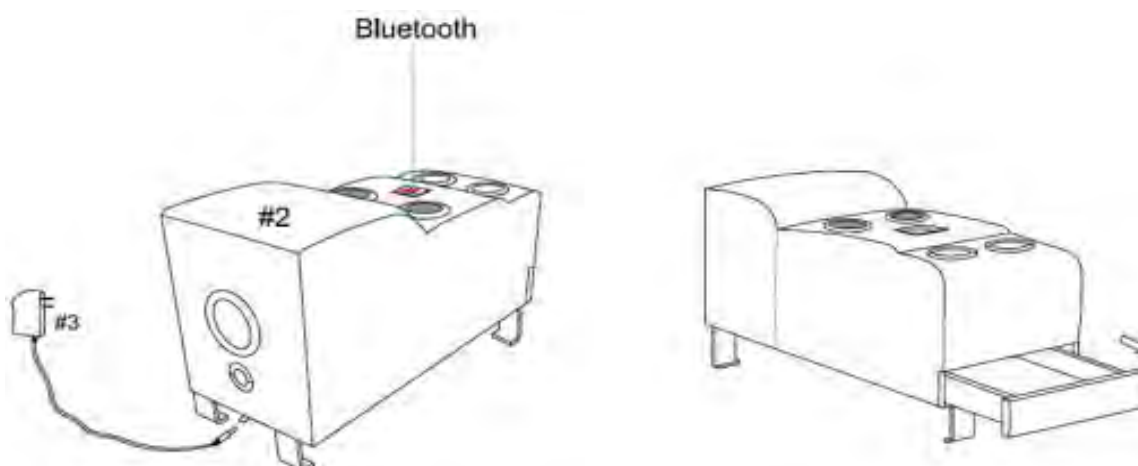

ASSEMBLY INSTRUCTIONS

3

 Connect the console to the sofa and chaise together as shown below by locking the male brackets with the female brackets.

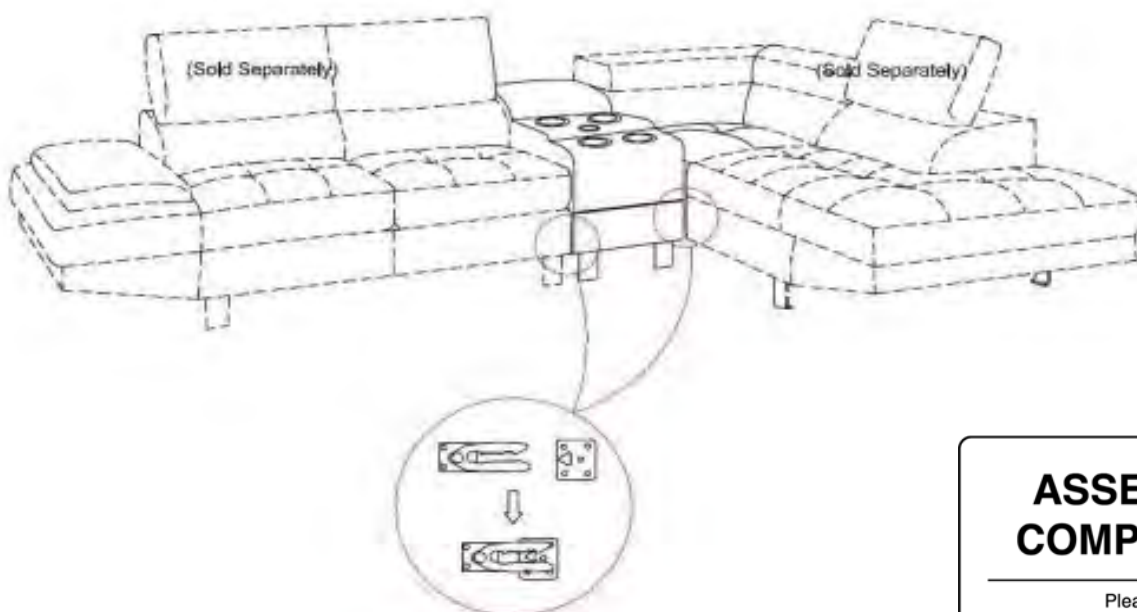

ASSEMBLY COMPLETED



Please ensure the furniture rests on an even and flat surface. If the product wobbles or feels loose, double-check all bolts and/or screws are properly tightened and secured.



Keep this handy!

Please retain this instruction manual and any order-related information for future reference.



Lift, don't drag!

To avoid damage to product please always LIFT the product when transporting or adjusting the placement.