## PLANNING & DESIGN: FAMILY-SIZE DRYER – LINE SERIES™

## T794CFI & T754C Condenser Dryers (Ventless)


Unit Dimensions		
	US	METRIC
HEIGHT:	33 ½"– 34 ½"	851 – 876 mm
WIDTH:	23 ½″	597 mm
DEPTH:	23 <sup>7</sup> / <sub>8</sub> "	606 mm
DEPTH W/DOOR OPEN:	46 1/8"	1172 mm
WEIGHT:	104 lbs	47 kg

<sup>\*</sup>Includes control knob.

## Technical Data

Supply voltage	Single-phase 220 V, 60 Hz
Max Wattage	2800 W

**NOTE**: When on a separate outlet, use 220 V, 20 Amp single-phase circuit. When an ASKO washer is connected, use 220 V, 30 Amp single-phase circuit.

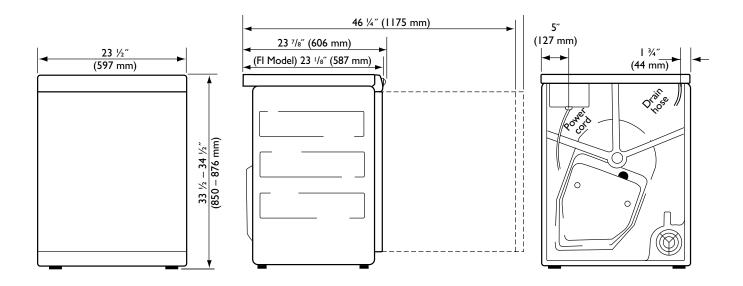

The door hinges on ASKO dryers are shipped left-hinged, but they are reversible. See the ASKO Dryer Use and Care Guide for more information.

When placing the dryer next to a wall or cabinet, be sure to leave  $\frac{1}{4}$ " (6 mm) of space between the dryer and the wall or cabinet.

**NOTE**: Condenser dryers require adequate ventilation for proper operation.

**NOTE**: A louvered door is recommended for closet installations.

See page 35-36 for stacked washer/dryer dimensions.

See pages 37-40 for cutout dimensions for closet and under-cabinet installations.

## **Condensation Drain Requirements**

You must install the dryer so the condensed water will continuously flow into a drain or sink. To do this, follow the instructions below:

- I. Disconnect the short hose (I) from the blue connection. (It's okay to let the hose hang down.)
- 2. Connect the rubber hose supplied with the dryer to the blue nipple (2).
- 3. Run the hose to a drain or sink, as illustrated.

**NOTE**: Power cord not supplied with unit.

**NOTE**: The drain hose must not be more than 40" (1016 mm) above the floor or the bottom of the unit.

