 


Assembly Instructions

CM4170C

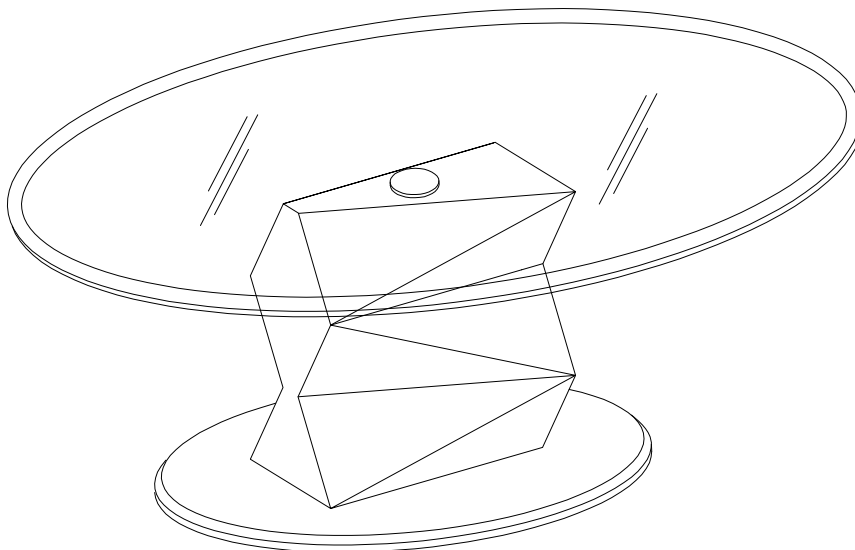

ASSEMBLY RATING

The Assembly Rating is a 5-point system that shows the degree of effort needed in assembling a specific product (with 1 being easy and 5 being difficult). For some products, two persons are recommended.

 
EASY




DIFFICULT

Tools Required For Assembly:



Allen Wrench



Wrench

 

Pincers

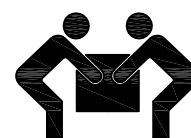  


2 PERSONS RECOMMENDED

ASSEMBLY & CARE ADVICE

FOR YOUR FURNITURE TO LAST, CORRECT ASSEMBLY AND PROPER MAINTENANCE ARE NECESSARY. PLEASE FOLLOW THE INFORMATION PROVIDED BELOW TO FULLY ENJOY YOUR FURNITURE.

 BASIC ASSEMBLY TECHNIQUES

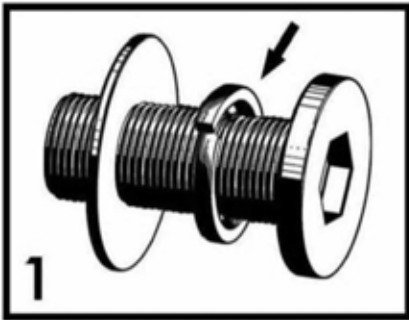


When lock or spring washer is used in an assembly, please make sure the lock or spring washer is placed between the larger flat washer and the head of the screw or bolt.




Position each part correctly and insert screws or bolts into their respective holes by hand tighten or using the proper hand tool. Only tighten when step is completed or when instructed to do so.



 Use cardboard or carpet area when assembling furniture to prevent scratches. Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

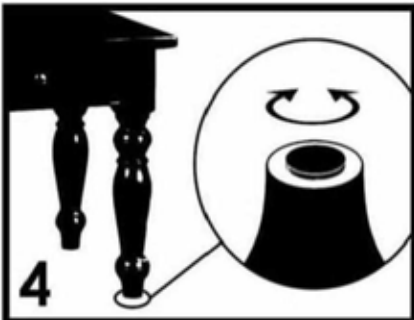

 Some furniture comes with height adjustment knobs underneath each leg. To lower or to raise each leg, you need to turn clockwise or counterclockwise, respectively.

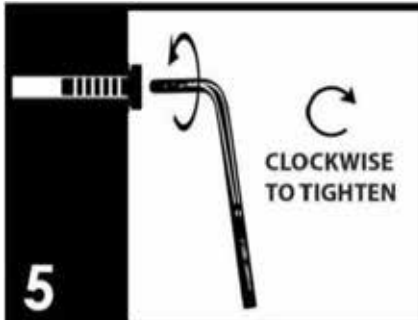


Make sure all parts are properly aligned, then use the appropriate hand tool to completely tighten the bolts or screws. Do not use power tools and do not overtighten.



Save the instructions and store the Allen wrench or any supplied tool for later maintenance. After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

 IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.

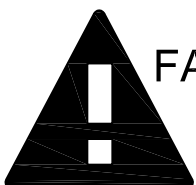

FAILURE TO FOLLOW THE GUIDELINES ABOVE MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.



Before you begin, please read Page 2 of "Assembly and Care Advice".

And remember, do not tighten until each step is completed or instructed.

Parts List



#1 x 1pc
Glass top



#2 x 1pc
Base Support



#3 x 1pc
Base

Hardware List



#A x 3pcs
Bolt 5/16"X1-3/8"



#B x 1pc
Hex Nut



#C x 1pc
Stud bolt M10x435mm



#D x 1pc
Flat Washer Ø20



#E x 2pcs
Bolt 1/4"X3/4"



#F x 1pc
Allen Wrench M5



 
#G x 1pc
Wrench socket



#1


#C x 1pc
#E x 2pcs

- I. Carefully place the glass top (#1) onto a protected surface.
- II. Insert two bolts (#E) into the two pre-drilled holes along the center. Turn right to secure.
- III. Insert the threaded end of the stud bolt (#C) into the pre-drilled hole on the glass top (#1). Turn right to secure.

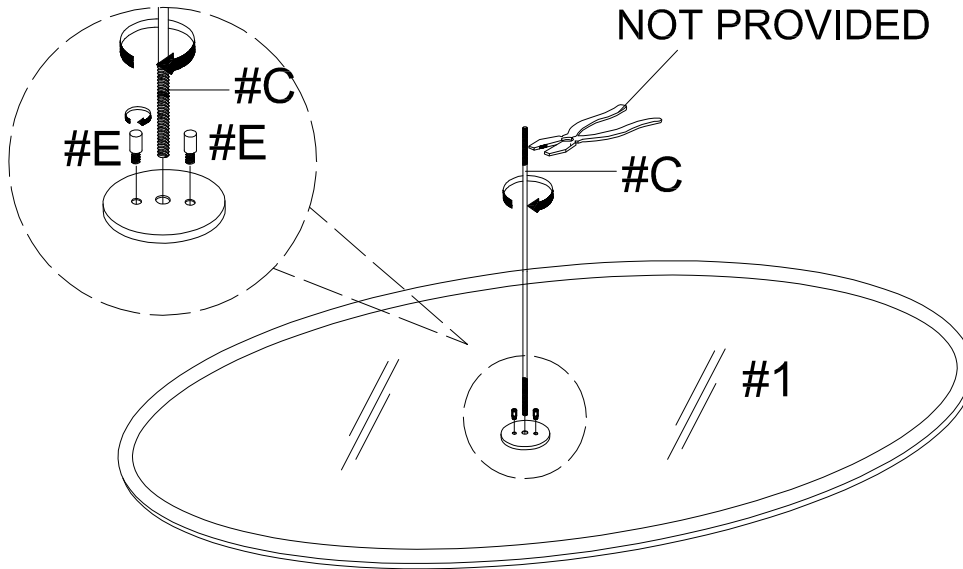

#2

 
Apply the base support (#2) onto the other end of the stud bolt (#C) on the glass top.

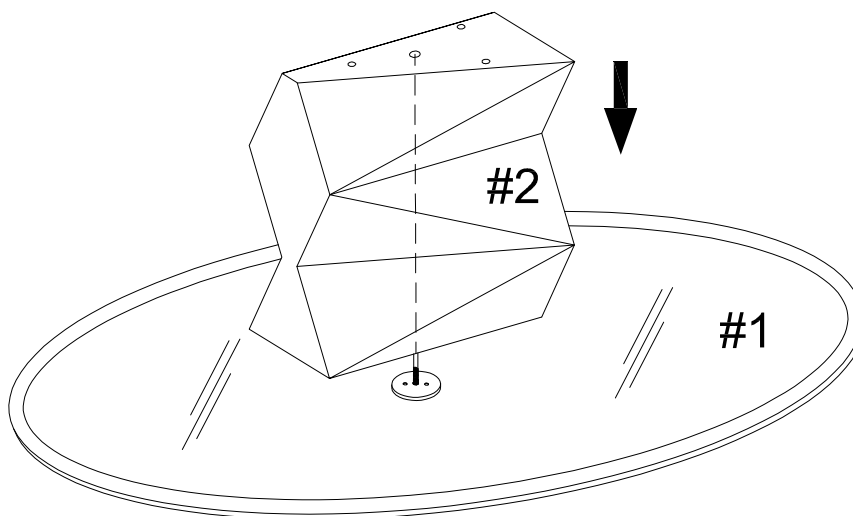




#A x 3pcs
#B x 1pc
#D x 1pc

 - I. Carefully place the base (#3) onto the other end of the base support (#2).
- II. Insert three bolts (#A) into the three outer center pre-drilled holes on the base. Secure using the Allen wrench (#F).
- III. Insert a flat washer (#D) then a hex nut (#B) onto the threaded end in the center pre-drilled hole, in that order. Secure using the wrench socket (#G).

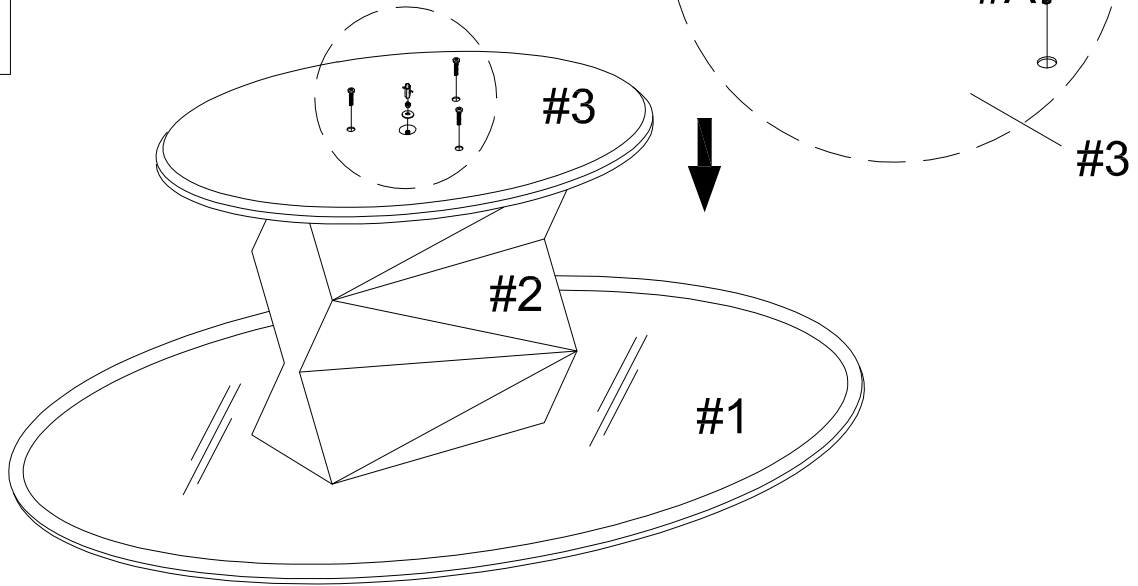

 Carefully turn the completed table upright. Make sure the table is rested on a flat surface and does not feel loose or wobbly. If it does, double check that the bolts are secured and properly tightened.

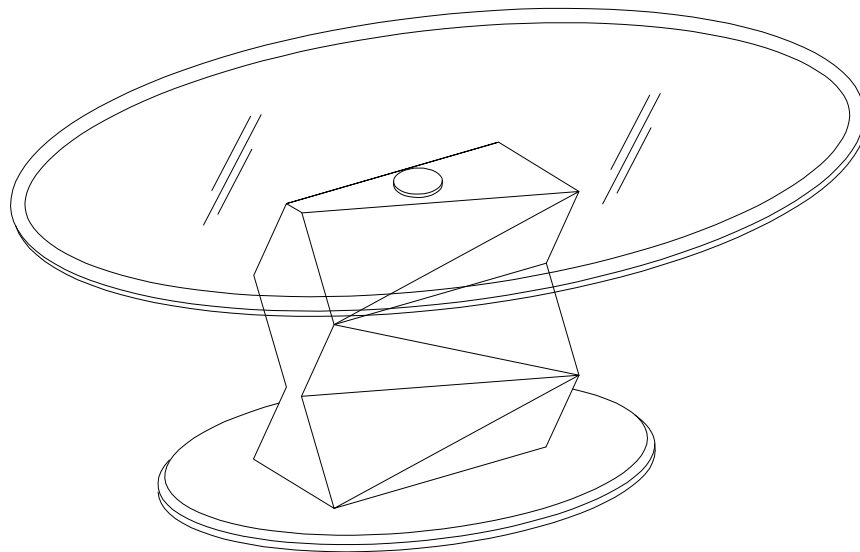

ASSEMBLY IS COMPLETED